


SERVICE PARTS MANUAL

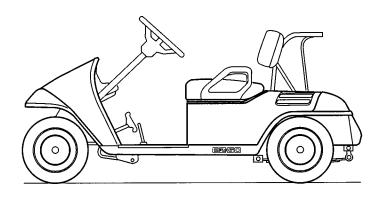

ELECTRIC AND GASOLINE METAL VEHICLES

MANUAL: 28081-G01

MODEL YEAR: 1994/1995 ISSUED: 01/04/94

REVISED: 07/12/95

SERVICE PARTS MANUAL

MEDALIST ELECTRIC AND GASOLINE VEHICLES

MODEL YEARS: 94/95

VEHICLES

MEDALIST FLEET GASOLINE

MEDALIST FLEET ELECTRIC

MEDALIST FLEET DCS ELECTRIC

MEDALIST FLEET FREEDOM GASOLINE

MEDALIST FREEDOM HP GASOLINE

MEDALIST FREEDOM ELECTRIC

MEDALIST FREEDOM DCS ELECTRIC

MEDALIST 4 CADDY GASOLINE

MEDALIST 4 CADDY ELECTRIC

CUSTOMER SERVICE DEPARTMENT PHONE 1-800-227-7029 FAX 1-800-752-6175 E-Z-GO DIVISION OF TEXTRON, INC., P.O.BOX 388, AUGUSTA, GEORGIA 30903-0388, 1-800-241-5855

Service Parts Manual

LIMITED WARRANTY

WARRANTY

TO OBTAIN A COPY OF THE LIMITED WARRANTY THAT IS APPLICABLE TO YOUR VEHICLE, CALL OR WRITE YOUR LOCAL DISTRIBUTOR, BRANCH OR E-Z-GO WARRANTY DEPARTMENT.

THE USE OF NON E-Z-GO PARTS MAY VOID YOUR WARRANTY.

OVERFILLING OF BATTERIES MAY VOID YOUR WARRANTY.

TAMPERING WITH OR ADJUSTING OF GOVERNOR TO PERMIT THE VEHICLE TO OPERATE AT ABOVE FACTORY SETTINGS (12 - 15 MPH) WILL VOID YOUR VEHICLE WARRANTY.



ENGINE EXHAUST FROM THIS PRODUCT CONTAINS CHEMICALS KNOWN, IN CERTAIN QUANTITIES, TO CAUSE CANCER, BIRTH DEFECTS, OR OTHER REPRODUCTIVE HARM.

SECTIONS		***************************************	Page No.
How to use the E-Z-GO Service Ma	nual	•••••	vii
California Emisssions Warranty		•••••	Back Cover
Fuji Engine Warranty			Back Cover
Illustrated Parts Breakdov	wn:		
	ELECTRIC	GASOLINE	ELECTRIC/GASOLINE
	VEHICLE	VEHICLE	VEHICLE
Illustration	Page No.	Page No.	Page No.
ACCELERATOR LINKAGE	A-1	B-1	•
 Accelerator Pedal 			
 Accelerator Rod 			
BATTERY CHARGER, TC® III, 36 V	VDCC-1		
BATTERY CHARGER, POWERWIS	SE™C-7		
BATTERY CHARGER, POWERWIS	SE™ +C-13		
BODY AND ASSOCIATED PARTS.			D-1
 Bagwell 			
 Battery Racks 			
 Center Console 			
 Floorboard 			
 Hip Restraint 			
BRAKE LINKAGE			E-1
CARBURETOR		F-1	
CLUTCHES		G-1	
 Drive Belt 			
 Drive Clutch 			
 Driven Clutch 			
DIRECTION SELECTOR	I-1		
DIRECTION SELECTOR		J-1	
ELECTRICAL SYSTEM	K-1	L-1	
ENGINE AND MUFFLER		M-1	
Engine			
Muffler			
 Oil Filter 			
 Spark Plugs 			
ENGINE AND STARTER MOUNTIN	IG	N-1	
 Belt, Starter/Generator 			
 Adjuster, Starter/Generato 	r		
 Engine Guard 			
Isolator			

Illustrated Parts Breakdown:

	ELECTRIC	GASOLINE	ELECTRIC/GASOLINE
	VEHICLE	VEHICLE	VEHICLE
Illustration	Page No.	Page No.	Page No.
FILTERED AIR SYSTEM		O-1	•
Air Cleaner			
FRONT SUSPENSION			Q-1
 Front Axle Assembly 			
 Leaf Springs and Idler Assembly 			
 Hub and Spindle Assemblies 			
 Tie Rod Assembly 			
FUEL SYSTEM		R-1	
• Fuel Gauge			
Fuel Pump			
 Fuel Tank Assembly 			
HORN AND LIGHTING	••••••		S-1
• Headlamp			
• Horn			
 Rear Lamp Assembly 			
 State of Charge Meter 			
 Turn Signal Assembly 			
 Wire Harness 			
MOTOR	T-1		
REAR AXLE	U-1	V-1	
REAR SUSPENSION	W-1	X-1	
SEATING AND BAGRACK	• • • • • • • • • • • • • • • • • • • •		Y-1
SOLID STATE SPEED CONTROL	Z-1		
 Control Rod 			
 Mounting Assembly 			•
Solenoid			
 Speed Control Cover 			
SOLID STATE SPEED CONTROL			
(DCS MODEL ONLY)	Z-5		
 Control Rod 			
 Mounting Assembly 			
 Solenoid 			
 Speed Control Cover 			
STARTER/GENERATOR		AA-1	
 Brush Holder Assembly 			
Pulley			
 Terminal Assembly 			

Illustrated Parts Breakdown: ELECTRIC GASOLINE **ELECTRIC/GASOLINE** VEHICLE VEHICLE **VEHICLE** Illustration Page No. Page No. Page No. STEERING......BB-1 Rack and Rod Assembly Steering Wheel Tie Rod Assembly WHEEL BRAKECC-1 • Brake Assembly Brake Drum Assembly Brake Shoe Set WHEELS AND TIRES......DD-1 Tread Styles • Tire and Wheel Assembly Valve Stem Wheel Rim SPECIAL TOOLSPage No. Special Tools Listing......Appendix - A ACCESSORIESPage No. Accessory Listing Appendix - B ACCESSORIESPage No. Divot Repair Kit (Sand Bottle) Side Basket Center Basket Sun Top **Wheel Covers** Windshield Mud Flaps

Ashtray

Wheel Covers

Rear View Mirror

Four Bag Attachment (Medalist only)

Hour Meter

- 4-Caddy Conversion
- 4-Caddy Conversion Windshield
- 4-Caddy Conversion Sun Top
- 4-Caddy Convertible Carrier Kit

WIRING DIAGRAMS AND SCHEMATICS	Page No.
Electric and Gasoline Vehicles	Appendix - D

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

This manual is divided into several sections:

- GENERAL INFORMATION
- ILLUSTRATED PARTS BREAKDOWN FOR MEDALIST ELECTRIC AND GASOLINE POWERED GOLF CARS
- APPENDIX A

The first section, GENERAL INFORMATION, contains the following information:

- WARRANTY INFORMATION
- GENERAL INDEX
- HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

The second section, ILLUSTRATED PARTS BREAKDOWN (IPB) FOR THE MEDALIST ELECTRIC POWERED AND GASOLINE GOLF CARS, contains illustrations and parts lists for all systems of your vehicle.

The third section, SERVICE ACCESSORIES AND SPECIAL TOOLS, contains a listing of E-Z-GO service accessories and special tools and that may be purchased from the company to aid in the servicing of the vehicle.

USE OF THE MANUAL

To use this manual, consult the GENERAL INDEX to locate the information or illustration required.


E-Z-GO manuals are revised annually to coincide with the model year change. The manual will cover all models and model years stated on the cover page. Sections that remain unchanged have the last date they were revised in the lower inside margin. New components that are interchangeable with the previous year are automatically revised and the issue date is changed.

Introduction of some revisions varies due to supply of components; therefore, it is possible that various combinations of components may be found that are not directly reflected by each illustration. Consult the illustration that best suits your situation and then contact the Service Parts Department. It is important that the serial number of your vehicle and its model number be supplied to Service Parts when ordering any replacement components.

Locate the serial number plate (see Body and Associated Parts located in the IPB section of this manual for its location) and note the complete number shown on the plate.

All relevant systems are listed in the General Index and has an alphabetical prefix. The illustration always appears first and is followed by its related parts list. Additional illustrations and parts lists with the same prefix indicate significant changes that have taken place since the last issue.

HOW TO USE THE E-Z-GO SERVICE PARTS MANUAL

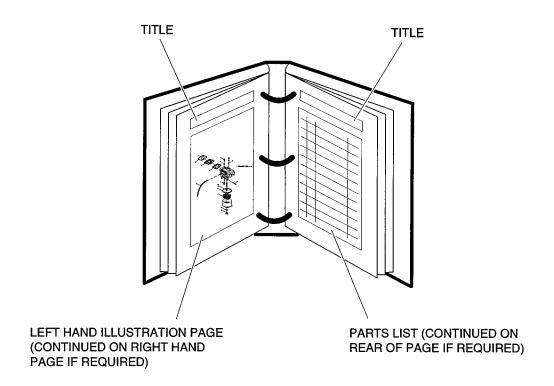

1. WHEN THE PART NUMBER IS NOT KNOWN

- Determine the function and application of the part required. Turn to the General Index and select the most appropriate title.
- Turn to the page number indicated and locate the desired part on the illustration.
- From the illustration, obtain the item number assigned to the desired part. Refer to the accompanying description for specific information regarding the part.

2. IF YOU KNOW THE PART NUMBER

• Locate the part number or description in the appropriate column on the parts list page.


NOTE: It is suggested that you confirm that the part selected is correct by verifying it with the pictorial representation on the illustrated page.


Should an asterisk (*) appear in the part number column on the parts list page, read upwards until a part number is found. The part number is the lowest assembly sold by E-Z-GO and the asterisk (*) indicates that the part depicted is not available for sale by E-Z-GO.

NOTE: Descriptions are indented under the assembly that they are used on. That assembly is, in turn listed under the assembly that it is used on. This process is repeated until the highest final assembly is reached.

To facilitate the maintenance and repair of the vehicle, a Technician's Repair and Service Manual [28124-G01 (Electric vehicle) and 28125-G01 (Gasoline vehicle)] is available from the E-Z-GO Service Parts Department.

ILLUSTRATED PARTS BREAKDOWN

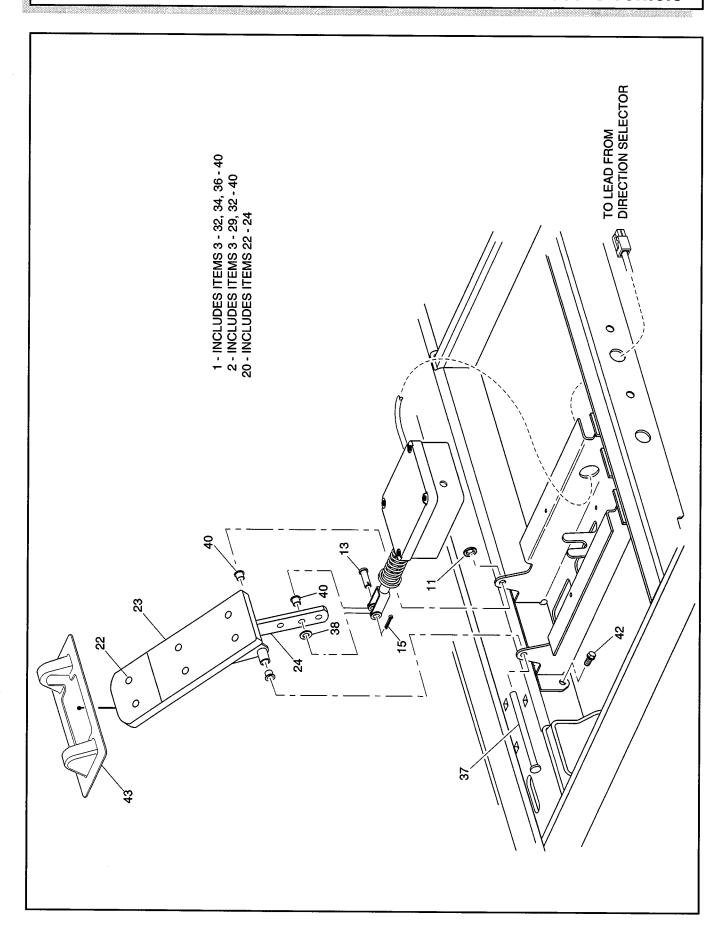

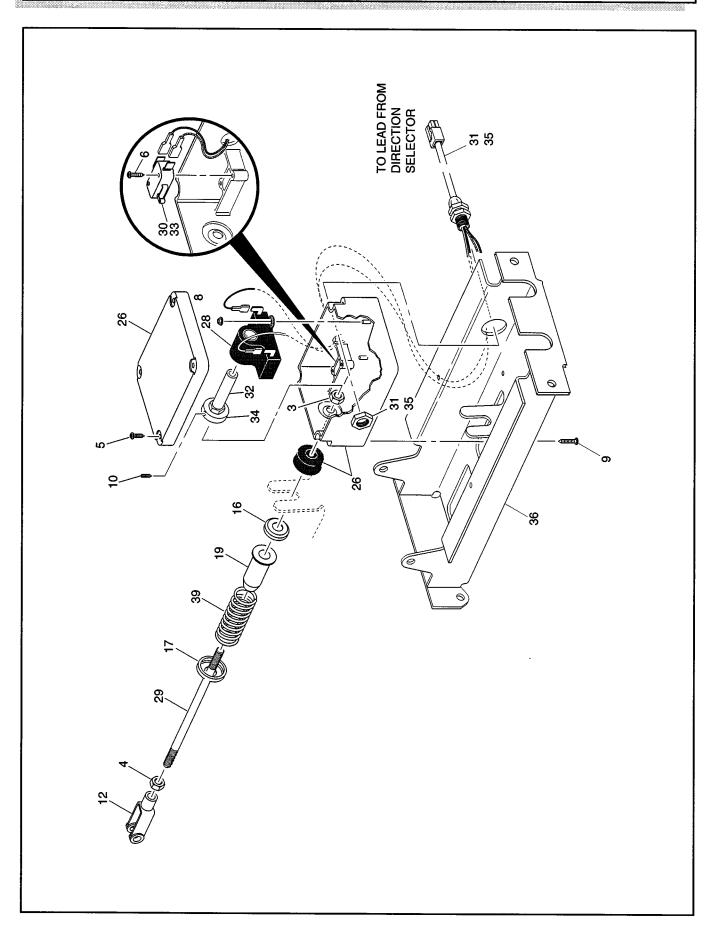

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25870-G03	PEDAL BOX ASSEMBLY (INCLUDES ITEMS 3 - 32, 34, 36 - 40)	1
2	25870-G05	PEDAL BOX ASSEMBLY, DCS MODEL ONLY	
	00550 00	(INCLUDES ITEMS 3 - 29, 32 - 40)	[
3	00550-G2	NUT, LOCK, 1/4 - 28	
4	00532-G4	NUT, LOCK, 5/16 - 24	
5	00684-G6	SCREW, #8 - 32 X 3/4 LG.	
6	00982-G01	SCREW, #4 - 14 X 5/8 LG	2
7			,
8	00983-G01	NUT, SELF THREADING	2
9	00984-G01	SCREW, #8 - 10 X 1/2 LG	
10	00486-G2	SETSCREW, #8 - 32 X 1/8 LG	
11	00986-G01	PUSHNUT, 19/64 I.D.	1
12	10385-G4	YOKE, CLEVIS (ADJUSTABLE)	1
13	10386-G3	PIN, CLEVIS, 5/16 x 15/16 LG	1
14			
15	10387-G3	PIN, COTTER, 3/32 x 3/4 LG	1
16	17677-G1	RETAINER, SPRING	1
17	17677-G2	RETAINER, SPRING	1
18			
19	17979-G1	BUSHING, ACCELERATOR ROD	1
20	25799-G01	ACCELERATOR PEDAL ASSEMBLY (INCLUDES ITEMS 22 - 24)	1
21			
22	16409-G1	RIVET, OVAL, 3/8 X 15/32 LG	6
23	27512-G01	PAD, ACCELERATOR PEDAL	1
24	*	PEDAL, ACCELERATOR	1
25			
26	25853-G01	PEDALBOX AND COVER (SEAL AND BEARING)	1
27		, in the second of the second	
28	25854-G01	INDUCTIVE THROTTLE SENSOR	1
29	25859-G01	ACCELERATOR ROD	1
		·	

ACCELERATOR LINKAGE


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	25861-G01	SWITCH, MICRO	. 1
31	25879-G03	WIRING HARNESS, PEDAL BOX ASSEMBLY	
32	26551-G01	PLUNGER	ł
33	25861-G02	SWITCH, MICRO (DCS MODEL ONLY)	. 1
34	26969-G01	CAM, PLUNGER	1
35	25879-G04	WIRING HARNESS, PEDAL BOX ASSEMBLY (DCS MODEL ONLY)	1
36	70116-G01	BRACKET, PEDAL	1
37	70134-G01	PIN, PEDAL PIVOT	1
38	17255-G1	WASHER, TEFLON, 1/32 X 5/8	, 1
39	73046-G01	SPRING, COMPRESSION	1
40	17838-G1	BUSHING	. 3
41			
42	00715-G2	BOLT, 5/16 - 18 X 5/8 LG	4
43	70135-G01	COVER, PEDAL PIVOT	1
;			

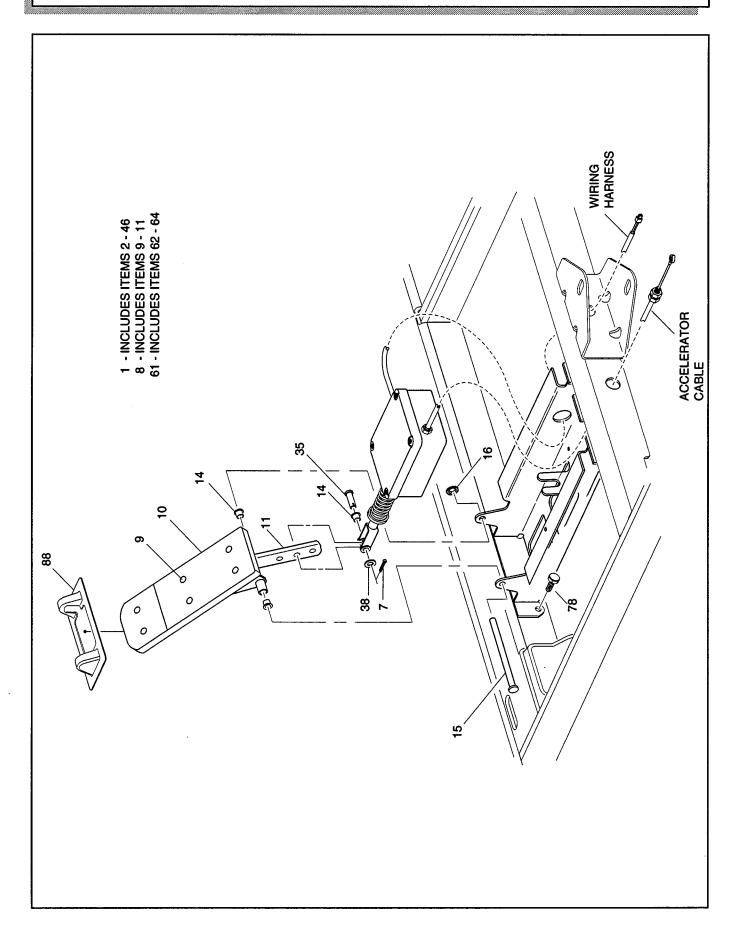

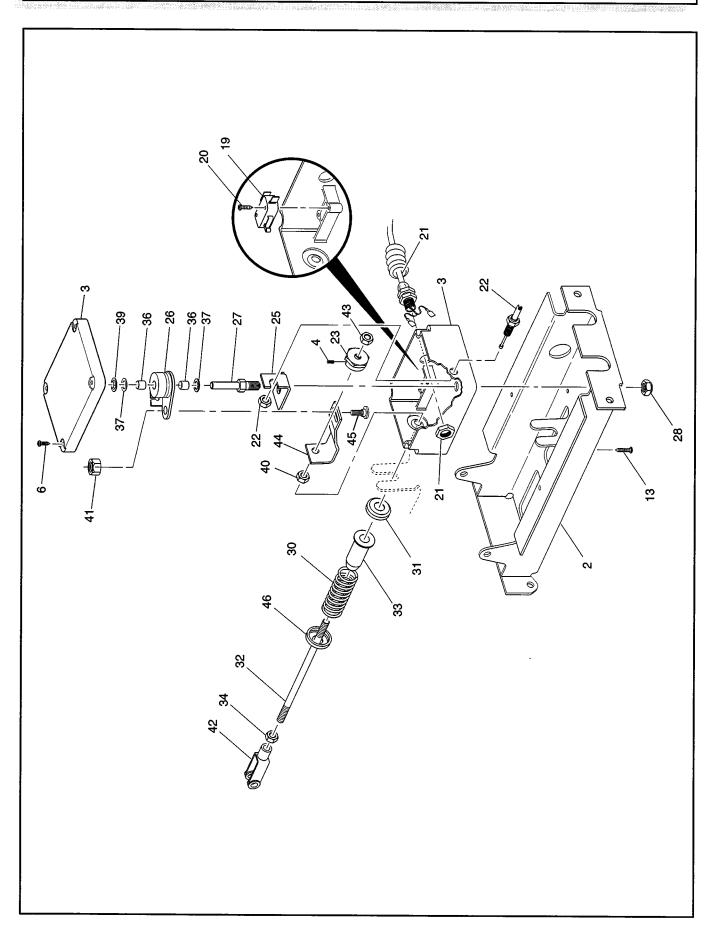

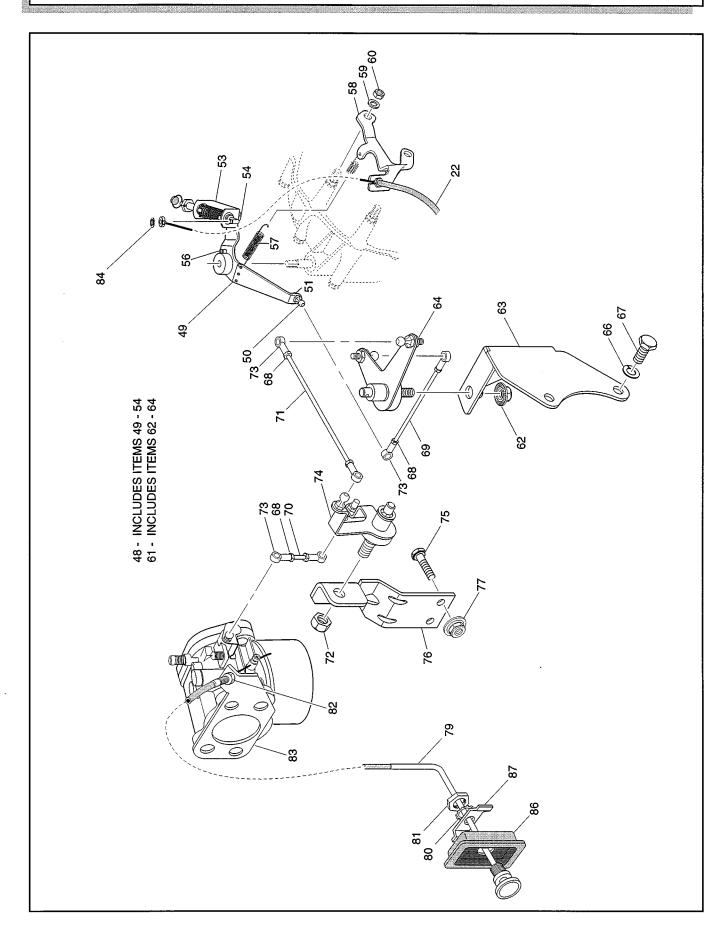

ACCELERATOR LINKAGE

When ordering parts, please specify the model and serial number of the product. * Indicates a component that is not available as an individual part. G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72062-G01	ACCELERATOR PEDAL BOX ASSEMBLY (INCLUDES ITEMS 2 - 46)	. 1
2	70116-G01	BRACKET, ACCELERATOR PEDAL	. 1
3	25853-G02	PEDAL BOX AND COVER	. 1
4	00487-G3	SETSCREW, 1/4 - 20 X 3/8 LG	. 1
5			
6	00984-G01	SCREW, #8 - 32 X 1/2 LG	. 4
7	10387-G3	PIN, COTTER, 3/32 x 3/4 LG	. 1
8	25799-G01	ACCELERATOR PEDAL ASSEMBLY (INCLUDES ITEMS 9 - 11)	. 1
9	16409-G1	RIVET, OVAL, 3/8 X 15/32 LG	. 6
10	27512-G01	PAD, ACCELERATOR PEDAL	. 1
11	70125-G01	PEDAL, ACCELERATOR	. 1
12			
13	00684-G6	SCREW, #8 - 10 X 1/2 LG.	. 4
14	17838-G1	BUSHING	. 3
15	70134-G01	PIN, PEDAL PIVOT	. 1
16	00986-G01	PUSHNUT, 19/64	. 1
17			
18			
19	25861-G01	SWITCH, MICRO	. 1
20	00982-G01	SCREW, #4 - 14 X 5/8 LG	. 2
21	72201-G01	WIRING HARNESS, PEDAL BOX	. 1
22	72065-G01	CABLE, ACCELERATOR (WITH NUT)	. 1
23	72198-G01	CAM, MICRO SWITCH	. 1
24			
25	72199-G01	BRACKET, PIVOT	. 1
26	72066-G01	CONTROL ARM	. 1
27	25768-G01	PIVOT ROD	. 1
28	14390-G1	NUT, LOCK, 3/8 - 24	. 1
29			
30	73046-G01	SPRING, COMPRESSION	. 1

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	17677-G1	RETAINER, SPRING	1
32	72072-G01	ROD, ACCELERATOR	1
33	17979-G1	BUSHING, ACCELERATOR ROD	1
34	00532-G4	NUT, 5/16 - 24	1
35	10386-G3	PIN, CLEVIS, 5/16 X 1 LG	1
36	23860-G1	BEARING	2
37	24621-G1	WASHER, NYLON, 5/16	2
38	17255-G1	WASHER, TEFLON, 5/16	1
39	12064-G1	PUSHNUT, 1/4	1
40	01009-G01	NUT, NYLON, 5/16 - 24	1
41	14390-G10	NUT, LOCK, #10 - 24	1
42	10385-G4	YOKE, CLEVIS	1
43	00550-G4	NUT, LOCK, 5/16 - 24	1
44	72074-G01	LINK, CONTROL ARM	1
45	72225-G01	BOLT, SHOULDER, SOCKET BUTTON HEAD	1
46	17677-G2	RETAINER, SPRING	1
47			
48	25690-G01	GOVERNOR BELLCRANK ASSEMBLY (INCLUDES ITEMS 49 - 54)	1
49	25765-G01	BELLCRANK, GOVERNOR	1
50	24479-G1	BALL, BALL JOINT	1
51	00734-G5	NUT, LOCK, 10 - 32	1
52			
53	22751-G2	BRACKET, GOVERNOR	1
54	14390-G4	NUT, LOCK, 1/4 - 20	1
55			
56	00491-G4	SETSCREW, 1/4 - 20 X 1/2 LG	1
57	25738-G01	SPRING, GOVERNOR TO ACCELERATOR BRACKET	1
58	25653-G01	BRACKET, ACCELERATOR CABLE	1 .
59	*	WASHER (PROVIDED ON DIFFERENTIAL)	2
60	*	NUT (PROVIDED ON DIFFERENTIAL)	2


ACCELERATOR LINKAGE

When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	25702-G01	GOVERNOR PIVOT BRACKET ASSEMBLY (INCLUDES ITEMS 62 - 64)	1
62	14390-G1	NUT, LOCK, 3/8 - 24	1
63	25655-G01	BRACKET, BELLCRANK	1
64	25763-G01	PIVOT, GOVERNOR	1
65			
66	00565-G8	WASHER, LOCK, 5/16	. 2
67	00276-G6	BOLT, 5/16 - 24 X 3/4 LG.	. 2
68	00526-G4	NUT, #10 - 32	. 2
69	25737-G03	LINKAGE ROD, GOVERNOR	. 1
70	25737-G01	LINKAGE ROD, CARBURETOR (COMPLETE)	. 1
71	25737-G02	LINKAGE ROD, THROTTLE (COMPLETE)	. 1
72	14390-G1	NUT, LOCK, 3/8 - 24	. 1
73	24465-G1	SOCKET, BALLJOINT	AR
74	25760-G01	BELLCRANK CARBURETOR LINKAGE	. 1
75	00414-G8	BOLT, 1/4 - 20 X 1 LG	. 2
76	72197-G01	PIVOT BRACKET	. 1
77	14390-G4	NUT, LOCK, 1/4 - 20	. 2
78	00715-G2	BOLT, 5/16 - 18 X 3/4 LG	. 4
79	25693-G04	CHOKE CONTROL ASSEMBLY, COMPLETE (WITH NUTS)	. 1
80	00568-G4	WASHER, LOCK, 9/16	. 1
81	00545-G4	NUT, 9/16 - 18	. 1
82	00544-G4	NUT, 5/16 - 24	. 2
83	26728-G01	BRACKET, CHOKE	. 1
84	12064-G3	PUSHNUT, 3/16	. 1
85			
86	72154-G01	ADAPTER, CHOKE CABLE	. 1
87	72155-G01	RETAINER, ADAPTER	
88	70135-G01	COVER, PEDAL PIVOT	. 1

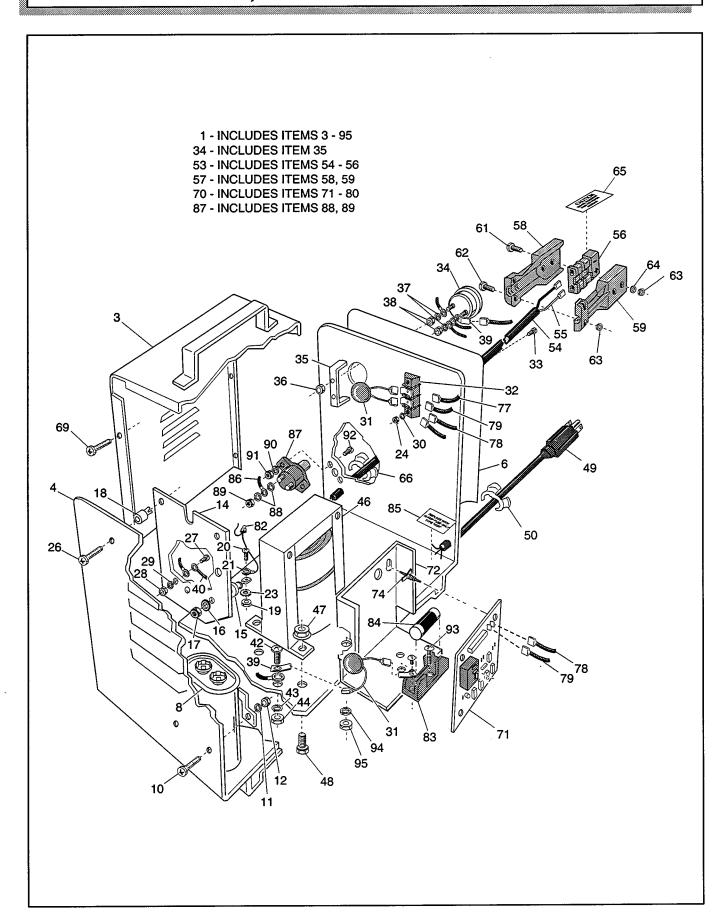

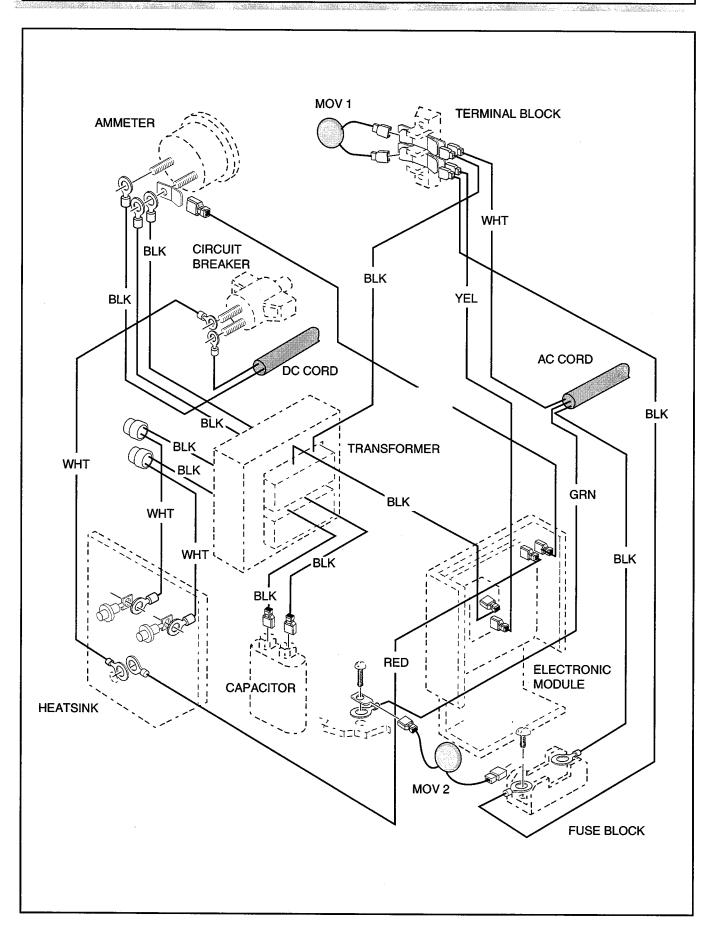

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26984-G01	BATTERY CHARGER ASSEMBLY, TOTAL CHARGE® III, PORTABLE 36V, 10 FT. DC CORD (INCLUDES ITEMS 3 - 95)	1
2			
3	19096-G1	TOP COVER	1
4	24919-G1	CHASSIS	1
5			
6	*	LABEL, OPERATING INSTRUCTIONS (SERIALIZED)	1
7			
8	17077-G1	CAPACITOR (WITH MOUNTING BRACKET)	1
9			
10	00372-G4	SCREW, #8 - 32 X 1/2 LG	2
11	00565-G4	WASHER, LOCK, #8	2
12	00526-G1	NUT, #8 - 32	2
13			
14	18768-G1	HEATSINK	1
15	18488-G1	DIODE, SILICON RECTIFIER	2
16	00567-G7	WASHER, LOCK, 1/4	2
17	00532-G2	NUT, 1/4 - 28	2
18	11572-G2	NUT, PLASTIC EXPANSION	3
19	00525-G5	NUT, #6 - 32	2
20	00138-G3	SCREW, #6 - 32 X 3/8 LG	2
21			
22			
23	00567-G3	WASHER, LOCK, #6	2
24	00525-G5	NUT, #6 - 32	2
25			
26	00512-G7	SCREW, SELF DRILL AND TAP, #8 X 7/8 LG	3
27	00378-G4	SCREW, #10 - 24 X 1/ 2 LG	1
28	00526-G3	NUT, #10 - 24	1
29	00565-G5	WASHER, LOCK, #10	1

BATTERY CHARGER, TOTAL CHARGE® III

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	00565-G3	WASHER, #6 - 32	. 2
31	26320-G01	VARISTOR, MOV	. 2
32	26962-G01	TERMINAL BLOCK	. 1
33	00987-G06	SCREW, #6 - 32 X 3/4 LG.	. 2
34	24243-G1	AMMETER (INCLUDES ITEM 35)	. 1
35	*	BRACKET, AMMETER	. 1
36	00525-G5	NUT, #6 - 32	. 2
37	00565-G5	WASHER, LOCK, #10	. 2
38	00526-G4	NUT, #10 - 32	2
39			
40	19952-G1	WIRE	. 1
41			
42	00372-G3	SCREW, #8 - 32 X 3/8 LG.	1
43	00565-G4	WASHER, LOCK, #8	1
44	00526-G1	NUT, #8 - 32	1
45			
46	19372-G8	TRANSFORMER	1
47	11027-G2	NUT, LOCK, 1/4 - 20	4
48	00414-G5	BOLT, 1/4 - 20 X 5/8 LG	4
49	19388-G1	AC CORD	1
50	13557-G2	STRAIN RELIEF, PLASTIC (AC CORD)	1
51			
52			
53	18747-G1	DC CORD ASSEMBLY (INCLUDES ITEMS 54 - 56)	1
54	*	DC CORD	1
55	28030-G01	CONNECTOR, CONTACT KIT	2
56	27815-G01	CONNECTOR	1
57	18972-G1	CHARGER RECEPTACLE HANDLE KIT (INCLUDES ITEMS 58, 59)	1
58	*	HANDLE, HALF, L.H	1
59	*	HANDLE, HALF, R.H	1.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
60			
61	00647-G8	SCREW, STAINLESS STEEL, #6 - 32 X 29/32 LG.	2
62	00647-G3	SCREW, STAINLESS STEEL, #6 - 32 X 3/8 LG	2
63	13521-G5	NUT, LOCK, #6 - 32	4
64	00650-G2	WASHER, #5	2
65	20628-G1	LABEL, CAUTION	1
66	13557-G3	STRAIN RELIEF, PLASTIC (DC CORD)	1
67			
68			
69	00614-G4	SCREW, SELF DRILL AND TAP, #8 - 18 X 1/2 LG	10
70	19950-G1	ELECTRONIC MODULE ASSEMBLY (INCLUDES ITEMS 71 - 79)	1
71	27417-G01	MODULE	1
72	19459-G1	BRACKET	1
73			
74	27877-G01	SPACER, SUPPORT	4
75			
76			
77	32519-G01	WIRE	1
78	19949-G1	WIRE	1
79	19954-G1	WIRE	1
80			
81			
82	19360-G1	SPLICE, WIRE, CLOSED END	2
83	19363-G1	FUSE BLOCK	1
84	19361-G1	FUSE, 15 AMP	1
85	19434-G1	LABEL, IDENTIFICATION	1
86	19441-G1	WIRE	1
87	19362-G1	CIRCUIT BREAKER, 50 AMP (INCLUDES ITEMS 88, 89)	2
88	00559-G5	WASHER, #10	4
89	00526-G4	NUT, #10 - 32	2


BATTERY CHARGER, TOTAL CHARGE® III


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.
When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
90	00565-G4	WASHER, LOCK, #8	2
91	00526-G1	NUT, #8 - 32	2
92	00372-G6	SCREW, #8 - 32 X 3/4 LG.	2
93	00372-G5	SCREW, #8 - 32 X 5/8 LG	2
94	00565-G4	WASHER, #8	2
95	00526-G1	NUT, #8 - 32	2
		·	

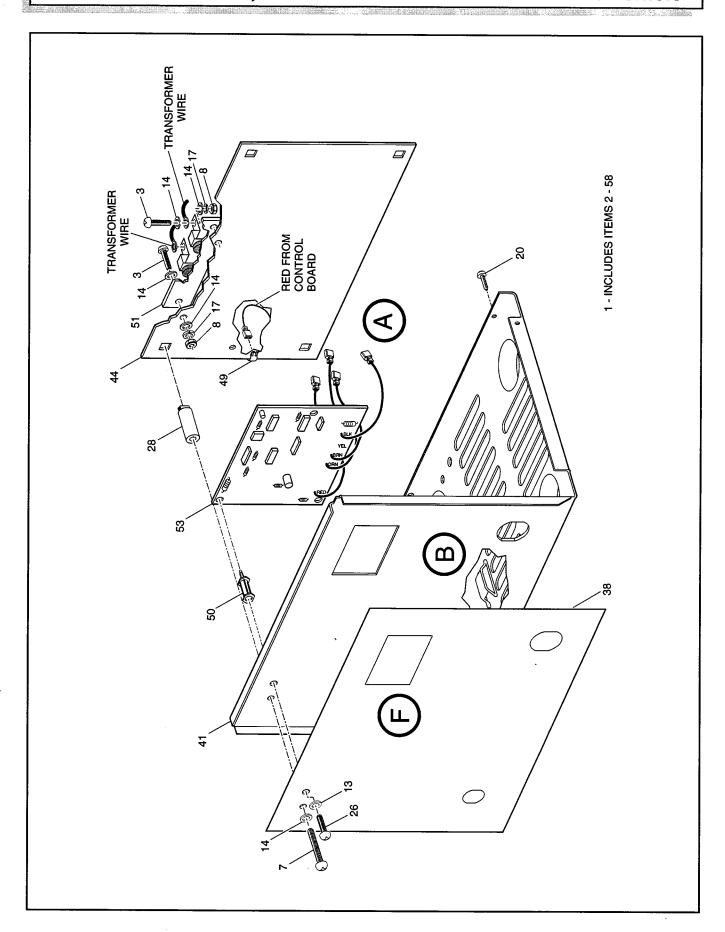

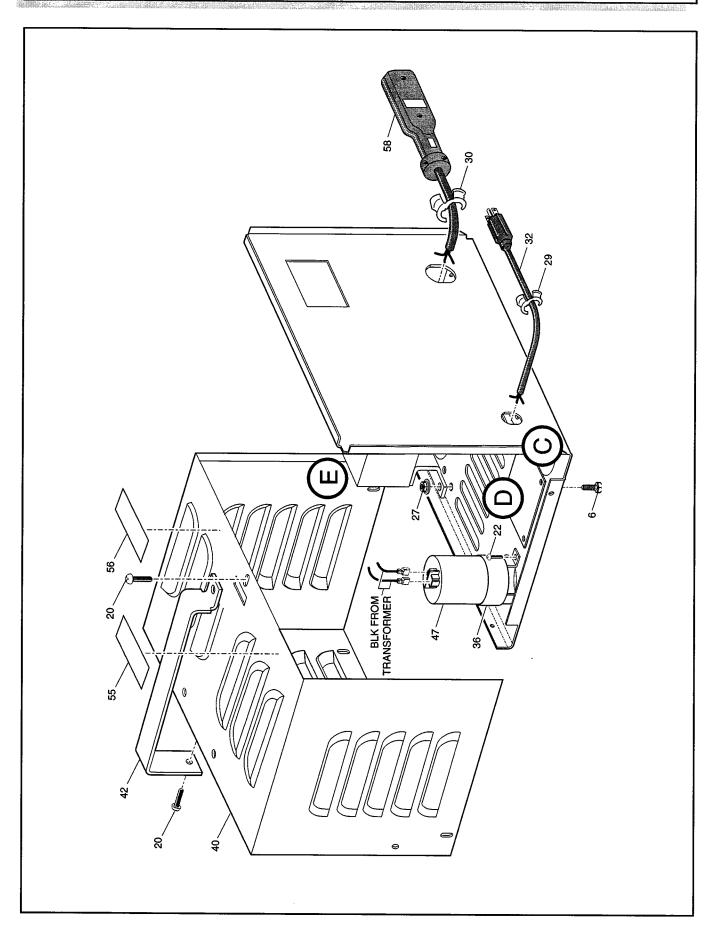

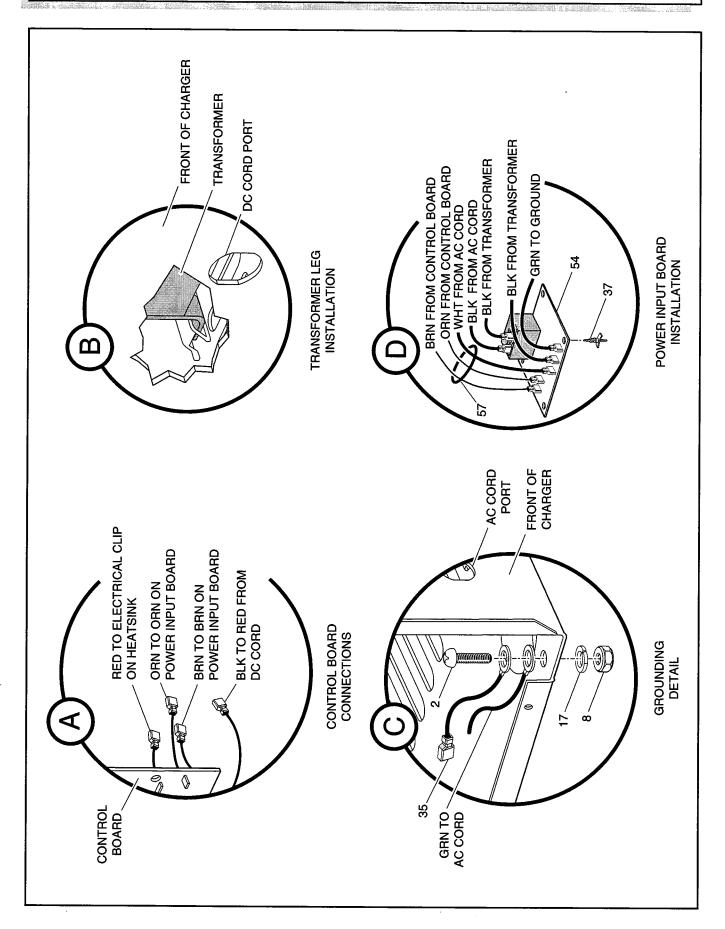

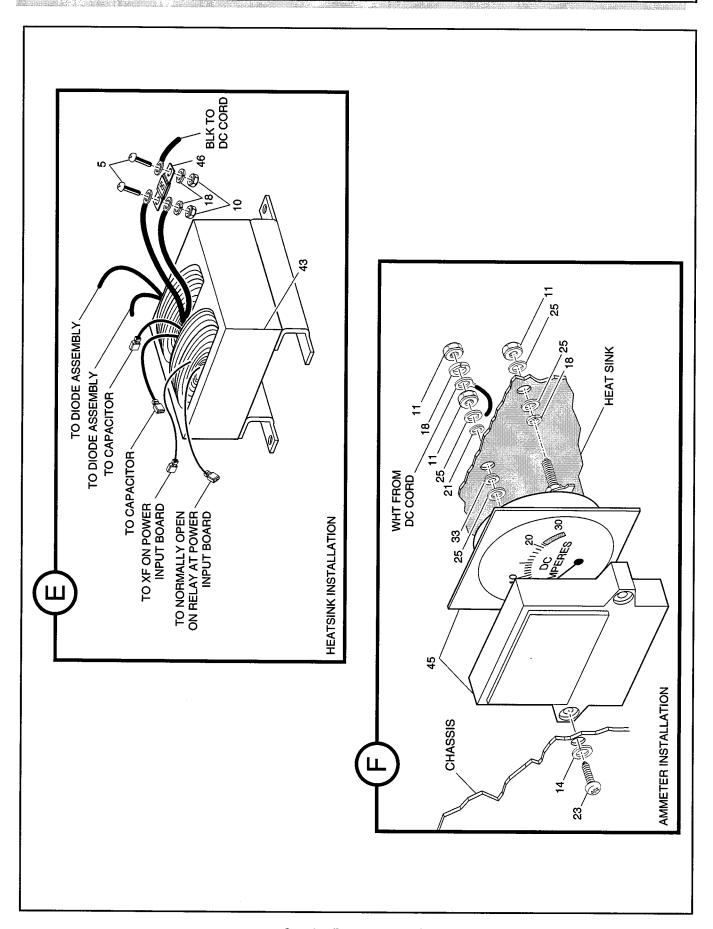

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	28115-G01	CHARGER ASSEMBLY (COMPLETE) INCLUDES ITEMS 2 - 58	1
2	00372-G3	SCREW, #8 - 32 X 3/8 LG	1
3	00372-G4	SCREW, #8 - 32 X 1/2 LG	4
4			
5	00378-G4	SCREW, #10 - 24 X 1/2 LG	2
6	00414-G5	SCREW, 1/4 - 20 X 5/8 LG	3
7	00513-G6	SCREW, #8 - 18 X 1 3/4 LG.	2
8	00526-G1	NUT, #8 - 32	5
9			
10	00526-G3	NUT, #10 - 24	2
11	*	NUT, #10 - 32	3
12			
13	00559-G3	WASHER, #6	3
14	00559-G4	WASHER, #8	12
15			
16		·	
17	00565-G4	WASHER, LOCK, #8	5
18	00565-G5	WASHER, LOCK, #10	4
19			
20	00614-G4	SCREW, #8 - 18 X 1/2 LG	6
21	00771-G6	WASHER, NYLON, SPECIAL	1
22	00969-G01	SCREW, #8 - 32 X 3/8 LG	3
23	00984-G01	SCREW, #8 - 10 X 1/2 LG	2
24			
25	*	WASHER, BRASS, #10	4
26	01005-G01	SCREW, #6 - 19 X 5/16 LG	3
27	11027-G2	NUT, LOCK, 1/4 - 20	3
28	11572-G3	NUT, PLASTIC EXPANSION	2
29	13557-G2	STRAIN RELIEF, AC	1
30	13557-G3	STRAIN RELIEF, DC	1


BATTERY CHARGER, POWERWISE TM


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.
When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.
G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			
32	19388-G4	CORD, AC	. 1
33	22589-G2	WASHER, SHOULDER	1
34			
35	25977-G32	WIRE, 4"	1
36	26979-G01	BRACKET, CAPACITOR	1
37	27877-G01	SUPPORT, SPACER	4
38	28091-G01	LABEL, FRONT	1
39			
40	*	COVER	1
41	*	CHASSIS	1
42	28102-G01	HANDLE	1
43	28103-G01	TRANSFORMER	1
44	28104-G01	HEAT SINK	1
45	28105-G01	AMMETER	1
46	28106-G01	FUSE, 50 AMP	1
47	28109-G01	CAPACITOR	1
48			
49	28110-G01	CLIP, ELECTRICAL	1
50	28111-G01	SUPPORT, CONTROL BOARD	3
51	28112-G01	DIODE	1
52			
53	28126-G01	BOARD, CONTROL	1
54	28126-G03	BOARD, POWER INPUT	1
55	28136-G01	TOP LABEL, VENTILATION	1
56	28136-G02	TOP LABEL, CORD CONDITION	1
57	17618-G1	CLAMP, NYLON	2
58	28137-G**	DC PLUG (COMPLETE)	1

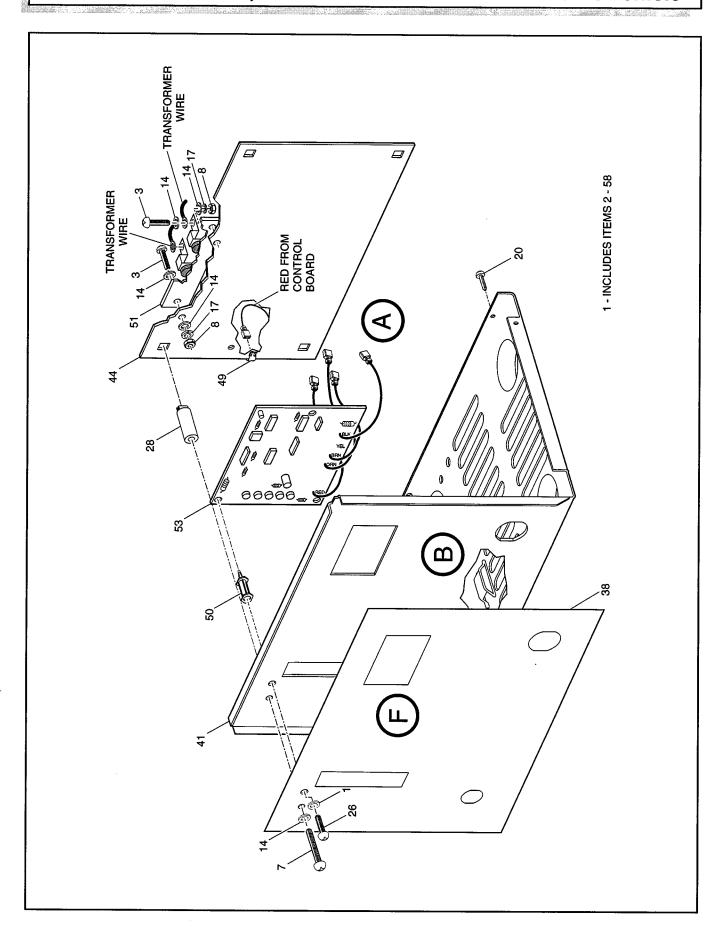

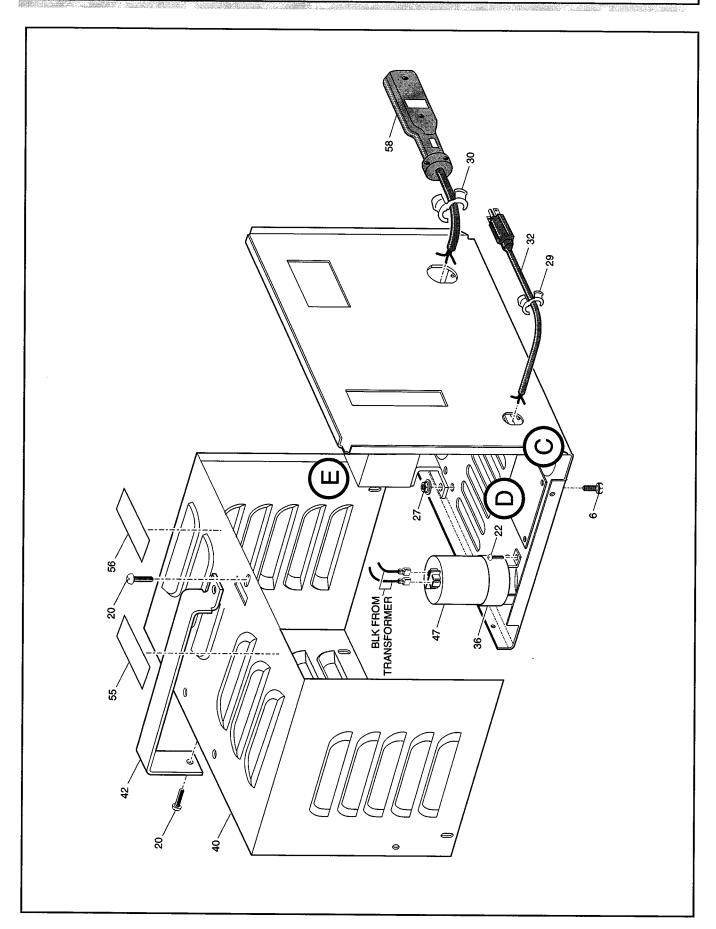

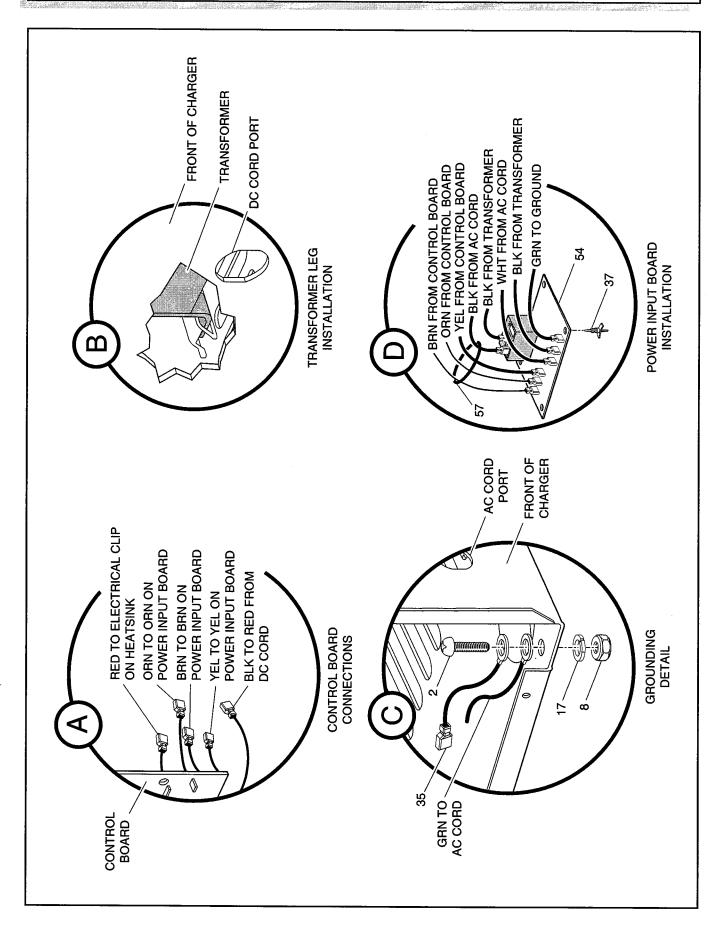

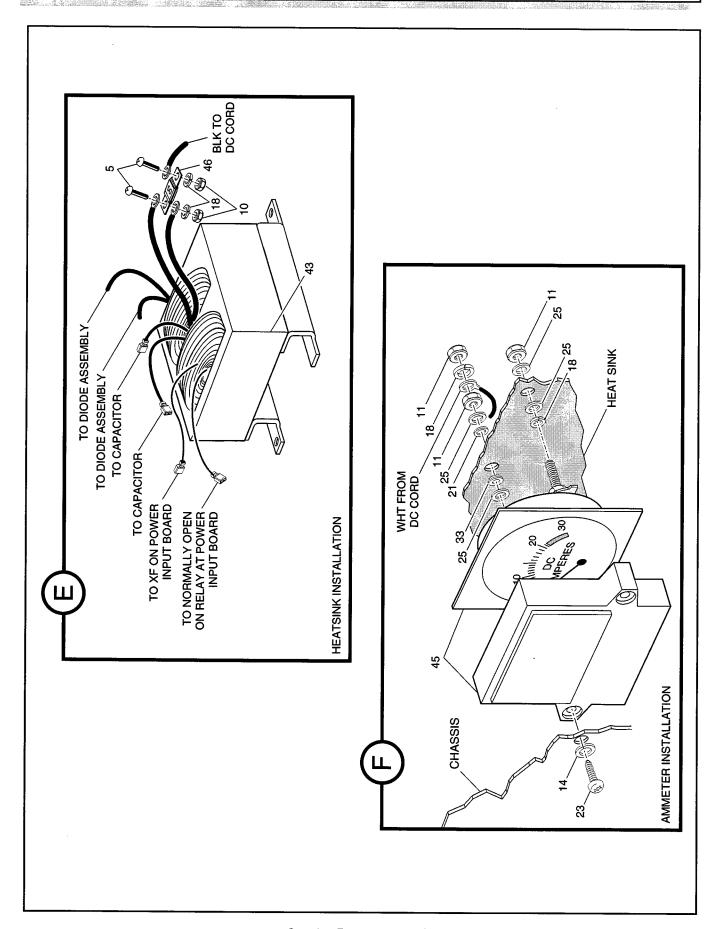

When ordering parts, please specify the model and serial number of the product.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	28115-G02	CHARGER ASSEMBLY (COMPLETE) INCLUDES ITEMS 2 - 58	1
2	00372-G3	SCREW, #8 - 32 X 3/8 LG	1
3	00372-G4	SCREW, #8 - 32 X 1/2 LG	4
4			
5	00378-G4	SCREW, #10 - 24 X 1/2 LG	2
6	00414-G5	SCREW, 1/4 - 20 X 5/8 LG	3
7	00513-G6	SCREW, #8 - 18 X 1 3/4 LG	2
8	00526-G1	NUT, #8 - 32	5
9			
10	00526-G3	NUT, #10 - 24	2
11	00528-G4	NUT, #10 - 32	3
12			
13	00559-G3	WASHER, #6	3
14	00559-G4	WASHER, #8	12
15			
16	:	·	
17	00565-G4	WASHER, LOCK, #8	5
18	00565-G5	WASHER, LOCK, #10	4
19			
20	00614-G4	SCREW, #8 - 18 X 1/2 LG	6
21	00771-G6	WASHER, NYLON, SPECIAL	1
22	00969-G01	SCREW, #8 - 32 X 3/8 LG	3
23	00984-G01	SCREW, #8 - 10 X 1/2 LG	2
24			
25	01003-G01	WASHER, BRASS, #10	4
26	01005-G01	SCREW, #6 - 19 X 5/16 LG	3
27	11027-G2	NUT, LOCK, 1/4 - 20	3
28	11572-G3	NUT, PLASTIC EXPANSION	2
29	13557-G2	STRAIN RELIEF, AC	1
30	13557-G3	STRAIN RELIEF, DC	1


Electric Vehicle


BATTERY CHARGER, POWERWISE TM +


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.
When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.
G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	2		
32	19388-G4	CORD, AC	. 1
33	22589-G2	WASHER, SHOULDER	. 1
34			
35	25977-G32	WIRE, 4"	. 1
36	26979-G01	BRACKET, CAPACITOR	. 1
37	27877-G01	SUPPORT, SPACER	4
38	28091-G02	LABEL, FRONT	. 1
39			
40	*	COVER	. 1
41	*	CHASSIS	. 1
42	28102-G01	HANDLE	. 1
43	28103-G01	TRANSFORMER	1
44	28104-G01	HEAT SINK	1
45	28105-G01	AMMETER	1
46	28106-G01	FUSE, 50 AMP	1
47	28109-G01	CAPACITOR	1
48			
49	28110-G01	CLIP, ELECTRICAL	1
50	28111-G01	SUPPORT, CONTROL BOARD	3
51	28112-G01	DIODE	1
52			
53	28126-G02	BOARD, CONTROL	1
54	28126-G04	BOARD, POWER INPUT	1
55	28136-G01	TOP LABEL, VENTILATION	1
56	28136-G02	TOP LABEL, CORD CONDITION	1
57	17618-G1	CLAMP, NYLON	2
58	28137-G**	DC PLUG (COMPLETE)	1

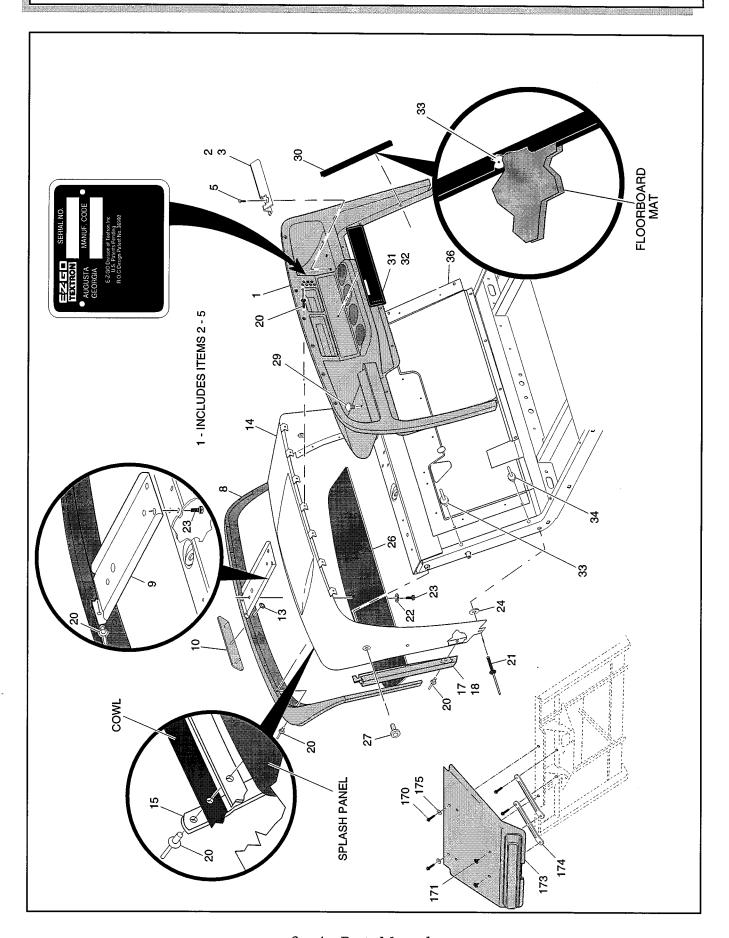

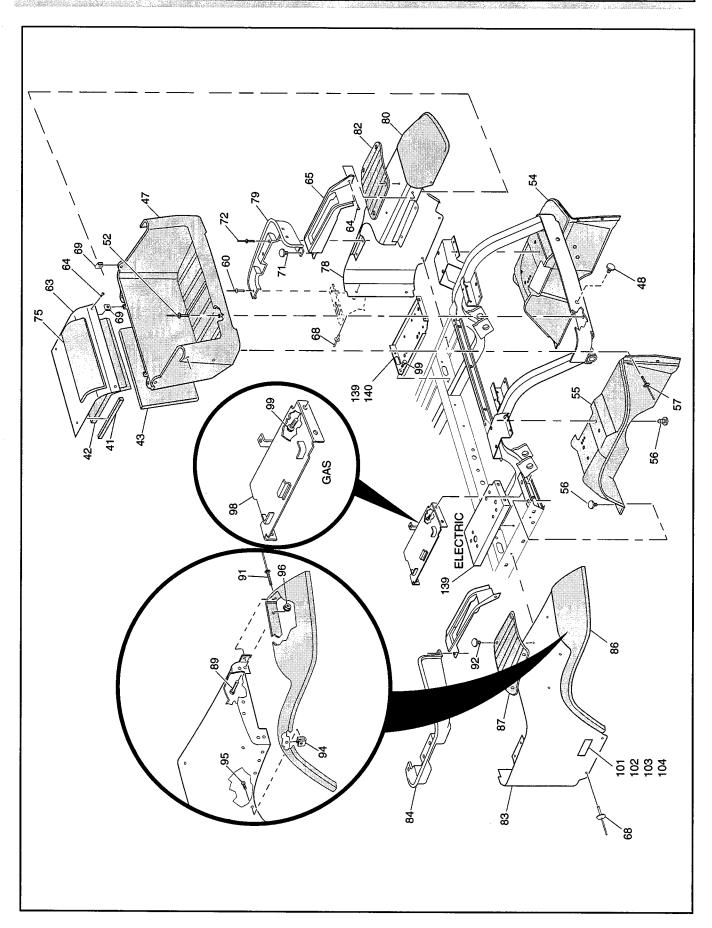

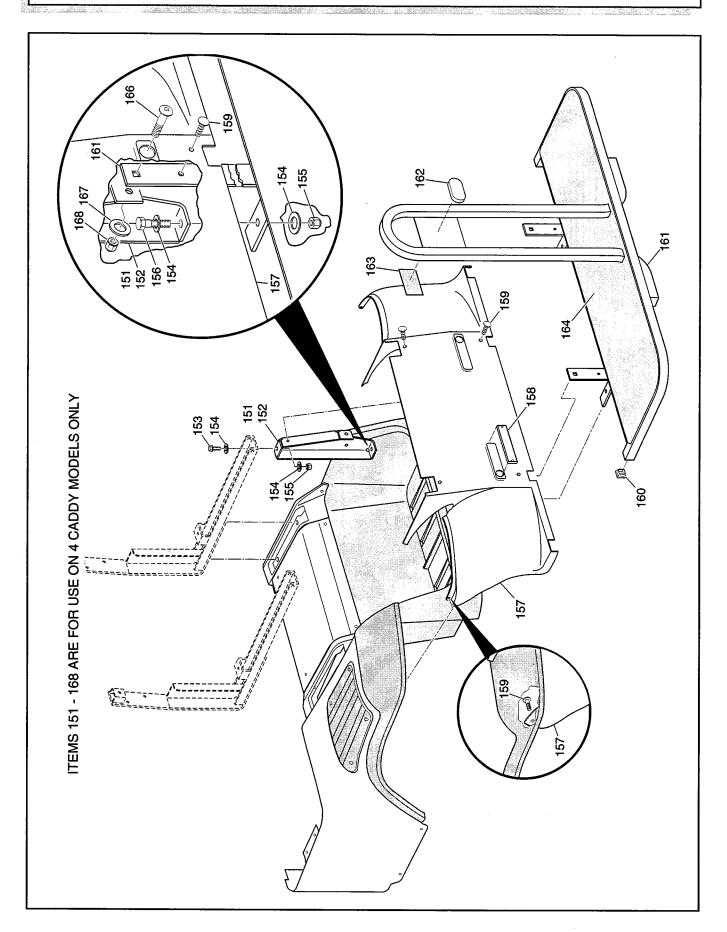

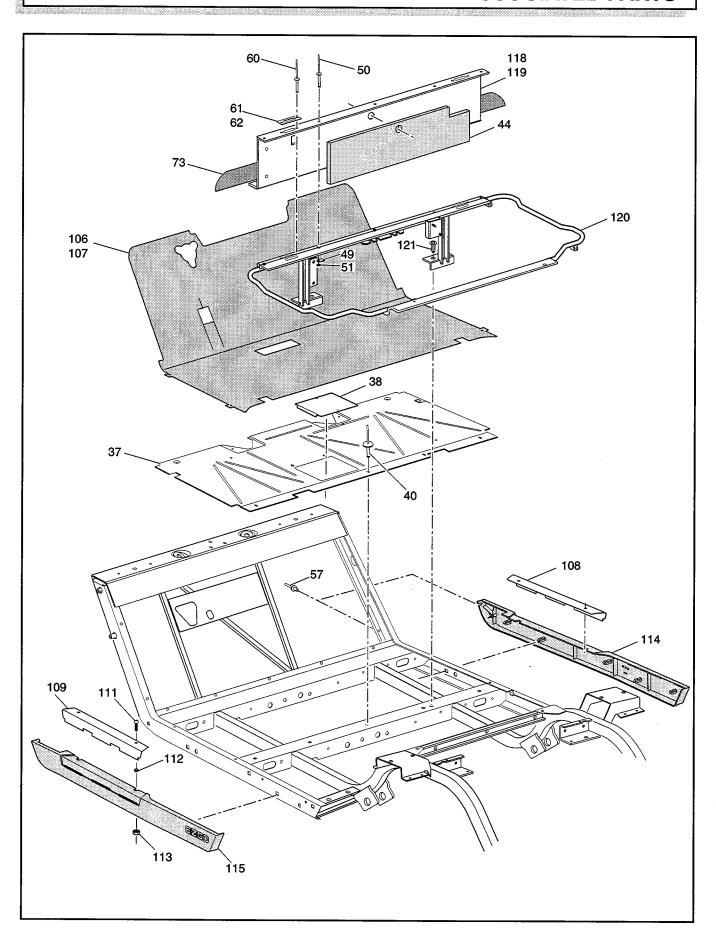

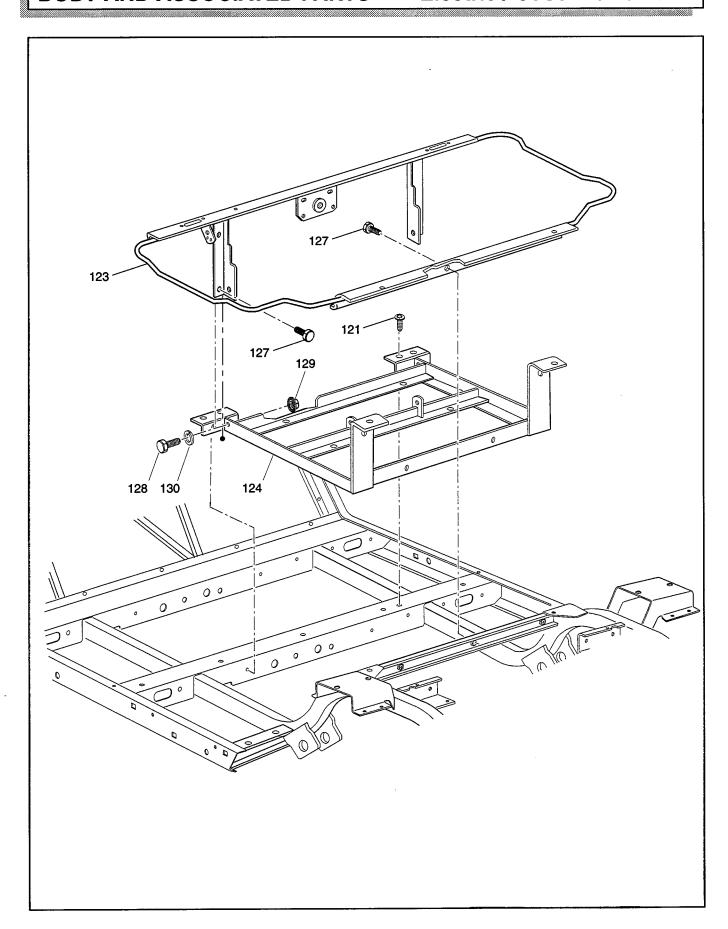

BODY AND ASSOCIATED PARTS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71151-G01	INSTRUMENT PANEL ASSEMBLY (INCLUDES ITEMS 2 - 5)	. 1
2	71153-G01	BALL DEFLECTOR, PASSENGER SIDE	1
3	71154-G01	BALL DEFLECTOR, DRIVER'S SIDE	. 1
4			
5	00614-G5	SCREW, #8 - 18 X 5/8 LG.	. 6
6			
7	71071-G02	COWL	. 1
8	71030-G01	COWL CAP	. 1
9	71101-G01	BRACKET, COWL SUPPORT	. 1
10	19817-G1	NAMEPLATE, E-Z-GO	1
11			
12			
13	12064-G3	PUSHNUT, 3/16	. 3
14	71071-G01	COWL, FRONT	. 1
15	71076-G01	TAB, RETAINING	. 2
16			
17	71036-G01	FENDER FLANGE, DRIVER'S SIDE	. 1
18	71035-G01	FENDER FLANGE, PASSENGER SIDE	. 1
19	10570-G10	RIVET, STAINLESS STEEL, 5/32 X 1/2 LG	. 2
20	14601-G10	RIVET, 5/32 X 7/16 LG	. 16
21	10570-G10	RIVET, 5/32 X 9/16 LG	. 2
22	16469-G7	WASHER, 1/4	. 1
23	71102-G02	BOLT, 1/4 - 20 X 1/2 LG	. 4
24	15121-G3	WASHER, 1 1 / 4 O.D. X 7 / 32 I.D.	. 2
25			
26	71117-G01	PANEL, SPLASH, FRONT COWL	. 1
27	71056-G01	BOLT, 5/16 - 18 X 5/8 LG	. 4
28			
29	16816-G2	RATCHET FASTENER	. 4
30	71115-G01	TRIM, VINYL	. 2

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	27826-G01	LABEL, SAFETY (GASOLINE VEHICLE)	. 1
32	27647-G01	LABEL, SAFETY (ELECTRIC VEHICLE)	. 1
33	14601-G13	RIVET, 5/32 X 9/16 LG	2
34	14601-G11	RIVET, 3/16 X 9/16 LG	. 10
35			
36	70047-G01	UPPER FLOORPAN	. 1
37	70132-G01	LOWER FLOORPAN	1
38	70164-G01	COVER, SWITCH ACCESS	. 1
39			
40	14601-G11	RIVET, 3/16 X 9/16 LG	. 7
41	18391-G1	NOISE SUPPRESSOR STRIP	. 2
42	72113-G01	NOISE SUPPRESSOR, TRUNK LID	. 1
43	22744-G1	NOISE SUPPRESSOR, BAGWELL	. 1
44	72112-G01	NOISE SUPPRESSOR, SEAT WRAP (GASOLINE VEHICLE)	. 1
45			
46			
47	71401-G02	BAGWELL	. 1
48	20271-G2	PLUG HOLE, BUMPER	. 2
49	73053-G01	CLAMP (DCS MODEL ONLY)	. 3
50	10570-G10	RIVET, STAINELESS STEEL, 5/32 X 9/16 LG	. 8
51	00559-G4	WASHER, #8 (DCS MODEL ONLY)	. 3
52	18436-G1	RIVET, 1/4 X 5/8 LG	. 4
53			
54	71551-G04	FENDER LINER, PASSENGER SIDE	. 1
55	71552-G04	FENDER LINER, DRIVER'S SIDE	. 1
56	16816-G2	RATCHET FASTENER	. 12
57	71055-G01	RIVET, 3/16 X 3/8 LG	. 4
58	71552-G02	FENDER LINER, DRIVER'S SIDE (FREEDOM)	. 1
59	71551-G02	FENDER LINER, PASSENGER SIDE (FREEDOM)	. 1
60	10570-G11	RIVET, STAINLESS STEEL, 3/16 X 11/16 LG.	. 4

BODY AND ASSOCIATED PARTS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	71616-G01	PLATE, SEAT HINGE (VEHICLES PRIOR TO SERIAL NO. 895713)	. 2
62	71609-G01	PLATE, SEAT HINGE (VEHICLES AFTER SERIAL NO. 895713)	. 2
63	71353-G01	ACCESS PANEL	1
64	71002-G01	SCREW, #8 X 1/2 LG	. 6
65	71347-G01	FILLER PANEL, PASSENGER SIDE	. 1
66	71348-G01	FILLER PANEL, DRIVER SIDE	. 1
67			
68	10570-G12	RIVET, 1/4 X 1/2 LG	. 4
69	71003-G01	SPEED NUT, #8	. 4
70	14601-G13	RIVET, 5/32 X 9/16 LG	. 2
71	16816-G2	RATCHET FASTENER	. 2
72	14601-G10	RIVET, 5/32 X 7/16 LG	. 8
73	71377-G01	SEATWRAP SCUFFGUARD	. 1
74			
75	75017-G01	ACCESS PANEL, SCUFFGUARD	. 1
76			
77			
78	71341-G**	FENDER, PASSENGER SIDE	. 1
79	71345-G01	FENDER POCKET, PASSENGER SIDE	. 1
80	71355-G01	FENDER CAP, PASSENGER SIDE	. 1
81			
82	71373-G02	SCUFF GUARD, PASSENGER SIDE	. 1
83	71342-G**	FENDER, DRIVER'S SIDE	. 1
84	71346-G01	FENDER POCKET, DRIVER'S SIDE	. 1
85	74354-G02	FENDER CAP, PASSENGER SIDE (FREEDOM)	. 1
86	71356-G01	FENDER CAP, DRIVER'S SIDE	. 1
87	71373-G01	SCUFF GUARD, DRIVER'S SIDE	. 1
88	74354-G01	FENDER CAP, DRIVER'S SIDE (FREEDOM)	. 1
89	00228-G4	SCREW, #10 - 24 x 1/2 LG	. 3
90			,

When ordering parts, please specify the model and serial number of the product.

^{*} Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
91	14601-G10	RIVET, 5/32 X 7/16 LG	. 5
92	16816-G2	RATCHET FASTENER	. 4
93			
94	71003-G03	SPEED NUT, #8	4
95	71004-G01	SCREW, #8 X 3/8 LG	4
96	11027-G3	NUT, LOCK, 10 - 24	. 3
97			
98	70245-G01	BATTERY TRAY (GASOLINE VEHICLE)	. 1
99	00715-G2	BOLT, 5/16 - 18 X 13/16 LG.	. 4
100			
101	23676-G1	DECAL, FREEDOM	. AR
102	27504-G01	DECAL, FREEDOM HP	AR
103	75178-G01	DECAL, 4 CADDY	AR
104	73162-G01	DECAL, DCS	. AR
105			
106	70048-G02	FLOORMAT (FREEDOM ONLY)	. 1
107	70048-G01	FLOORMAT	. 1
108	23850-G1	SILL PLATE, ROCKER PANEL, PASSENGER SIDE	. 1
109	23850-G2	SILL PLATE, ROCKER PANEL, DRIVER'S SIDE	. 1
110			
111	16705-G1	SCREW, STAINLESS STEEL, 1/4 - 20 X 1 LG	. 4
112	23726-G4	SPACER	. 4
113	00891-G2	NUT, LOCK, 1/4 - 20	. 4
114	71501-G01	ROCKER PANEL, PASSENGER SIDE	. 1
115	71502-G01	ROCKER PANEL, DRIVER'S SIDE	. 1
116			
117			
118	71379-G**	SEATWRAP (DCS MODEL ONLY)	. 1
119	71361-G**	SEATWRAP	. 1
120	70317-G01	SEAT FRAME (GASOLINE VEHICLE)	. 1

BODY AND ASSOCIATED PARTS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
121	70200-G01	SCREW, 3/8 - 16 X 1/4 LG	. 2
122			
123	70318-G01	SEAT FRAME (ELECTRIC VEHICLE)	. 1
124	70046-G01	BATTERY RACK (ELECTRIC VEHICLE)	. 1
125			
126			
127	00715-G2	BOLT, 5/16 - 18 X 13/16 LG.	. 5
128	00438-G6	SCREW, 5/16 - 18 X 3/4 LG	. 2
129	11098-G6	NUT, LOCK, 5/16 - 18	. 2
130	00559-G8	WASHER, 5/16	. 2
131			
132			
133			
134			
135			
136	11027-G01	NUT, LOCK, 5/16 - 18	. 2
137			
138			
139	70244-G02	PANEL, SPLASH (ELECTRIC VEHICLE)	. 2
140	70244-G01	PANEL, SPLASH (GASOLINE VEHICLE)	. 1
141	71158-G01	INSERT, 4 CUP INSTRUMENT PANEL	1
142			
143			
144			
145			
146			
147			
148			Ì
149			
150			

BODY AND ASSOCIATED PARTS


Electric / Gasoline Vehicle


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
151	74126-G01	FRAME SUPPORT, VERTICAL, PASSENGER SIDE	. 1
152	74126-G02	FRAME SUPPORT, VERTICAL, DRIVER'S SIDE	. 1
153	00426-G8	BOLT, 3/8 - 16 X 1 LG	. 2
154	00560-G1	WASHER, 3/8	. 8
155	11098-G5	NUT, LOCK, 3/8 - 16	. 4
156	00427-G4	BOLT, 3/8 - 16 X 1 1/2 LG.	. 2
157	74127-G01	PANEL, VALANCE	. 1
158	74128-G01	REFLECTOR	. 2
159	16816-G2	RIVET, PLASTIC	6
160	19853-G1	PLUG, END	. 2
161	74105-G01	FOOT REST ASSEMBLY (INCLUDES ITEMS 162 - 164)	. 1
162	74129-G01	REFLECTOR	. 1
163	74132-G01	LABEL, WARNING	1
164	74107-G01	MAT, FLOOR	1
165			
166	00769-G2	BOLT, CARRIAGE, 3/8 - 16 X 1 1/4 LG	. 2
167	00560-G1	WASHER, 3/8	2
168	11098-G5	NUT, LOCK, 3/8 - 16	. 2
169			
170	00114-G6	SCREW, 1/4 - 14 X 3/4 LG	4
171	16816-G2	FASTENER	. 2
172			
173	27166-G02	FRONT SHIELD	. 1
174	71015-G01	BRACE, FRONT SHIELD	. 2
175	16469-G7	WASHER, 1/4	. 2

BODY AND ASSOCIATED PARTS

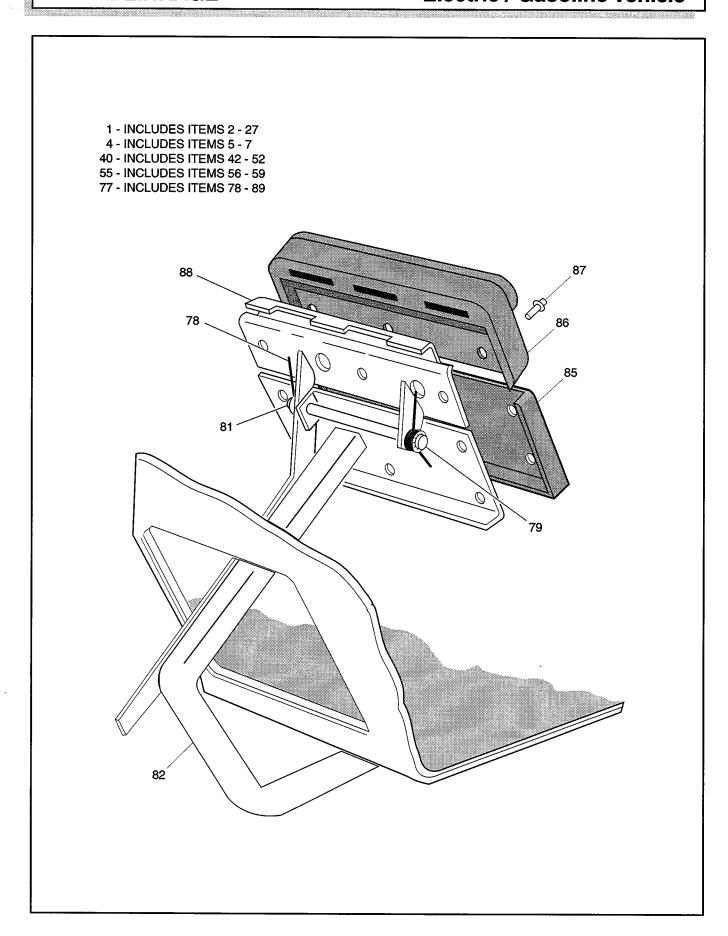

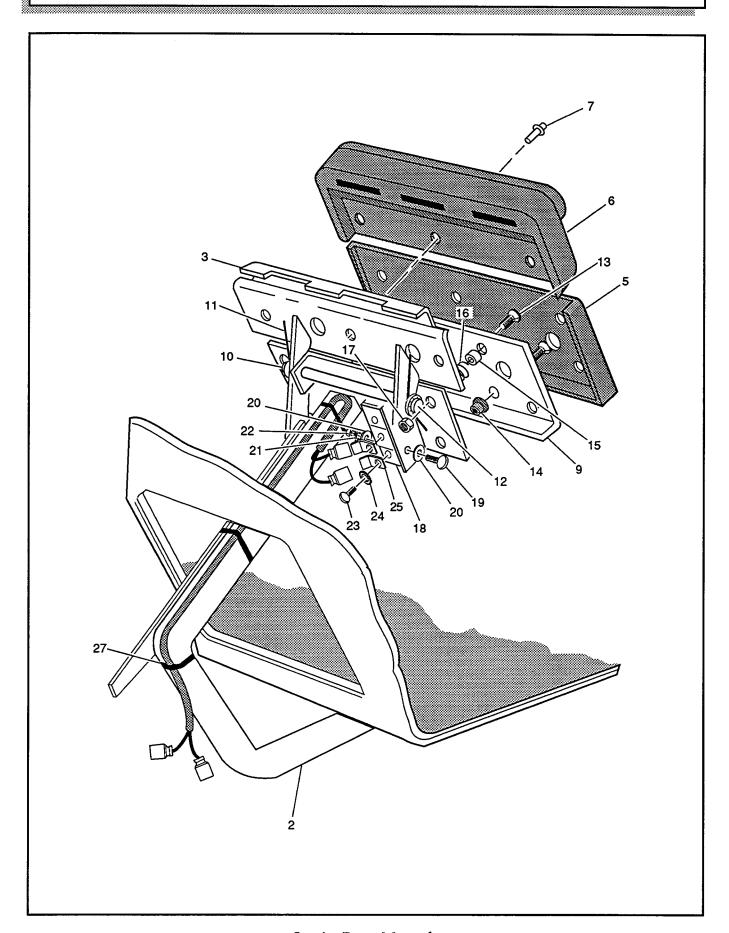

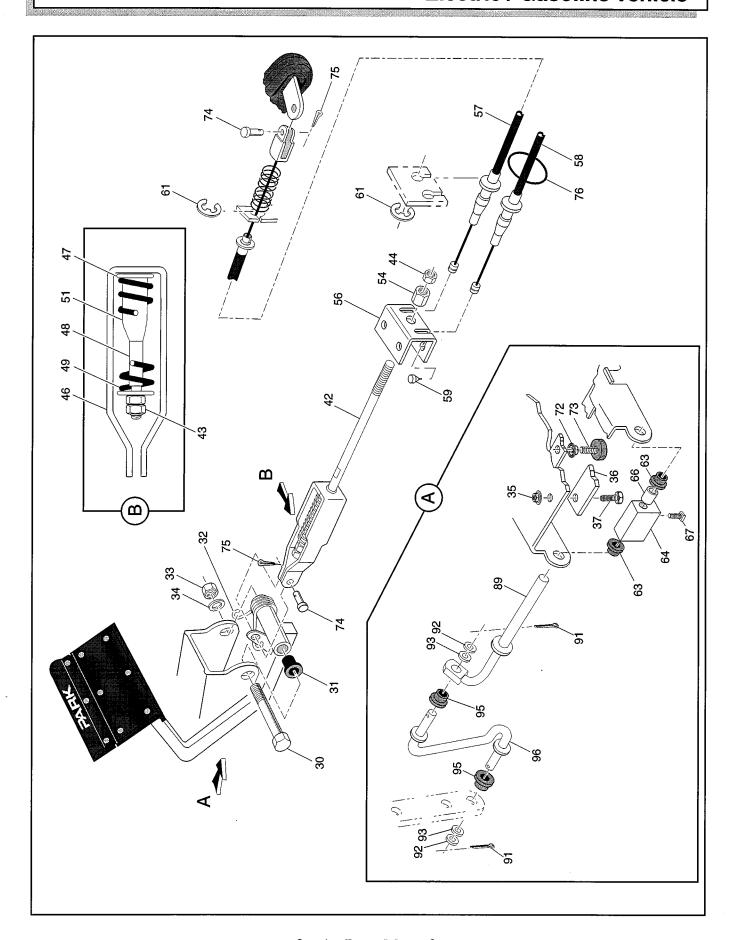

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70263-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 2 - 27) VEHICLES WITH BRAKE LIGHTS	1
2	*	PEDAL, BRAKE	1
3	*	PEDAL, PARK BRAKE	1
4	70274-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 5 - 7)	1
5	*	PAD, BRAKE PEDAL	1
6	*	PAD, PARK BRAKE	1
7	15766-G1	RIVET, 3/8 x 15/32 LG	9
8			
9	*	PLATE, BRAKE PEDAL	1
10	15932-G2	PIN, PARK BRAKE PEDAL	1
11	11737-G1	SPRING, TORSION, PARK BRAKE	2
12	12064-G1	PUSHNUT, 5/16	1
13	00737-G8	SCREW, #10 - 24 X 1 LG	4
14	00739-G1	NUT, RUBBER, #10 - 24	2
15	22362-G3	STANDOFF, BRAKE PEDAL	2
16	27137-G01	SPRING, CONICAL	2
17	11098-G7	NUT, LOCK, #10 - 24	2
18	10606-G8	SWITCH, MICRO	1
19	00645-G2	SCREW, #6 - 32 X 1 1/4 LG.	2
20	00559-G3	WASHER, #6	2
21	00565-G3	WASHER, LOCK, #6	2
22	00525-G5	NUT, #6 - 32	2
23	*	SCREW, BRASS	2
24	00567-G3	WASHER, LOCK, #6	6
25	14628-G1	TAB, FASTON, 5/16 X 5/16 LG	2
26			
27	17618-G1	NYLON CLAMP	3
28			
29			

BRAKE LINKAGE

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	70096-G01	BOLT, SHOULDER, 3/8 - 16 X 3 LG.	1
31	11079-G1	BUSHING, FLANGED	2
32	70138-G01	SPRING, TORSION	1
33	11098-G5	NUT, 3/8 - 16	1
34	00643-G1	WASHER, 3/8	1
35	11027-G2	NUT, LOCK, 1/4 - 20	2
36	70080-G01	CATCH BRACKET, PARK BRAKE	1
37	00414-G6	BOLT, 1/4 - 20 X 3/4 LG.	2
38			
39			
40	70272-G04	COMPENSATOR ASSEMBLY (INCLUDES ITEMS 42 - 54)	1
41			
42	25882-G04	ROD, LINK	1
43	00532-G4	NUT, 5/16 - 24	2
44	11098-G9	NUT, LOCK, 5/16 - 24	1
45			
46	27330-G01	YOKE, BRAKE	1
47	15121-G1	WASHER, 3/8	2
48	23061-G2	TUBE	1
49	23463-G1	SPRING, COMPRESSION	1
50		•	
51	17979-G1	BUSHING, ACCELERATOR ROD	1
52	:	·	
53	:		İ
54	00963-G01	NUT, SPHERICAL, 5/16 - 24	1
55	70273-G03	EQUALIZER AND BRAKE CABLE ASSEMBLY (INCLUDES ITEMS 56 - 59)	1
56	28082-G01	BRACKET, EQUALIZER	1
57	*	CABLE, BRAKE, PASSENGER SIDE	1
58	*	CABLE, BRAKE DRIVER'S SIDE	1

BRAKE LINKAGE

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
59	28083-G01	BUMPER, BRAKE COMPENSATOR	2
60			
61	12305-G1	RING, RETAINING	4
62			
63	10097-G6	BEARING, FLANGED	2
64	25103-G1	CAM, KICK-OFF	1
65			
66	14134-G4	SPACER	1
67	00491-G4	SET SCREW, 1/4 - 20 X 1/2 LG	2
68			
69	,		
70			
71			
72	11027-G1	NUT, LOCK, 5/16 - 18	1
73	70113-G01	ADJUSTABLE BUMPER	1
74	10386-G3	PIN, CLEVIS, 5/16 X 15/16 LG.	3
75	10387-G3	PIN, COTTER, 3/32 X 3/4 LG	5
76	12416-G1	NYLON CLAMP	2
77	70264-G01	BRAKE PEDAL ASSEMBLY (INCLUDES ITEMS 78 - 88) VEHICLES WITHOUT BRAKE LIGHTS	1
78	11737-G1	SPRING, TORSION PARK BRAKE	2
79	12064-G1	PUSHNUT, 5/16	1
80			
81	15932-G2	PIN, PARK BRAKE	1
82	70259-G01	BRAKE PEDAL	1
83			
84	70274-G01	BRAKE/PARK BRAKE PEDAL PAD KIT (INCLUDES ITEMS 85 - 87)	1
85	*	PAD, BRAKE PEDAL	1
86	*	PAD, PARK BRAKE PEDAL	1
87	16409-G1	RIVET, 3/8 X 15/32 LG	9


BRAKE LINKAGE

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
88	70254-G01	PARK BRAKE PEDAL	1
89	70098-G01	PIVOT, KICK OFF CAM	1
90			
91	10387-G3	PIN, COTTER, 3/32 X 3/4 LG	2
92	00559-G8	WASHER, 5/16	2
93	20835-G1	WASHER, TEFLON	2
94			
95	17838-G1	BEARING	2
96	70097-G01	LINK, PARK BRAKE KICK-OFF	1
		·	

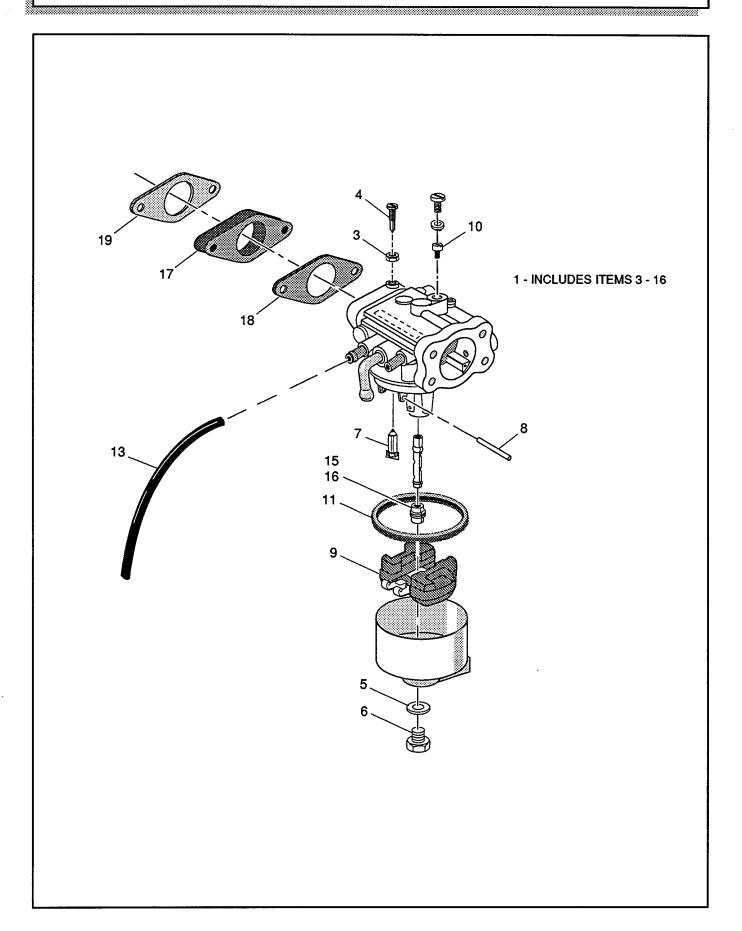

When ordering parts, please specify the model and serial number of the product. * Indicates a component that is not available as an individual part. G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26645-G01	CARBURETOR ASSEMBLY (INCLUDES ITEMS 3 - 16)	. 1
2			
3	26847-G01	NUT, PILOT SCREW	. 2
4	26835-G01	SCREW, PILOT	1
5	26838-G01	GASKET, BOWL SCREEN	. 1
6	26839-G01	SCREW, BOWL	1
7	26647-G01	VALVE, NEEDLE	1
8	26840-G01	PIN, FLOAT	1
9	26648-G01	FLOAT	1
10	26649-G01	JET, PILOT (#48)	. 1
11	26843-G01	GASKET, FLOAT BOWL	. 1
12			
13	26650-G01	TUBE, CARBURETOR VENT	2
14			
15	26646-G02	JET, MAIN (#84)	1
16	26646-G03	JET, MAIN (#76) HIGH ALTITUDE - ABOVE 5,000 FEET	1
17	26637-G01	INSULATOR, CARBURETOR	1
18	26725-G01	GASKET, CARBURETOR MOUNT	. 1
19	26726-G01	GASKET, CARBURETOR MOUNT	1
			1

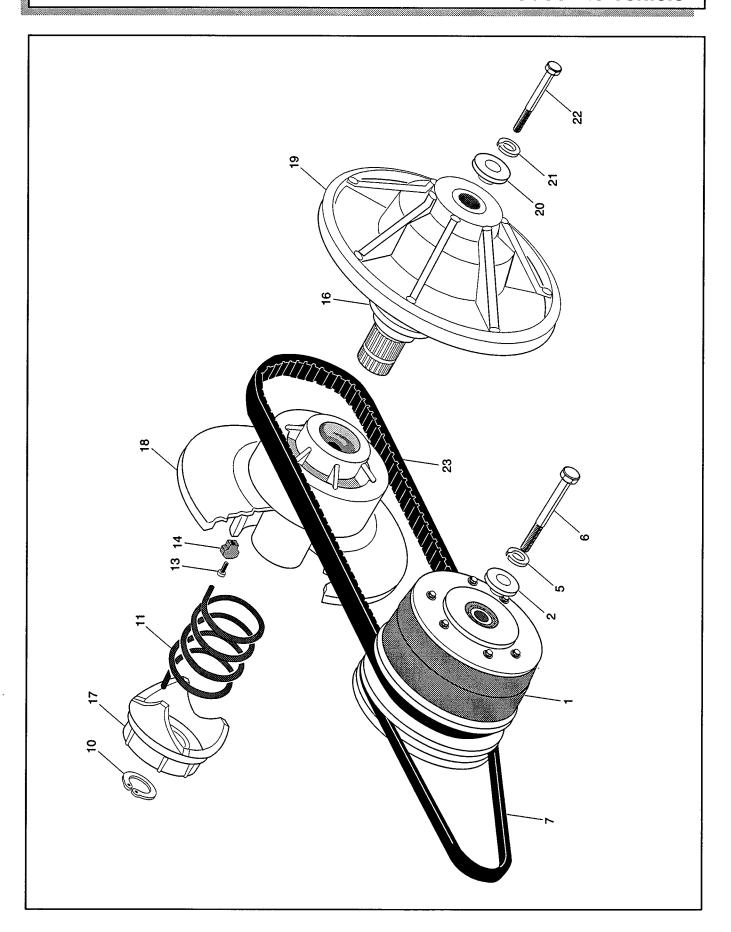


When ordering parts, please specify the model and serial number of the product.
* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26952-G01	DRIVE CLUTCH	. 1
2	23213-G1	WASHER, PILOT	1
3			
4			
5	00566-G2	WASHER, LOCK, 7/16	. 1
6	00473-G9	BOLT, 7/16 - 20 X 6 1/2 LG	. 1
7	26414-G01	BELT, STARTER / GENERATOR	. 1
8			
9	26301-G02	DRIVEN CLUTCH ASSEMBLY (INCLUDES ITEMS 10 - 19)	. 1
10	27270-G01	RETAINING RING, HEAVY DUTY	. 1
11	26304-G01	SPRING, COMPRESSION	. 1
12			
13	00979-G01	SCREW, #10 - 24	. 3
14	26479-G01	RAMP BUTTON	. з
15			
16	24600-G1	WASHER, SPACER	. 1
17	*	CAM	. 1
18	*	SHEAVE, MOVABLE	. 1
19	*	SHEAVE AND POST	. 1
20	22496-G1	WASHER, RETAINING	. 1
21	00565-G8	WASHER, LOCK, 5/16	. 1
22	00441-G8	BOLT, 5/16 - 18 X 4 LG	. 1
23	72024-G01	BELT, DRIVE	. 1
24	**	PULLER, DRIVE CLUTCH	. AR
·		** SEE SERVICE ACCESSORIES AND SPECIAL TOOLS	

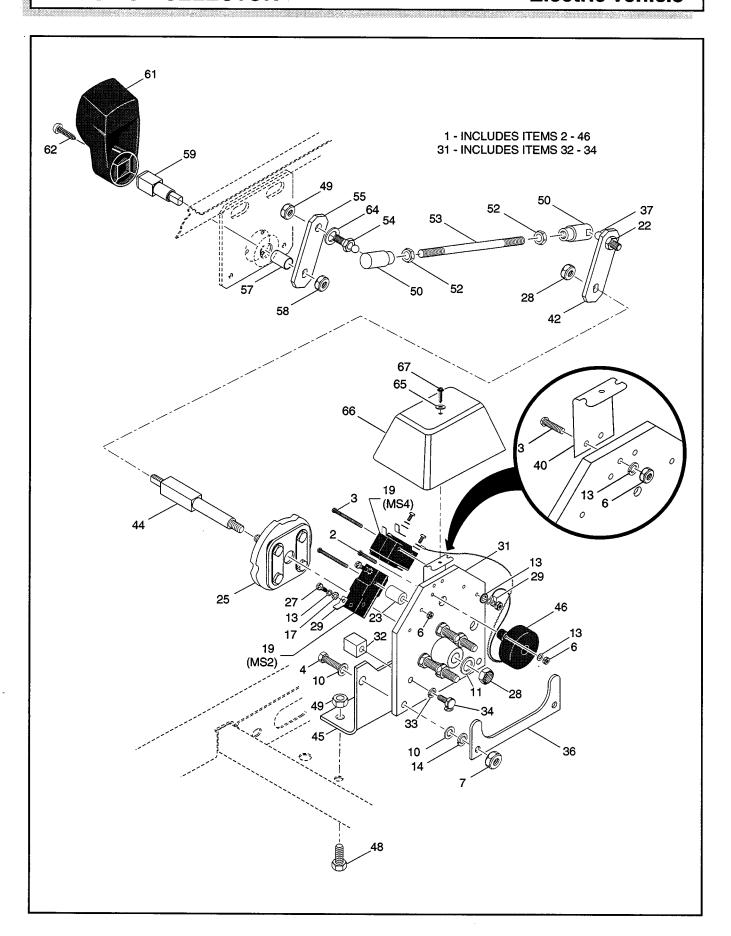

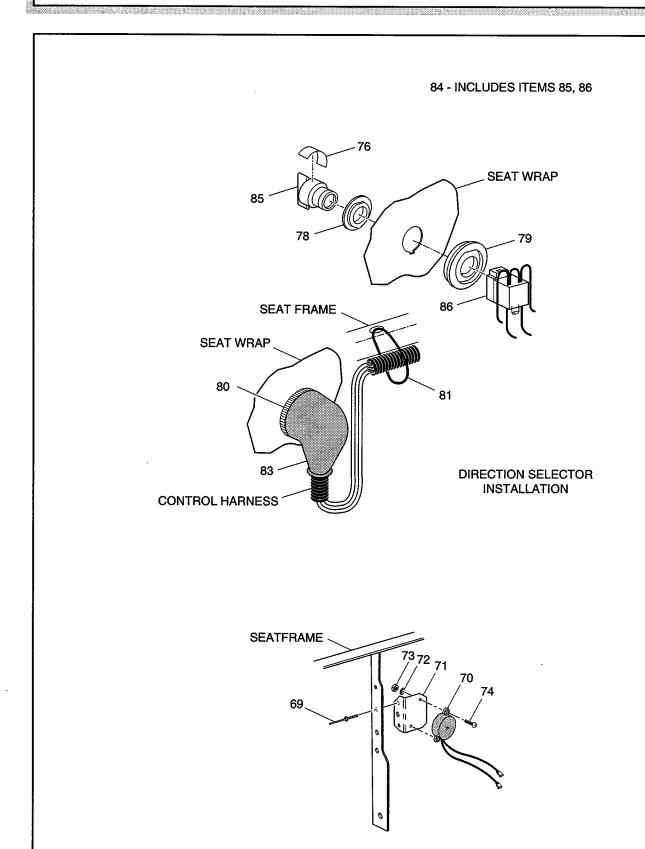

BUZZER ASSEMBLY INSTALLATION

When ordering parts, please specify the model and serial number of the product.

2 00138-G4 SCREW, #6 - 32 X 1/2 LG. 3 3 00139-G8 SCREW, #6 - 32 X 2 LG. 4 4 00414-G8 BOLT, 1/4 - 20 X 1 LG. 2 5 6 00525-G5 NUT, #6 - 32	ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
3	1	73036-G01	DIRECTION SELECTOR ASSEMBLY (INCLUDES ITEMS 2 - 46)	1
4 00414-G8 BOLT, 1/4 - 20 X 1 LG. 2 5 00525-G5 NUT, #6 - 32	2	00138-G4	SCREW, #6 - 32 X 1/2 LG	3
5 6 00525-G5 NUT, #6 - 32	3	00139-G8	SCREW, #6 - 32 X 2 LG	4
6 00525-G5 NUT, #6 - 32	4	00414-G8	BOLT, 1/4 - 20 X 1 LG	2
7 00532-G1 NUT, 1/4 - 20	5			
8 9 10 00559-G7 WASHER, 1/4	6	00525-G5	NUT, #6 - 32	8
9 10 00559-G7 WASHER, 1/4	7	00532-G1	NUT, 1/4 - 20	2
10 00559-G7 WASHER, 1/4	8			
11 00560-G1 WASHER, 3/8	9			
12 13 00565-G3 WASHER, LOCK, #6 8 14 00565-G7 WASHER, LOCK, 1/4 2 15 16 17 00567-G3 WASHER, LOCK, #6 4 18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4 2 20 21 22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	10	00559-G7	WASHER, 1/4	4
13 00565-G3 WASHER, LOCK, #6 8 14 00565-G7 WASHER, LOCK, 1/4 2 15 16 4 17 00567-G3 WASHER, LOCK, #6 4 18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4 2 20 21 2 22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	11	00560-G1	WASHER, 3/8	1
14 00565-G7 WASHER, LOCK, 1/4 2 15 16 4 17 00567-G3 WASHER, LOCK, #6 4 18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4 2 20 21 22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	12			
15 16 17 00567-G3 WASHER, LOCK, #6	13	00565-G3	WASHER, LOCK, #6	8
16 17 00567-G3 WASHER, LOCK, #6 4 18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4 2 20 21 22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	14	00565-G7	WASHER, LOCK, 1/4	2
17 00567-G3 WASHER, LOCK, #6 4 18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4 2 20 21 22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	15			
18 19 10606-G2 SWITCH LIMIT, MS2 AND MS4	16			
19 10606-G2 SWITCH LIMIT, MS2 AND MS4	17	00567-G3	WASHER, LOCK, #6	4
20	18	,		
21 22 11098-G9 NUT, LOCK, 5/16 - 24	19	10606-G2	SWITCH LIMIT, MS2 AND MS4	
22 11098-G9 NUT, LOCK, 5/16 - 24 1 23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	20			
23 12806-G1 SPACER 4 24 25 12835-G1 CAM 1 26 27 * SCREW 4 28 14390-G1 NUT, LOCK, 3/8 - 24 2	21		·	
24 1 25 12835-G1 CAM	22	11098-G9	NUT, LOCK, 5/16 - 24	1
25	23	12806-G1	SPACER	4
26 27	24			
27 * SCREW	25	12835-G1	CAM	1
28 14390-G1 NUT, LOCK, 3/8 - 24	26			
	27	*	SCREW	4
29 14628-G1 TAB. FASTON. 5/16 X 5/16	28	14390-G1	NUT, LOCK, 3/8 - 24	2
1 1	29	14628-G1	TAB, FASTON, 5/16 X 5/16	
30	30			

DIRECTION SELECTOR

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	14651-G1	CONTACT BOARD ASSEMBLY (INCLUDES ITEMS 32 - 34)	. 1
32	24940-G1	STOP	. 2
33	00565-G7	WASHER, LOCK, 1/4	. 2
34	00414-G6	BOLT, 1/4 - 20 X 3/4 LG.	. 2
35			
36	15461-G1	BRACKET, MOUNTING SUPPORT	. 1
37	15944-G3	BALL, BALL JOINT	. 1
38	:		
39			
40	73048-G01	BRACKET, COVER	. 1
41			
42	70232-G01	ARM, SHIFT LINKAGE	. 1
43			
44	73027-G01	SHAFT, DIRECTION SELECTOR	. 1
45	73031-G01	BRACKET, DIRECTION SELECTOR MOUNTING	. 1
46	73037-G01	BUZZER, REVERSE WARNING	. 1
47			
48	00438-G8	BOLT, 5/16 - 18 X 3/4 LG.	. 2
49	11098-G9	NUT, LOCK, 5/16 - 24	. 2
50	14444-G3	SOCKET, BALL JOINT	. 2
51			
52	00544-G4	NUT, 5/16 - 24	. 2
53	10697-G8	ROD, LINKAGE	. 1
54	15944-G3	STUD, JOINT BALL	. 1
55	70232-G02	ARM, SHIFT LINKAGE	. 1
56			
57	25664-G2	BEARING	. 1
58	14390-G1	NUT, LOCK, 3/8 - 24	. 1
59	70233-G01	SHAFT, DIRECTION SELECTOR	. 1
60			

DIRECTION SELECTOR

Electric Vehicle


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	71905-G01	HANDLE, DIRECTION SELECTOR	1
62	00740-G4	SCREW, STAINLESS STEEL, #10 - 32 X 1/2 LG	1
63			
64	00559-G8	WASHER, 5/16	1
65	16469-G7	WASHER, FENDER, STAINLESS STEEL	1
66	73049-G01	COVER, DIRECTION SELECTOR	1
67	00114-G6	SCREW, 1/4 - 14 x 3/4 LG	1
68			
69	14601-G16	RIVET, 5/32 (ITEMS 69 - 86 FOR USE ON DCS MODEL ONLY)	2
70	73037-G02	BUZZER	1
71	32043-G2	BRACKET, BUZZER	1
72	00565-G3	WASHER, LOCK, #6	2
73	00525-G5	NUT, #6 - 32	2
74	00138-G4	SCREW, #6 - 32 X 1/2 LG	2
75			
76	73127-G01	LABEL, DIRECTION SELECTOR	1
77			
78	73134-G01	ADAPTER, SEAT WRAP	1
79	73133-G01	ADAPTER, DIRECTION SELECTOR SWITCH	1
80	31539-G1	CLAMP, NYLON	1
81	17618-G1	CLAMP, NYLON	2
82			
83	73130-G01	BOOT, RUBBER	1
84	73128-G01	KNOB, DIRECTION SELECTOR (INCLUDES ITEMS 85 - 86)	1
85	73128-G02	KNOB, DIRECTION SELECTOR	1
86	73128-G03	BLOCK, CONTACT SWITCH	1

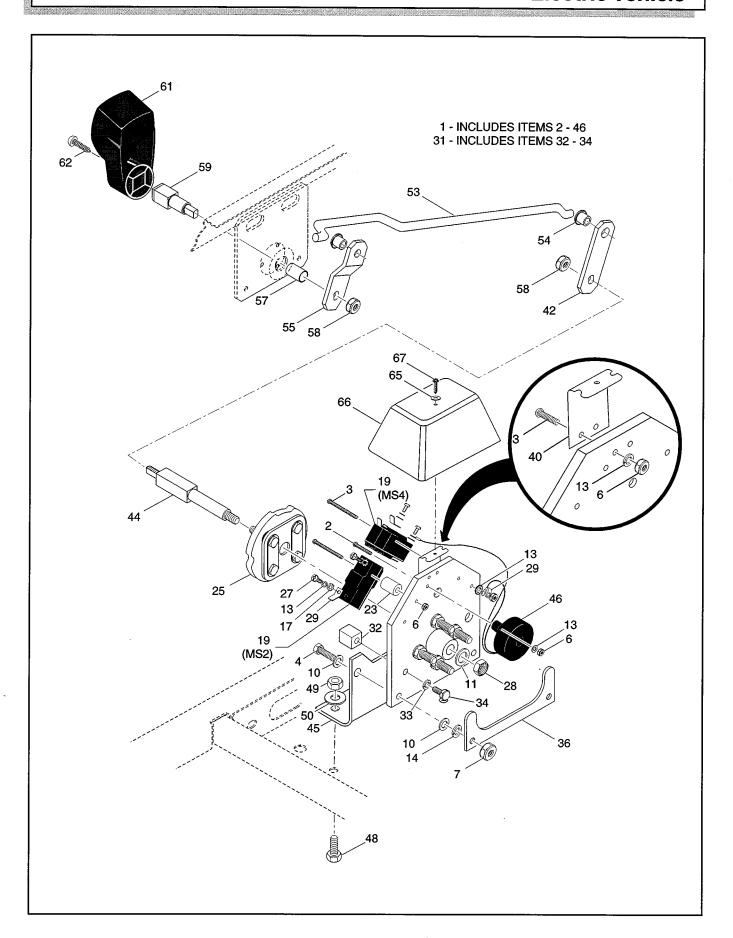

DIRECTION SELECTOR

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	73036-G01	DIRECTION SELECTOR ASSEMBLY (INCLUDES ITEMS 2 - 46)	. 1
2	00138-G6	SCREW, #6 - 32 X 3/4 LG	. 3
3	00139-G8	SCREW, #6 - 32 X 2 LG	. 4
4	00414-G8	BOLT, 1/4 - 20 X 1 LG	. 2
5			
6	00525-G5	NUT, #6 - 32	. 8
7	00532-G1	NUT, 1/4 - 20	. 2
8			
9			
10	00559-G7	WASHER, 1/4	. 4
11	00560-G1	WASHER, 3/8	. 1
12			
13	00565-G3	WASHER, LOCK, #6	8
14	00565-G7	WASHER, LOCK, 1/4	. 2
15			
16			
17	00567-G3	WASHER, LOCK, #6	. 4
18			
19	10606-G2	SWITCH LIMIT, MS2 AND MS4	. 2
20			
21			
22			
23	12806-G1	SPACER	. 4
24			
25	12835-G1	CAM	. 1
26			
27	*	SCREW	. 4
28			
29	14628-G1	TAB, FASTON, 5/16 X 5/16	. 4
30			

When ordering parts, please specify the model and serial number of the product.

^{*} Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	14651-G1	CONTACT BOARD ASSEMBLY (INCLUDES ITEMS 32 - 34)	1
32	24940-G1	STOP	2
33	00565-G7	WASHER, LOCK, 1/4	2
34	00414-G6	BOLT, 1/4 - 20 X 3/4 LG	2
35			
36	15461-G1	BRACKET, MOUNTING SUPPORT	1
37	:		
38			
39			
40	73048-G03	BRACKET, COVER	1
41			
42	70232-G01	ARM, SHIFT LINKAGE	1
43			
44	73027-G01	SHAFT, DIRECTION SELECTOR	1
45	73031-G01	BRACKET, DIRECTION SELECTOR MOUNTING	1
46	73037-G01	BUZZER, REVERSE WARNING	1
47			
48	00438-G6	BOLT, 5/16 - 18 X 3/4 LG.	2
49	11098-G6	NUT, LOCK, 5/16 - 18	2
50	00571-G2	WASHER, 5/16	2
51		·	
52			
53	70313-G01	ROD, LINKAGE	1
54	22754-G3	BUSHING	1
55	70334-G01	ARM, BENT SHIFT LINKAGE	1
56			
57	25664-G2	BEARING	1
58	14390-G1	NUT, LOCK, 3/8 - 24	2
59	70233-G01	SHAFT, DIRECTION SELECTOR	1
60			


Electric Vehicle

DIRECTION SELECTOR

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	71905-G01	HANDLE, DIRECTION SELECTOR	1
62	00740-G4	SCREW, STAINLESS STEEL, #10 - 32 X 1/2 LG	1
63			
64			
65	16469-G7	WASHER, FENDER, STAINLESS STEEL	1
66	73049-G01	COVER, DIRECTION SELECTOR	1
67	00114-G6	SCREW, 1/4 - 14 x 3/4 LG	1

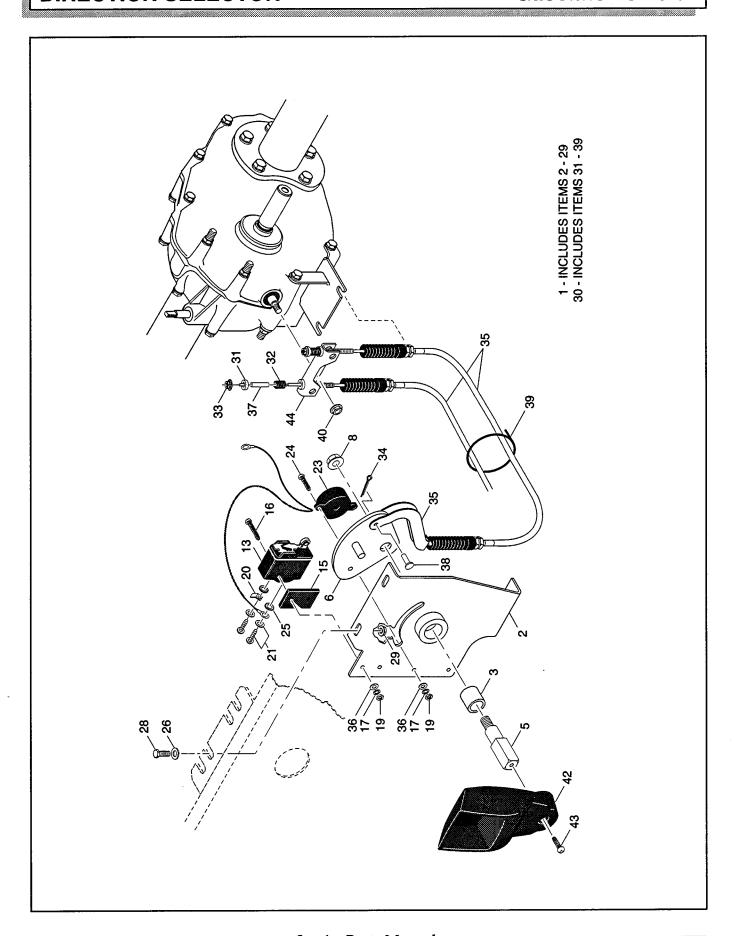

DIRECTION SELECTOR


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	25700-G03	DIRECTION SELECTOR ASSEMBLY (INCLUDES ITEMS 2 - 29)	. 1
2	25684-G01	BRACKET, DIRECTION SELECTOR	. 1
3	25664-G1	BUSHING	. 1
4			
5	27537-G01	SHAFT, DIRECTION SELECTOR	. 1
6	25745-G01	CAM, DIRECTION SELECTOR	. 1
7			
8	14390-G1	NUT, LOCK, 3/8 - 24	. 1
9			
10			
11			
12			
13	10606-G1	MICRO SWITCH	1
14			
15	27151-G1	SPACER, MICRO SWITCH	1
16	00645-G2	SCREW, #6 - 32 X 1 1/4 LG.	2
17	00565-G3	WASHER, LOCK, #6	4
18			
19	00525-G5	NUT, #6 - 32	4
20	14628-G1	TAB, FASTON	1
21	*	SCREW AND WASHER ASSEMBLY	2
22		·	
23	17818-G1	BUZZER, REVERSE WARNING	1
24	00138-G5	SCREW, #6 - 32 X 5/8 LG	2
25	00567-G3	WASHER, LOCK, #6	2
26	00559-G7	WASHER, 1/4	2
27			
28	00414-G6	SCREW, 1/4 - 20 X 3/4 LG.	2
29	11027-G2	NUT, LOCK, 1/4 - 20	2
30	27170-G01	CABLE KIT (INCLUDES ITEMS 31 - 39)	2


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	25727-G01	WASHER, CUP	4
32	27764-G01	SPRING	2
33	11098-G7	NUT, #10 - 24	2
34	10387-G8	PIN, COTTER, 1/16 X 3/4 LG	2
35	25691-G01	SHIFTER CONTROL CABLE	2
36			
37	23726-G5	SPACER	2
38	23176-G1	PIN, CLEVIS, 5/16 X 1/2 LG	2
39	17618-G1	NYLON CLAMP	1
40	26830-G01	NUT, SHIFTER LEVER, M8 X 1.25 MM	1
41			
42	71905-G01	HANDLE, DIRECTION SELECTOR	1
43	00740-G4	SCREW, STAINLESS STEEL, #10 - 32 X 1/2 LG	1
44	25946-G01	PIVOT ARM	1
			`
		•	

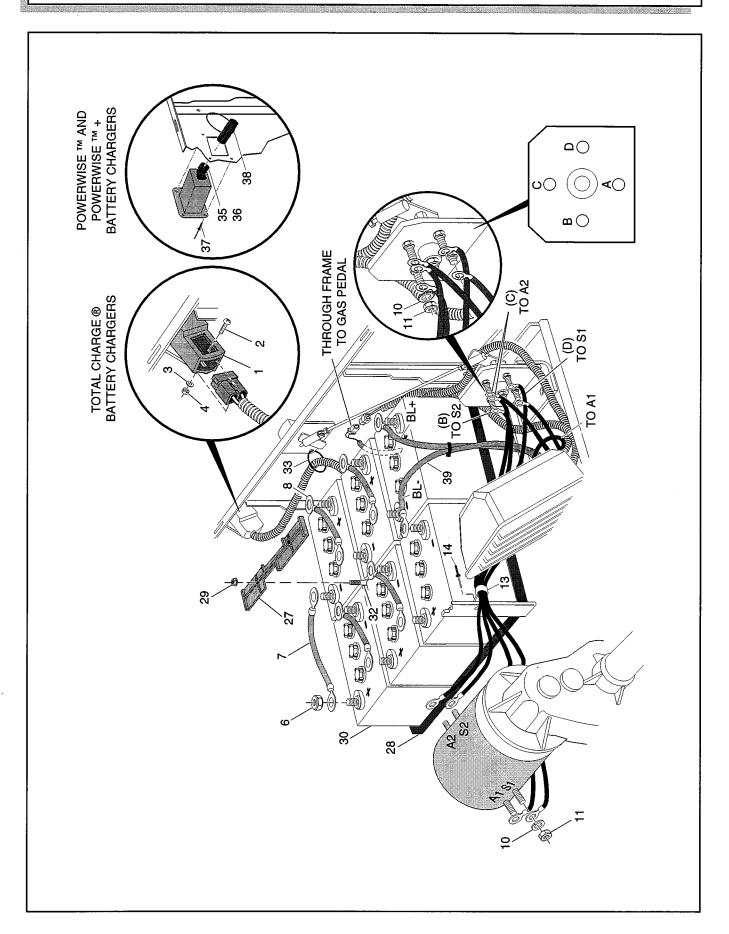

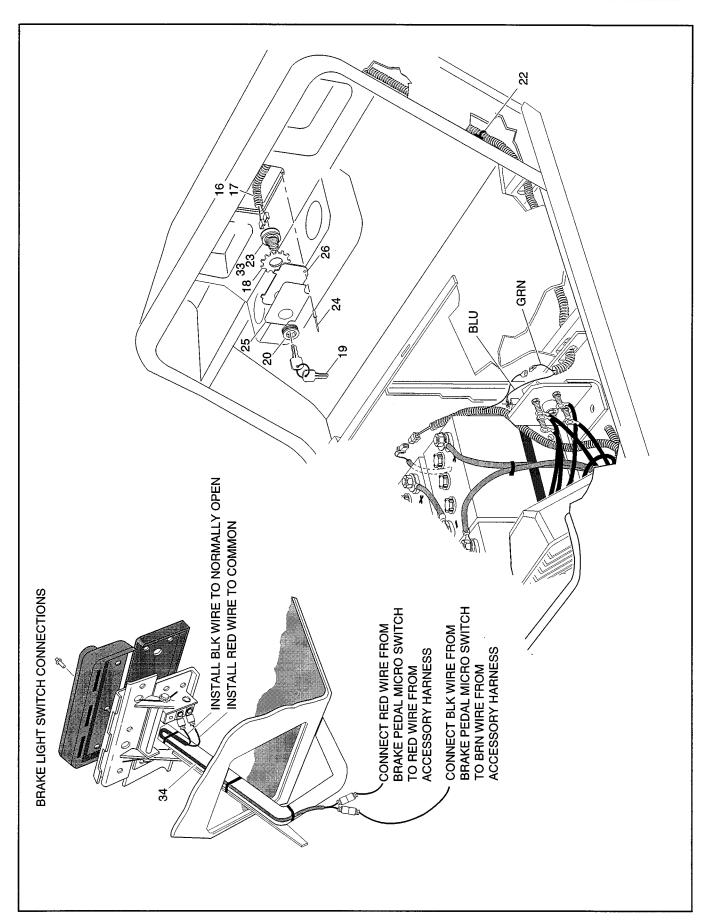

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	18724-G1	RECEPTACLE HOLDER	1
2	00645-G2	SCREW, #6 - 32 X 1 1/4 LG	2
3	00559-G3	WASHER, #6	2
4	14390-G9	NUT, LOCK, #6 - 32	2
5			
6	00702-G2	NUT, 5/16 - 24	12
7	25972-G32	WIRE	1
8	25972-G40	WIRE	4
9			
10	00567-G8	WASHER, LOCK, 5/16	8
11	00532-G3	NUT, 5/16 - 18	8
12			
13	27327-G01	CLAMP, TWISTED	2
14	10570-G11	RIVET, STAINLESS STEEL, 5/16	1
15			
16	73145-G01	HARNESS, KEY SWITCH (DCS MODEL ONLY)	1
17	73041-G01	HARNESS, KEY SWITCH (FLEET)	1
18	00568-G6	WASHER, LOCK, 3/4	1
19	17062-G1	KEY, IGNITION (SET)	AR
20	17137-G1	NUT, FACE	1
21			
22	17618-G1	CLAMP, NYLON	1
23	17421-G1	IGNITION SWITCH KIT, INCLUDES ALL MOUNTING HARDWARE (FOR FREEDOM SEE SECTION S - HORN AND LIGHTING)	1
24	33623-G02	RIVET, DRIVE	2
25	71145-G01	DECAL, CONSOLE INSERT PLATE	1
26	73030-G01	PLATE, CONSOLE INSERT (KEY ONLY)	1
27	70045-G01	RETAINER, BATTERY	1
28	70046-G01	BATTERY RACK	1
29	11027-G1	NUT, LOCK, 5/16 - 18	2


Electric Vehicle


ELECTRICAL SYSTEM

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

,	T NO. 1 2 3 4 5 DESCRIPTION	QTY.
30 XXXXX-G**	XX-G** BATTERY, 6 VOLT	6
31		
32 70121-G01	1-G01 BOLT, HOLD DOWN	2
33 17618-G1	8-G1 CLAMP, NYLON	1
34 24605-G1	5-G1 WIRE HARNESS, BRAKE	1
35 73063-G01	3-G01 WIRE HARNESS, STANDARD CHARGER RECEPTACLE (COMPLETE)	1
36 73149-G01	9-G01 WIRE HARNESS, CHARGER RECEPTACLE (ITEMS 36 - 38 ARE FOR USE ON DCS MODEL ONLY)	1
37 14601-G10	1-G10 RIVET, 5/32	4
38 17618-G1	8-G1 CLAMP, NYLON	3
39 25972-G32	2-G32 WIRE, BL- TO B	1

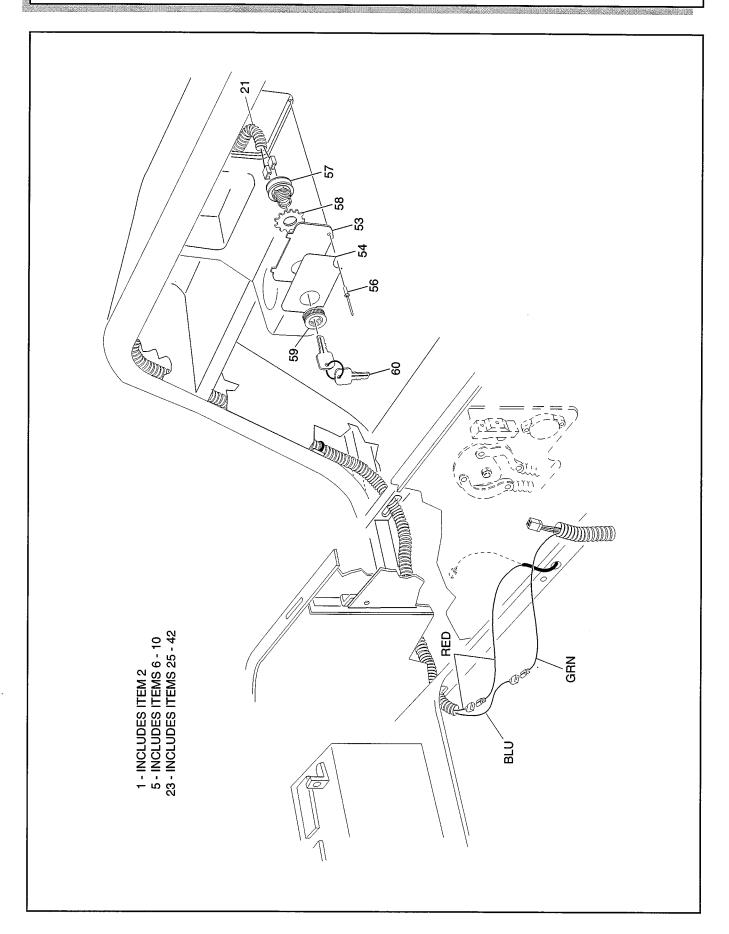

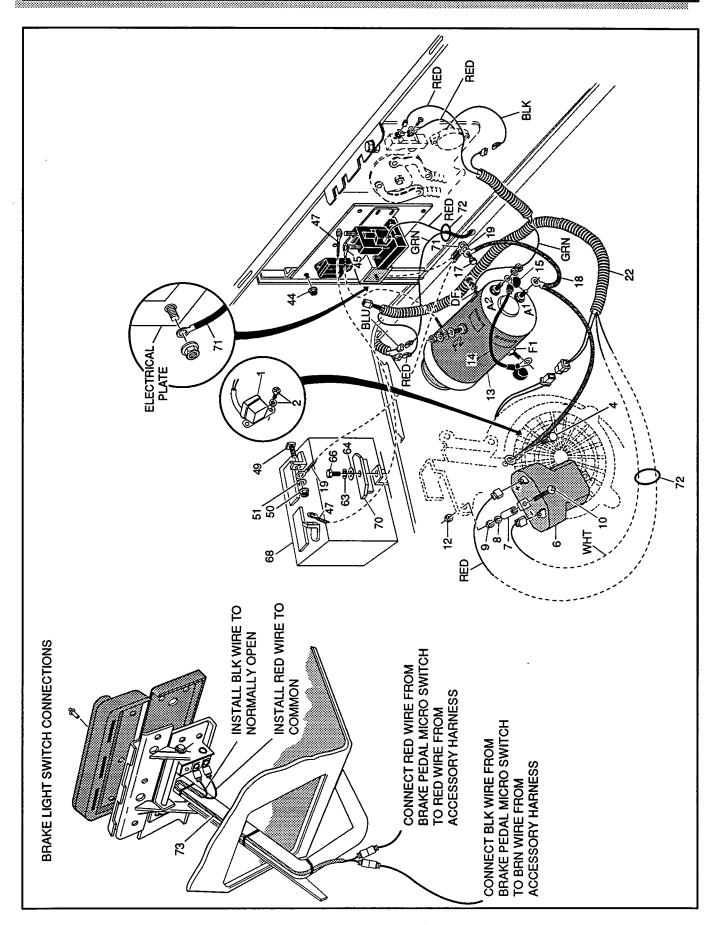

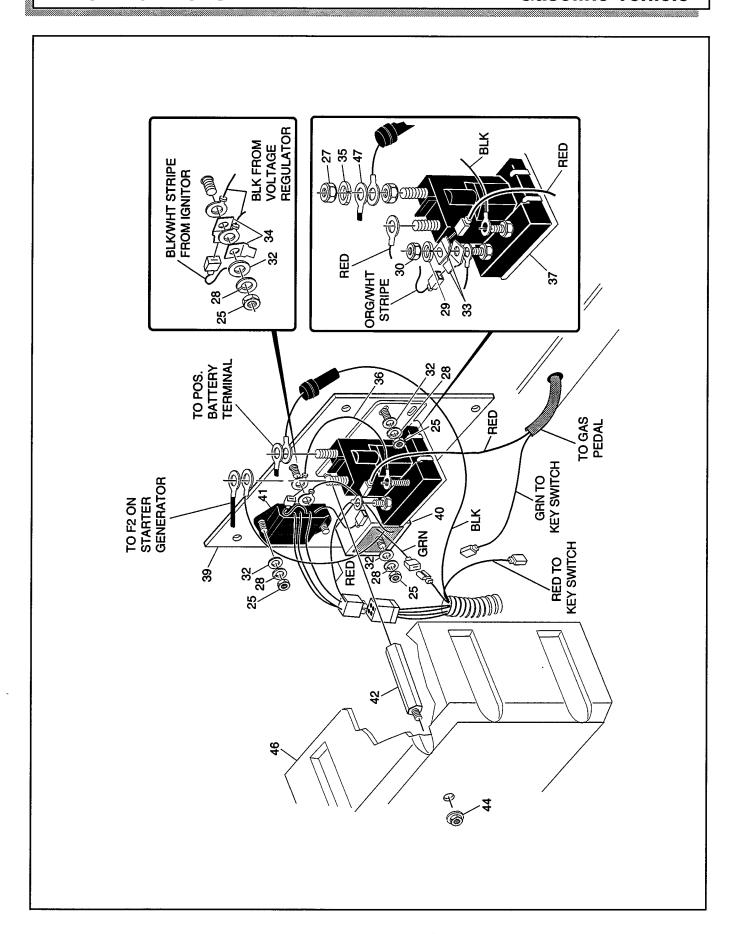


ELECTRICAL SYSTEM

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26651-G01	IGNITION PICKUP ASSEMBLY (INCLUDES ITEM 2)	1
2	26707-G01	BOLT AND WASHER ASSEMBLY, M5 X .8 X 10 MM LG	1
3			
4	26676-G01	SCREW, M6 X 1 X 23 MM LG	. 1
5	26652-G01	IGNITION COIL ASSEMBLY (INCLUDES ITEMS 6 - 10)	. 1
6	*	COIL, IGNITION	. 1
7	*	SPACER	1
8	*	WASHER, LOCK	. 1
9	*	NUT	. 1
10	*	SCREW	. 1
11			
12	13632-G1	NUT, M6 X 1 LG	. 2
13	xxxxx-xx	STARTER / GENERATOR (SEE SECTION AA FOR PARTS LIST AND QUANTITY)	. x
14	25887-G01	WIRE, F1 - A2	. 1
15	25682-G1	COVER, TERMINAL	. з
16			
17	00715-G3	BOLT, 5/16 - 18 X 1 1/4 LG	. 1
18	20294-G3	CABLE, GROUND	. 1
19	25972-G12	WIRE, B- GRD	. 1
20			
21	27778-G01	KEY SWITCH HARNESS	. 1
22	27777-G01	CONTROL HARNESS	. 1
23	27740-G03	ELECTRICAL PLATE ASSEMBLY (INCLUDES ITEMS 25 - 42)	. 1
24			
25	00532-G1	NUT, 1/4 - 20	. 5
26			
27	*	NUT, 5/16 - 24	. 2
28	00565-G7	WASHER, LOCK, 1/4	. 6
29	*	WASHER, LOCK, #10	. 2

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	*	NUT, #10 - 32	2
31			
32	00650-G7	WASHER, 1/4	6
33	12914-G1	TAB, FASTON, 5/16 x 5/16	2
34	12914-G2	TAB, FASTON, 3/8 x 13/32	2
35	*	WASHER, LOCK, 5/16	2
36	25978-G56	WIRE, 5 3/4" LG	1
37	27153-G01	SOLENOID	1
38			
39	27738-G01	PLATE, ELECTRONIC	1
40	27739-G01	VOLTAGE REGULATOR	1
41	27746-G01	IGNITOR ASSEMBLY	1
42	*	SPACER, COVER	1
43			
44	11027-G2	NUT, LOCK, 1/4 - 20	3
45	25972-G13	WIRE, SOL - F2	1
46	72004-G01	COVER, ELECTRICAL PLATE	1
47	25972-G33	WIRE, B+ - SOL	1
48			
49	*	BOLT, 5/16 X 3/4 LG	2
50	*	NUT, 5/16	2
51	*	WASHER, LOCK, 5/16	2
52			
53	73030-G01	PLATE, CONSOLE INSERT	1
54	71133-G01	DECAL, IGNITION SWITCH	1
55			
56	33623-G02	RIVET, DRIVE	2
57	17421-G1	IGNITION SWITCH KIT, INCLUDES ALL MOUNTING HARDWARE (FOR FREEDOM SEE SECTION S - HORN AND LIGHTING)	1
58	00568-G6	WASHER, LOCK, 3/4	1


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
59	17137-G1	NUT, FACE	. 1
60	17063-G1	KEY, IGNITION	AR
61			
62			
63	00565-G8	WASHER, LOCK, 5/16	1
64	00571-G2	WASHER, 5/16	1
65			
66	00952-G6	BOLT, 5/16 - 18 X 3/4 LG	1
67			
68	XXXXX-G**	BATTERY, 12 VOLT	1
69			
70	72101-G01	HOLD DOWN, BATTERY	. 1
71	25976-G11	WIRE	1
72	17618-G1	NYLON CLAMP	2
73	24605-G01	WIRE HARNESS, BRAKE	1
	:		
	•		

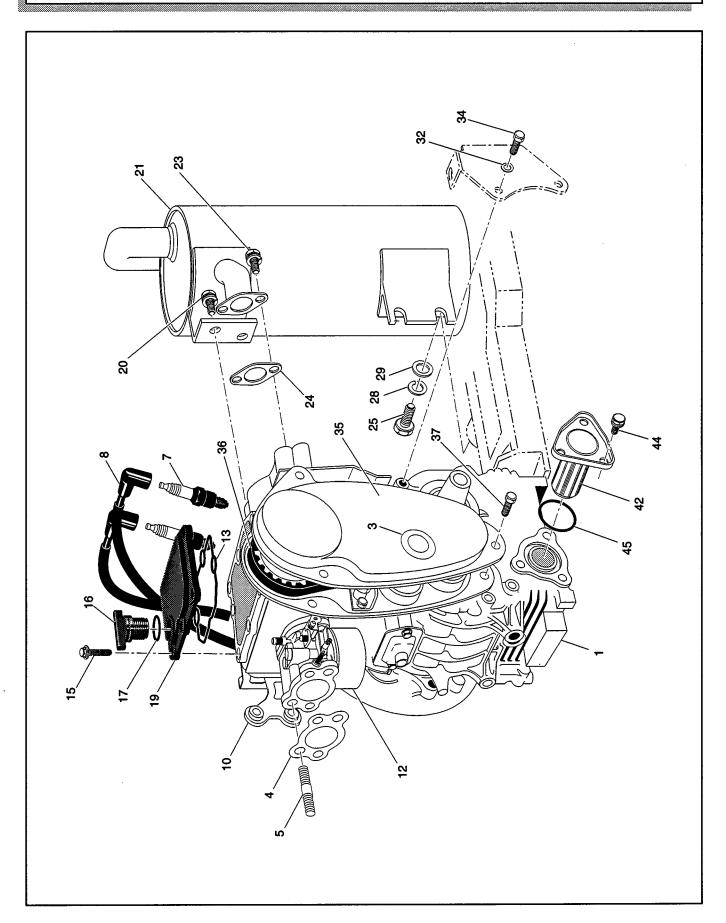

ENGINE AND MUFFLER

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	26700-G01	ENGINE	. 1
2			
3	26631-G01	GROMMET, TIMING BELT COVER	. 1
4	26727-G01	GASKET, CARBURETOR / AIR BOX	. 1
5	26667-G01	STUD	. 2
6	25523-G3	SPARK PLUG, RESISTIVE	AR
7	25523-G2	SPARK PLUG, NGK BP4ES	. 2
8	26733-G01	SPARK PLUG WIRE SET (2 WITH BOOTS)	. 1
9			
10	26657-G01	BRACKET, IGNITION COIL	. 1
11			
12	xxxxx-xx	CARBURETOR (SEE SECTION F FOR PART NUMBER AND QUANTITY	x
13	26719-G01	GASKET, VALVE COVER	. 1
14			
15	26676-G01	BOLT, FLANGED, M6 X 1 X 23 MM LG	. 6
16	26601-G01	CAP, OIL FILLER	. 1
17	26720-G01	"O" RING	. 1
18			
19	26600-G01	COVER, VALVE	. 1
20	25532-G1	BOLT AND WASHER, M8 X 1.25 X 18 MM LG	. 2
21	72019-G01	MUFFLER	. 1
22			
23	25532-G1	BOLT AND WASHER, M8 X 1.25 X 18 MM LG	. 2
24	25531-G1	GASKET, EXHAUST	. 1
25	00438-G8	BOLT, 5/16 - 18 X 1 LG	. 1
26			
27			
28	00565-G8	WASHER, LOCK, 5/16	. 1
29	00642-G8	WASHER, 5/16	. 1
	,		

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30			
31	25655-G01	BRACKET, PIVOT	1
32	00565-G8	WASHER, LOCK, 5/16	2
33			
34	00276-G6	SCREW, 5/16 - 24 X 3/4 LG	2
35	26630-G01	COVER, TIMING BELT	1
36	26626-G01	TIMING BELT	1
37	26678-G01	BOLT, M6 X 1 X 12 MM LG	3
38			
39			
40			
41			
42	26591-G01	FILTER, OIL	1
43			
44	26680-G01	BOLT AND WASHER, M6 X 1 X 12 MM LG	3
45	26710-G01	"O" RING, OIL FILTER	1
		·	
		_	

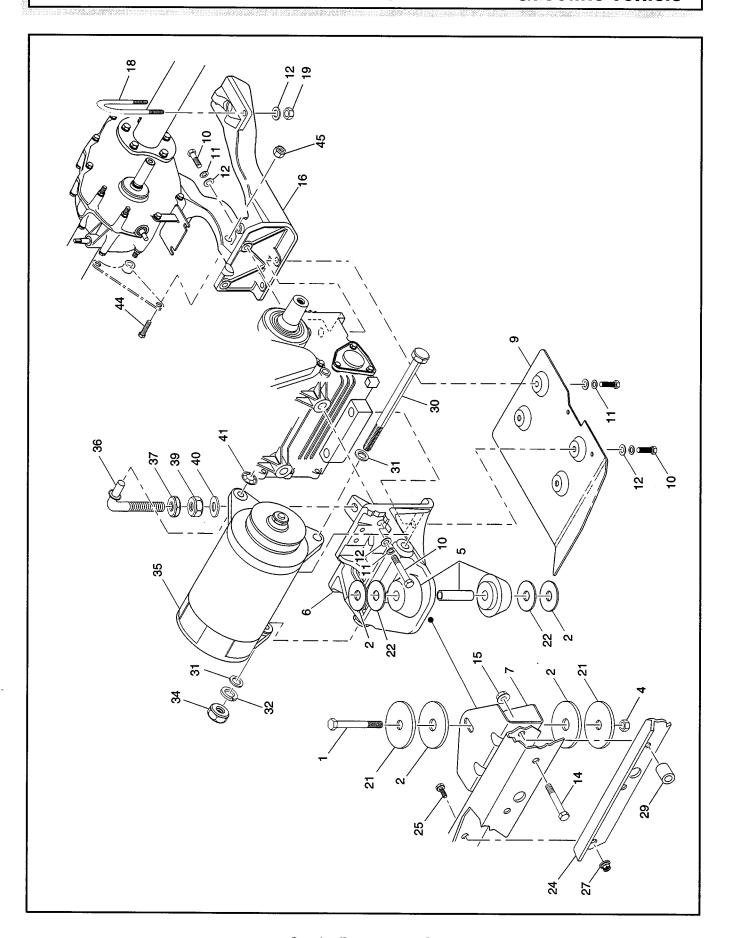

Gasoline Vehicle

ENGINE AND STARTER MOUNTING

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	00430-G4	SCREW, 3/8 - 16 X 4 1/2 LG	. 1
2	72050-G01	WASHER, PLASTIC	. 4
3			
4	11098-G5	NUT, LOCK, 3/8 - 16	. 1
5	72015-G01	MOUNT, ISOLATION	. 1
6	72010-G01	FRONT MOUNT CASTING	1
7	72018-G01	BRACKET, MOUNT	1
8			
9	27432-G02	ENGINE GUARD	. 1
10	00463-G4	SCREW, 7/16 - 14 X 1 1/2 LG	. 6
11	00566-G2	WASHER, LOCK, 7/16	. 6
12	00922-G3	WASHER, 7/16	. 6
13	:		
14	00428-G6	SCREW, 3/8 - 16 X 2 3/4 LG	2
15	12262-G1	NUT, LOCK, 3/8 - 16	. 2
16	72011-G01	REAR ENGINE MOUNT CASTING	. 1
17			
18	72035-G01	"U" - BOLT	. 2
19	00734-G1	NUT, LOCK, 7/16 - 14	. 4
20			
21	72051-G02	WASHER, 2.50 X .390 X .134	. 2
22	72051-G01	WASHER, 2.50 X .641 X .134	. 2
23			
24	70269-G01	BRACE, CROSSMEMBER	. 1
25	00715-G3	SCREW, 5/16 - 18 X 1 1/4 LG	. 2
26			
27	11027-G1	NUT, FLANGED LOCK, 5/16 - 18	. 2
28			
29	72016-G01	SPACER, ISOLATOR	. 2
30	00938-G4	SCREW, 1/2 - 13 X 8 LG	. 1

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	00560-G3	WASHER, 1/2	2
32	00566-G3	WASHER, LOCK, 1/2	1
33			
34	00533-G1	NUT, 1/2 - 13	1
35	27065-G01	STARTER / GENERATOR	1
36	72045-G01	STARTER / GENERATOR ADJUSTER	1
37	00544-G5	NUT, 3/8 - 16	1
38			
39	00532-G5	NUT, 3/8 - 16	1
40	00560-G1	WASHER, 3/8	1
41	12064-G1	NUT, PUSH, 5/16	1
42			
43	XXXXX-XX	DIFFERENTIAL (SEE REAR AXLE SECTION V FOR PART NUMBER AND QUANTITY)	×
44	00438-G8	BOLT, 5/16 - 18 X 1 LG.	1
45	11098-G6	NUT, LOCK, 5/16 - 18	1
		•	

Gasoline Vehicle


ENGINE AND STARTER MOUNTING



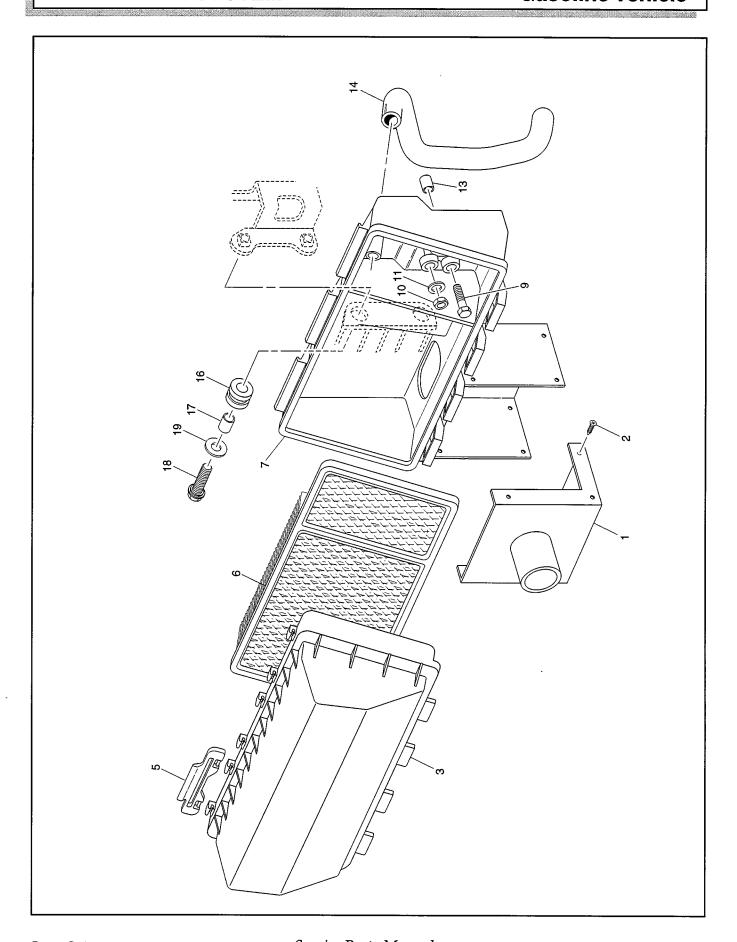

FILTERED AIR SYSTEM

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72146-G01	INLET COVER	. 1
2	00614-G5	SCREW, #8 - 18 X 5/8 LG	6
3	72143-G01	COVER, AIR FILTER	. 1
4			
5	72148-G01	LATCH, AIR FILTER	. 3
6	72144-G01	ELEMENT, AIR FILTER	. 1
7	72142-G01	HOUSING, AIR FILTER	. 1
8			
9	26676-G01	BOLT, M6 X 30 MM LG	. 2
10	13632-G1	NUT, M6 X 1	. 2
11	51400-G1	WASHER, LOCK, 6 MM	. 2
12			
13	23726-G6	SPACER, CARBURETOR MOUNT	4
14	72151-G01	HOSE, PCV	. 1
15			
16	72147-G01	GROMMET, HOUSING MOUNT	. 2
17	23726-G7	SPACER, HOUSING MOUNT	2
18	26671-G01	BOLT, WASHER, M6 X 1 X 30 MM LG.	. 2
19	26701-G01	WASHER, 6.5 X 20 X 1.6	. 2

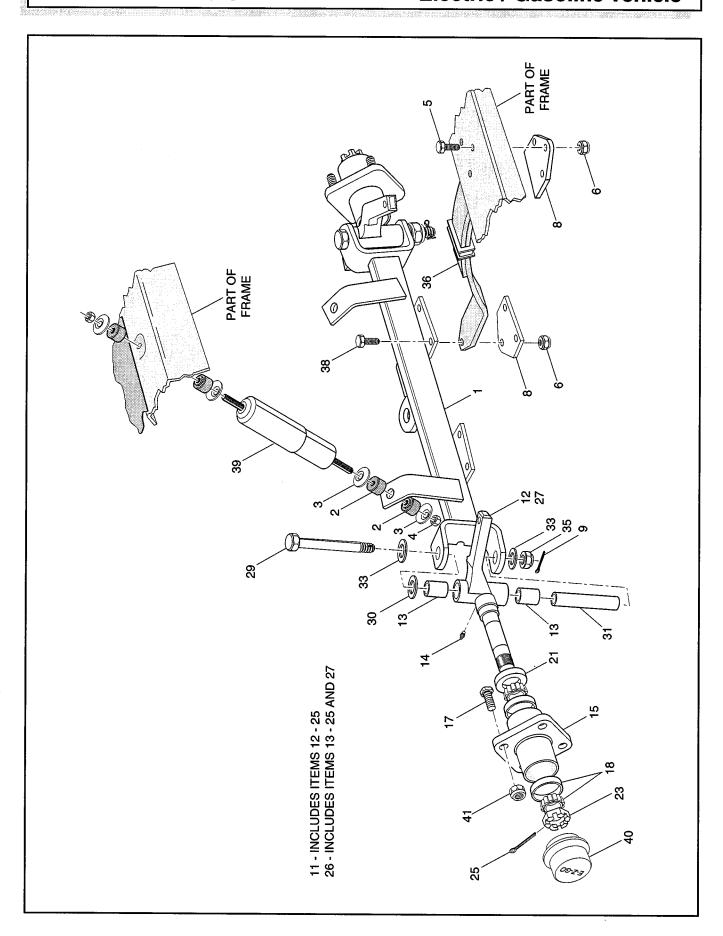

Electric / Gasoline Vehicle

FRONT SUSPENSION

THE USE OF NON UL PARTS WILL VOID AND UL LISTING.

When ordering parts, please specify the model and serial number of the product.

^{*} Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70001-G01	FRONT AXLE	. 1
2	10194-G1	BUSHING, RUBBER SHOCK ABSORBER	. 8
3	10435-G1	WASHER, SHOCK ABSORBER	. 8
4	00532-G6	NUT, 3/8 - 24	4
5	00463-G6	BOLT, 7/16 - 14 X 1 3/4 LG.	6
6	00734-G1	NUT, LOCK, 7/16 - 14	12
7			
8	70163-G02	PLATE, SPRING	. 4
9	10387-G2	PIN, COTTER, 3/32 X 1 LG	2
10			
11	70220-G01	SPINDLE ASSEMBLY, DRIVER'S SIDE (INCLUDES ITEMS 12 - 25)	. 1
12	*	SPINDLE, DRIVER'S SIDE	1
13	16623-G1	BEARING	. 2
14	18456-G1	GREASE FITTING	1
15	19058-G2	HUB, WHEEL	1
16			
17	19862-G1	WHEEL BOLT, 1/2 - 20	4
18	50892-G1	BEARING AND RACE ASSEMBLY (COMPLETE)	. 1
19			
20			
21	25146-G1	SEAL, GREASE	. 1
22			
23	12093-G1	NUT, SLOTTED, 17/32	. 1
24			
25	00798-G8	PIN, COTTER, 5/32 X 1 3/4 LG	. 1
26	70220-G02	SPINDLE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 13 - 25 AND 27)	. 1
27	*	SPINDLE, PASSENGER SIDE	. 1
28			
29	70327-G01	PIN, SPINDLE, 1/2 - 13 X 5 1/2 LG	. 2

FRONT SUSPENSION

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID AND UL LISTING.


When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	16982-G1	WASHER, THRUST	2
31	70328-G01	TUBE, SPINDLE PIN	2
32			
33	00571-G5	WASHER, 1/2	4
34			
35	14390-G6	NUT, LOCK, 1/2 -13	2
36	70049-G01	SPRING, LEAF	2
37			
38	00463-G4	BOLT, 7/16 - 14 X 1 1/2 LG	6
39	70324-G01	SHOCK ABSORBER	2
40	12091-G1	CAP, SPINDLE	2
41	14723-G1	NUT, LUG, 1/2 - 20	8
:			




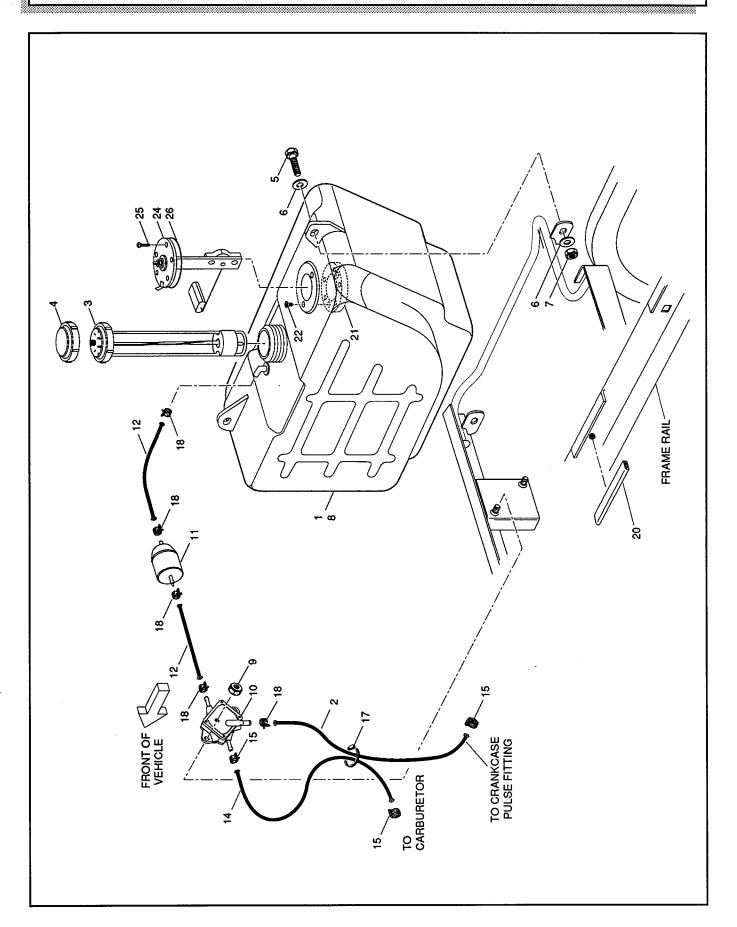



ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72092-G01	FUEL TANK, STANDARD	. 1
2	27184-G06	PULSE TUBE, 16" LG.	1
3	14099-G2	FUEL TANK CAP, STANDARD (WITH GAUGE)	1
4	20039-G1	FUEL TANK CAP, FREEDOM ONLY (WITHOUT GAUGE)	1
5	00438-G8	BOLT, 5/16 - 18 X 1 LG	2
6	00559-G8	WASHER, 5/16	4
7	11098-G6	NUT, LOCK, 5/16 - 18	. 2
8	72092-G02	FUEL TANK (FREEDOM)	1
9	11027-G2	NUT, LOCK, 1/4 - 20	2
10	72021-G01	FUEL PUMP	1
11	72084-G01	FILTER, FUEL	1
12	17470-G**	FUEL SYSTEM TUBE, 3 1/4 LG. (CUT TO LENGTH)	. AR
13			
14	17470-G**	FUEL SYSTEM TUBE, 16 LG. (CUT TO LENGTH)	. AR
15	11391-G4	CLAMP, HOSE	. 3
16			
17	17618-G1	CLAMP, NYLON	. 1
18	18292-G1	CLAMP, TUBING	. 5
19			
20	32372-G6	VINYL TRIM, 6 1/4 LG	. 1
21	72229-G01	ADAPTER, FUEL LEVEL SENDER (FREEDOM)	. 1
22	72230-G01	SCREW, #6 - 32 X 1/4 LG. (FREEDOM)	. 2
23			
24	20048-G2	SENDER, FUEL LEVEL, FREEDOM (INCLUDES ITEMS 25, 26)	. 1
25	*	SCREW	. 5
26	*	GASKET	. 1

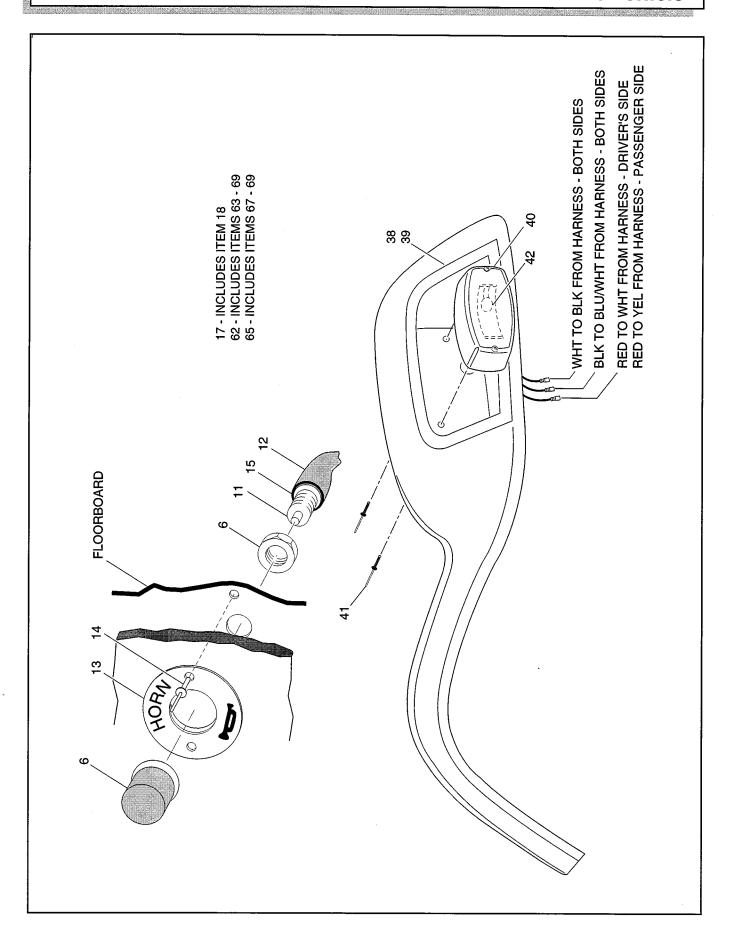


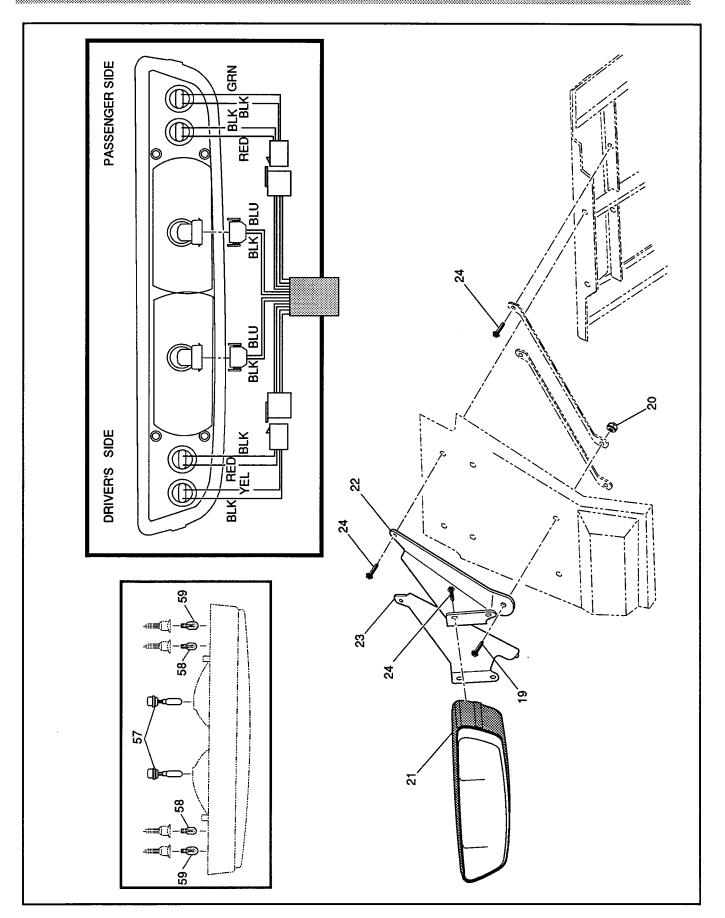


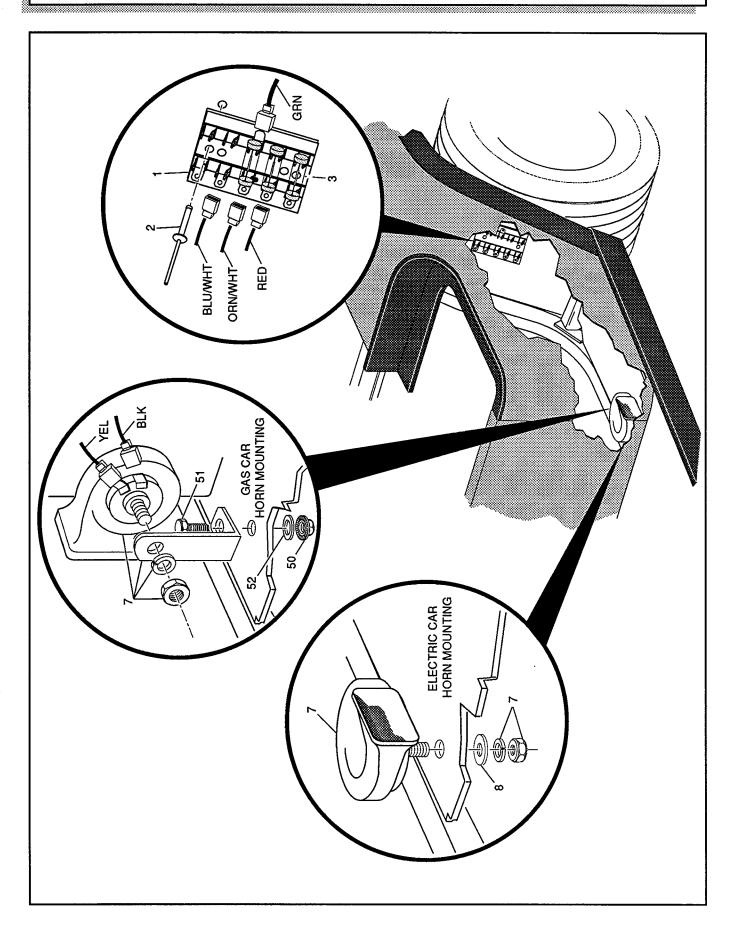

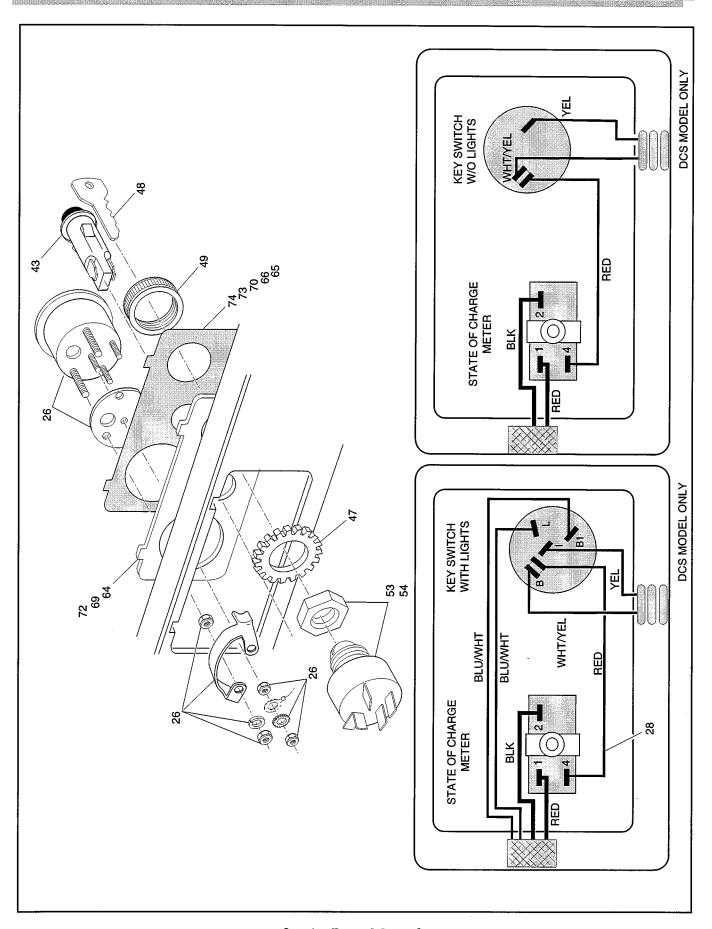

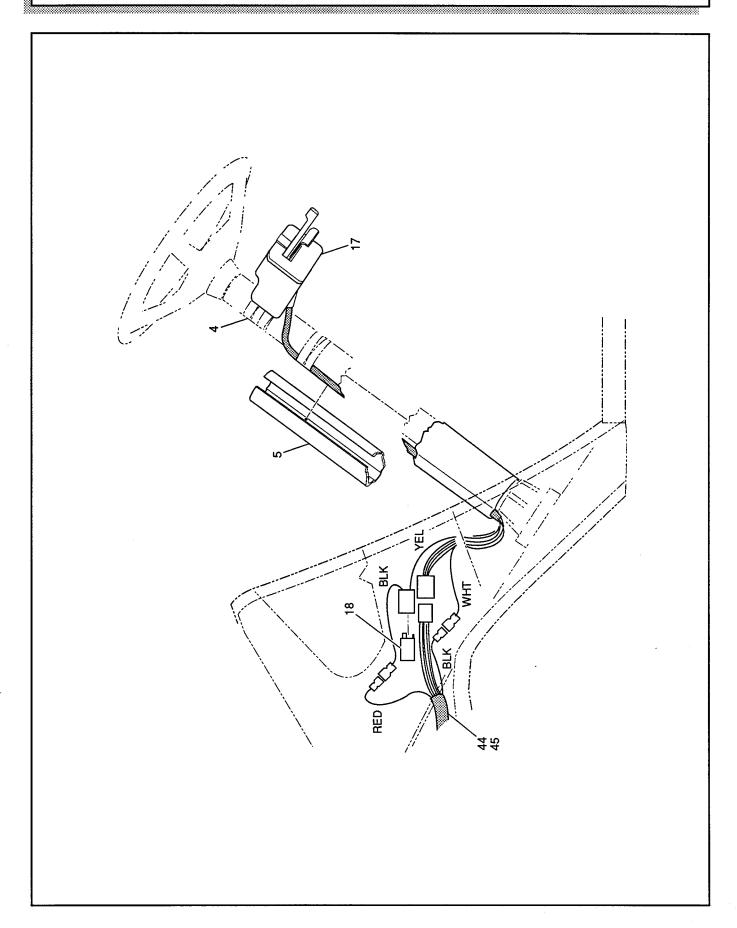

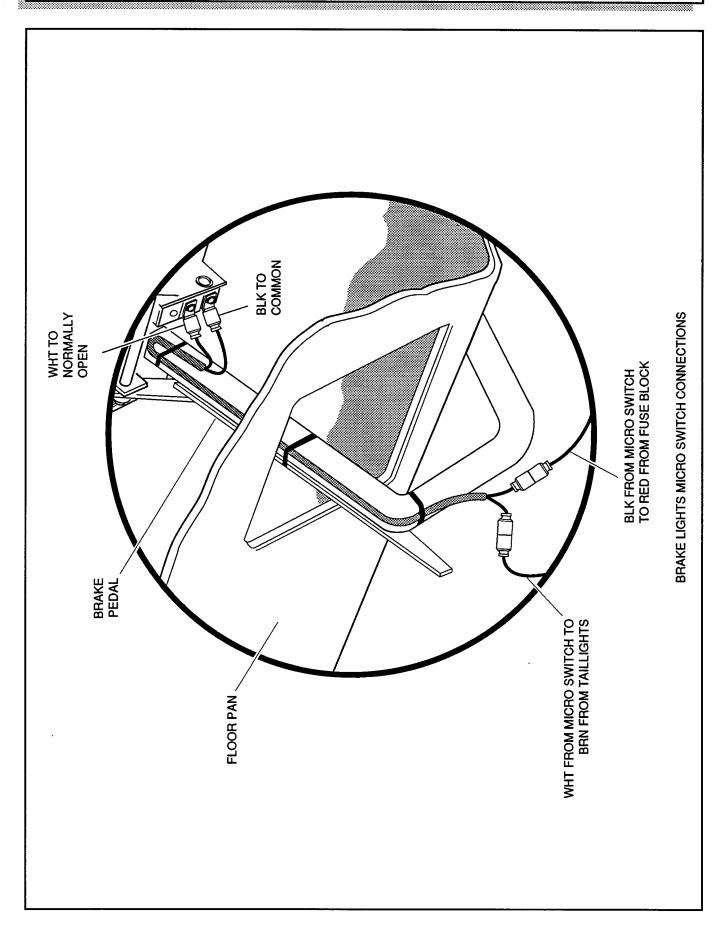

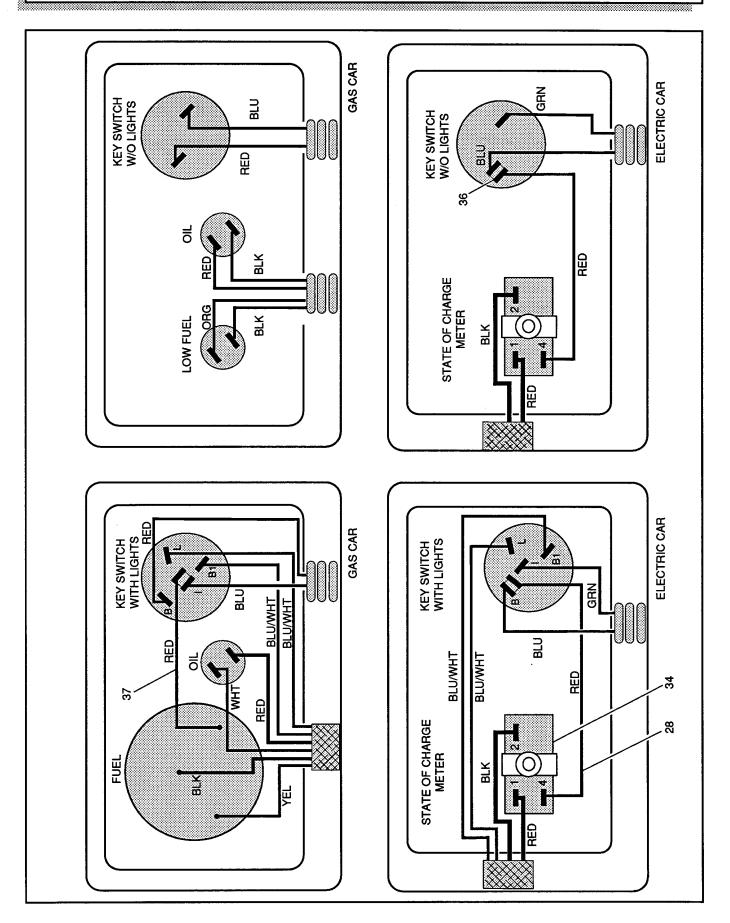

Electric / Gasoline Vehicle

HORN AND LIGHTING

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	22674-G1	FUSE BLOCK	. 1
2	71010-G01	RIVET, 5/32 X 3/8 LG	. 2
3	18392-G1	FUSE, 15 AMP	. 3
4	19344-G1	TAPE, VINYL	AR
5	20965-G3	COVER, STEERING COLUMN (VEHICLES WITH TURN SIGNALS)	. 1
6	17318-G2	CAP AND NUT, HORN SWITCH	. 1
7	32860-G1	HORN (WITH MOUNTING HARDWARE)	. 1
8	00559-G8	WASHER, 5/16	. 1
9			
10			
11	17318-G1	SWITCH, HORN	. 1
12	27068-G01	BOOT, HORN SWITCH	. 1
13	19233-G1	PLATE, HORN SWITCH	. 1
14	14601-G7	RIVET, STAINLESS STEEL, 9/16.	. 2
15	17618-G1	CLAMP, NYLON	. 2
16			
17	17867-G1	TURN SIGNAL (WITH MOUNTING HARDWARE)	. 1
18	21640-G1	FLASHER, TURN SIGNAL	. 1
19	00414-G6	SCREW, 1/4 - 20 X 3/4 LG	. 2
20	11027-G2	NUT, LOCK, 1/4 - 20	. 2
21	74001-G01	LIGHTBAR	. 1
22	74002-G02	BRACKET, LIGHTBAR, DRIVER'S SIDE	. 1
23	74002-G01	BRACKET, LIGHTBAR, PASSENGER SIDE	. 1
24	00114-G6	SCREW, 1/4 - 14 X 3/4 LG	. 8
25			
26	21553-G1	FUEL GAUGE (COMPLETE WITH HARDWARE)	. 1
27			
28	25978-G74	WIRE	. 1
29			
30			

HORN AND LIGHTING

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			:
32			
33	33633-G01	HOUR METER	1
34	33636-G01	STATE OF CHARGE METER	1
35			
36			
37	25977-G27	WIRE	1
38	74358-G01	BEZEL, TAILLIGHT, DRIVER'S SIDE	1
39	74358-G02	BEZEL, TAILLIGHT, PASSENGER SIDE	1
40	22288-G1	TAILLIGHT ASSEMBLY, COMPLETE	1
41	14601-G11	RIVET, 3/16 X 5/8 LG	2
42	21759-G1	BULB, REPLACEMENT, TAILLIGHT	AR
43	23474-G1	LOW OIL / FUEL LIGHT INDICATOR	1
44	73043-G01	HARNESS, ACCESSORY (ELECTRIC)	1
45	72228-G01	HARNESS, ACCESSORY (GAS)	1
46			
47	00568-G6	WASHER, LOCK, 3/4	1
48	17063-G1	KEY, IGNITION	2
49	17137-G1	NUT, FACE	1
50	00891-G2	NUT, LOCK,1/4 - 20	1
51	00414-G5	BOLT, 1/4 - 20 x 5/8 LG	1
52	00559-G8	WASHER, 5/16	1
53	18602-G1	SWITCH, IGNITION	1
54	33639-G01	SWITCH, IGNITION (WITH LIGHTS)	1
55			
56			
57	74004-G01	BULB, REPLACEMENT, HEADLIGHT	AR
58	74005-G01	BULB, REPLACEMENT, MARKER LIGHT	AR
59	74006-G01	BULB, REPLACEMENT, TURNLIGHT	AR
60			

Electric / Gasoline Vehicle

HORN AND LIGHTING


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.


G** Indicates consult Customer Service Department for additional information.

61 62 63 64 73030-G02 PLATE, CONSOLE INSERT, STATE OF CHARGE METER	QTY.
63 64 73030-G02 PLATE, CONSOLE INSERT, STATE OF CHARGE METER	
64 73030-G02 PLATE, CONSOLE INSERT, STATE OF CHARGE METER	
65 71123-G01 DECAL, CONSOLE PLATE, STATE OF CHARGE METER 66 71129-G01 DECAL, CONSOLE PLATE, STATE OF CHARGE METER 67 WITH LIGHTS 68 Flate, CONSOLE INSERT, LOW FUEL / OIL LIGHTS 70 71125-G01 DECAL, CONSOLE PLATE, LOW FUEL / OIL LIGHTS 71 72 73030-G04 PLATE, CONSOLE INSERT, FUEL GAUGE 73 71127-G01 DECAL, CONSOLE PLATE, FUEL GAUGE 74 71131-G01 DECAL, CONSOLE PLATE, FUEL GAUGE	
66 71129-G01 DECAL, CONSOLE PLATE, STATE OF CHARGE METER WITH LIGHTS	1
67 68 69 73030-G03 PLATE, CONSOLE INSERT, LOW FUEL / OIL LIGHTS	1
68 69 73030-G03 PLATE, CONSOLE INSERT, LOW FUEL / OIL LIGHTS	1
69 73030-G03 PLATE, CONSOLE INSERT, LOW FUEL / OIL LIGHTS	
70 71125-G01 DECAL, CONSOLE PLATE, LOW FUEL / OIL LIGHTS	
71 72 73030-G04 PLATE, CONSOLE INSERT, FUEL GAUGE	1
72 73030-G04 PLATE, CONSOLE INSERT, FUEL GAUGE	1
73 71127-G01 DECAL, CONSOLE PLATE, FUEL GAUGE	
74 71131-G01 DECAL, CONSOLE PLATE, FUEL GAUGE	1
	1
	1
	1

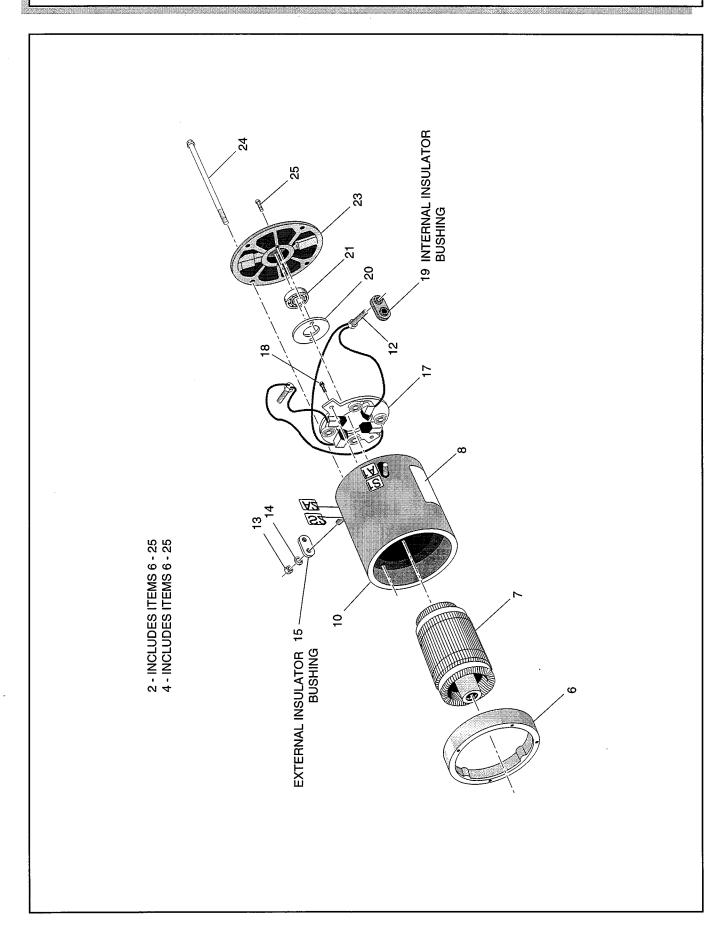


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	73124-G01	MOTOR, COMPLETE (DCS MODEL ONLY)	. 1
2	27045-G01	MOTOR, 2.0 HP, COMPLETE (INCLUDES ITEMS 6 - 25)	. 1
3			
4	73172-G01	MOTOR, 2.7 HP, COMPLETE (INCLUDES ITEMS 6 - 25)	. 1
5			
6	27630-G01	END SHIELD	. 1
7	*	ARMATURE	. 1
8	*	STATOR COMPLETE (INCLUDES ITEMS 10 AND 17)	1
9	·		
10	*	STATOR SHELL AND WINDING	. 1
11			
12	27630-G05	BRUSH (WITH TERM SCREW)	. 2
13	27630-G06	NUT, 1/4 - 20	. 4
14	27630-G07	WASHER, 1/4	4
15	27630-G08	BUSHING, INSULATED	. 2
16			
17	27630-G09	BRUSH, RIGGING	. 1
18	27630-G10	SCREW, BRUSH HOLDER	. 2
19	27630-G11	BUSHING, INSULATED	. 2
20	27630-G12	RETAINER, BEARING	. 1
21	27630-G13	BALL BEARING	1
22			
23	27630-G14	END SHIELD	1
24	27630-G15	SCREW, CLAMP	. 4
25	27630-G16	SCREW, BEARING RETAINER	. 2

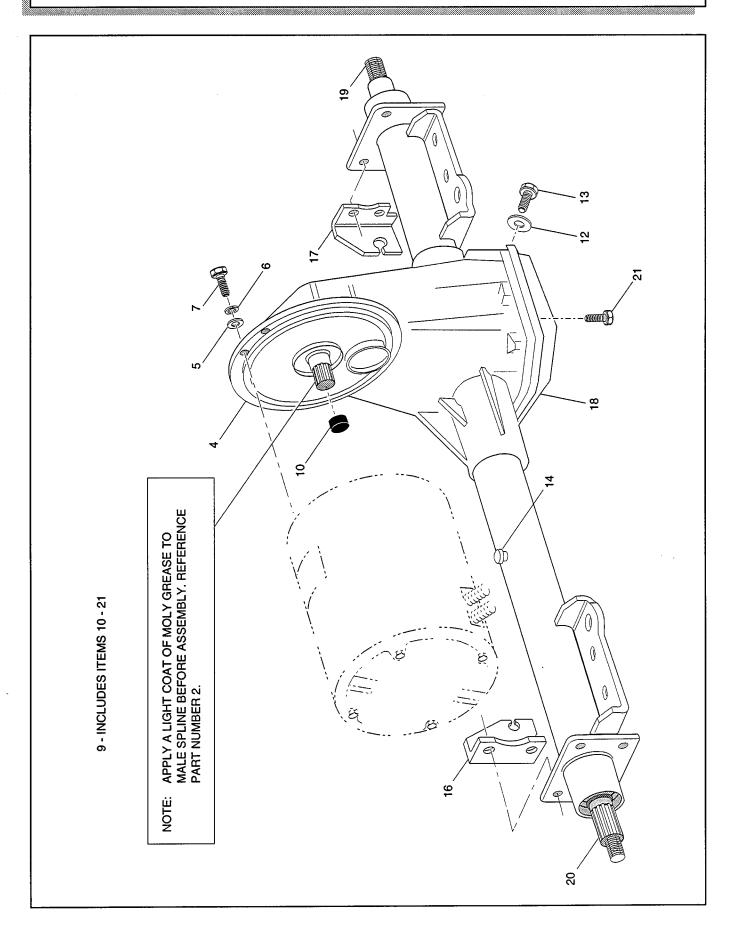

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1			
2	28095-G01	MOLY LUBE, 2 OZ.	AR
3			
4			
5	00559-G7	WASHER, 1/4	. 3
6	00565-G7	WASHER, LOCK, 1/4	. 3
7	00797-G2	BOLT, 1/4 - 20 X 1 1/4 LG.	. 3
8			
9	73069-G01	REAR AXLE ASSEMBLY (INCLUDES ITEMS 10 - 21)	. 1
10	24261-G1	BUMPER SPLINE	1
11			
12	25227-G1	WASHER	. 1
13	25226-G1	PLUG, FILL/CHECK	. 1
14	73050-G01	VENT ASSEMBLY (PUSH IN)	. 1
15			
16	72036-G01	BRACKET, BRAKE CABLE, PASSENGER SIDE	. 1
17	72036-G02	BRACKET, BRAKE CABLE, DRIVER'S SIDE	. 1
18	25228-G1	COVER, DIFFERENTIAL	. 1
19	20377-G12	AXLE SHAFT, PASSENGER SIDE	. 1
20	20377-G11	AXLE SHAFT, DRIVER'S SIDE	1
21	15558-G1	SCREW, 5/16 - 18 X 3/4 LG.	10

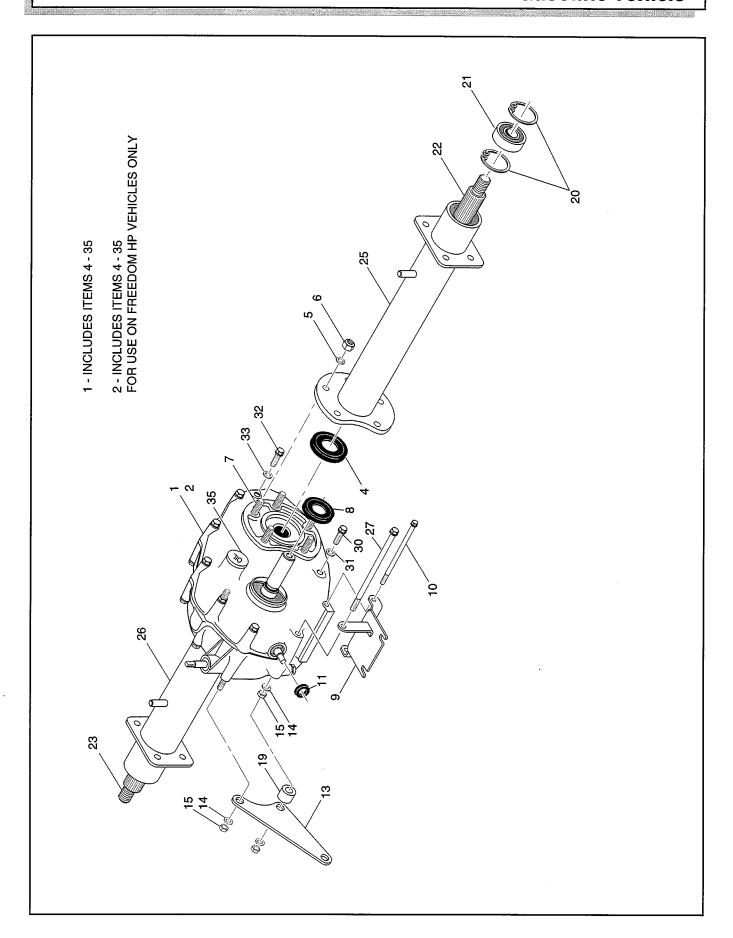

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	72031-G01	REAR AXLE, (13.32:1), STANDARD (INCLUDES ITEMS 4 - 35)	. 1
2	72031-G02	REAR AXLE, HP (10.67:1) INCLUDES ITEMS 4 - 35 FOR USE ON FREEDOM HP VEHICLES ONLY	. 1
3			
4	26766-G01	SEAL, AXLE SHAFT	. 1
5	26828-G01	WASHER, 10 MM	. 10
6	26829-G01	NUT, 10 MM X 1.5 MM	. 10
7	26667-G01	STUD, M10 X 1.5 X 40 MM LG	. 5
8	26761-G01	SEAL, INPUT SHAFT	. 1
9	26815-G01	BRACKET, SHIFTER CABLE	. 1
10	26823-G01	BOLT, FLANGE, M8 X 1.25 X 100 MM LG.	. 8
11	26762-G01	SEAL, SHIFTER SHAFT	. 1
12			
13	72017-G01	BRACKET, TRANSAXLE	. 1
14	26826-G01	WASHER, LOCK, M8	. 4
15	26827-G01	NUT, M8 X 1.25 MM	4
16			
17			
18			
19	75048-G01	SPACER	1
20	26814-G01	RING, RETAINING	4
21	26811-G01	BALL BEARING	2
22	72056-G01	AXLE SHAFT, DRIVER SIDE	1
23	72057-G01	AXLE SHAFT, PASSENGER SIDE	1
24			
25	72115-G01	TUBE, AXLE, DRIVER'S SIDE	1
26	72116-G01	TUBE, AXLE, PASSENGER SIDE	ŀ
27	26824-G01	BOLT, FLANGE, M8 X 1.25 X 110 MM LG.	1
28	72053-G01	BOLT, FLANGE, M8 X 1.25 X 120 MM LG	1
29			

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	26770-G01	DRAIN PLUG, OIL	1
31	26771-G01	GASKET, 14 MM	1
32	26768-G01	CHECK PLUG, OIL	1
33	26769-G01	GASKET, 8 MM	1
34			
35	26772-G01	PLUG, OIL FILLER	1

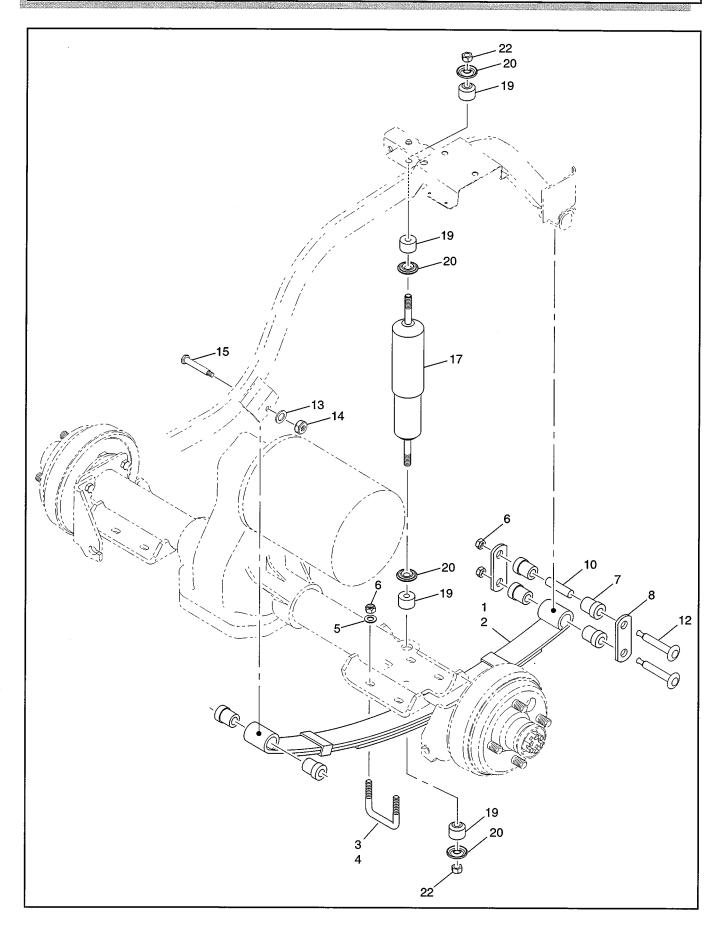


Electric Vehicle

REAR SUSPENSION


THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70247-G01	SPRING, LEAF	. 2
2	74135-G01	SPRING, LEAF (USE ON 4 CADDY ONLY)	2
3	72029-G01	"U" BOLT, 3/8 - 16	4
4	74124-G01	"U" BOLT, 3/8 - 16 (USE ON 4 CADDY ONLY)	4
5	00560-G1	WASHER, 3/8	. 8
6	11098-G5	NUT, LOCK, 3/8 - 16	. 12
7	70291-G01	BUSHING, RUBBER (LEAF SPRING)	. 12
8	70290-G01	SHACKLE PLATE	. 4
9			
10	70289-G02	SPACER	4
11			
12	00429-G2	SCREW, 3/8 - 16 X 3 1/4 LG	. 4
13	00643-G1	WASHER, 3/8	. 2
14	11098-G5	NUT, 3/8 - 16	. 2
15	14158-G1	BOLT, SHOULDER, 7/16 - 14 X 3 1/4 LG	. 2
16			
17	70324-G01	SHOCK ABSORBER	. 2
18		•	
19	10194-G1	BUSHING, RUBBER, SHOCK ABSORBER	. 8
20	10435-G1	WASHER, SHOCK ABSORBER	. 8
21			
22	00532-G6	NUT, 3/8 - 24	. 4

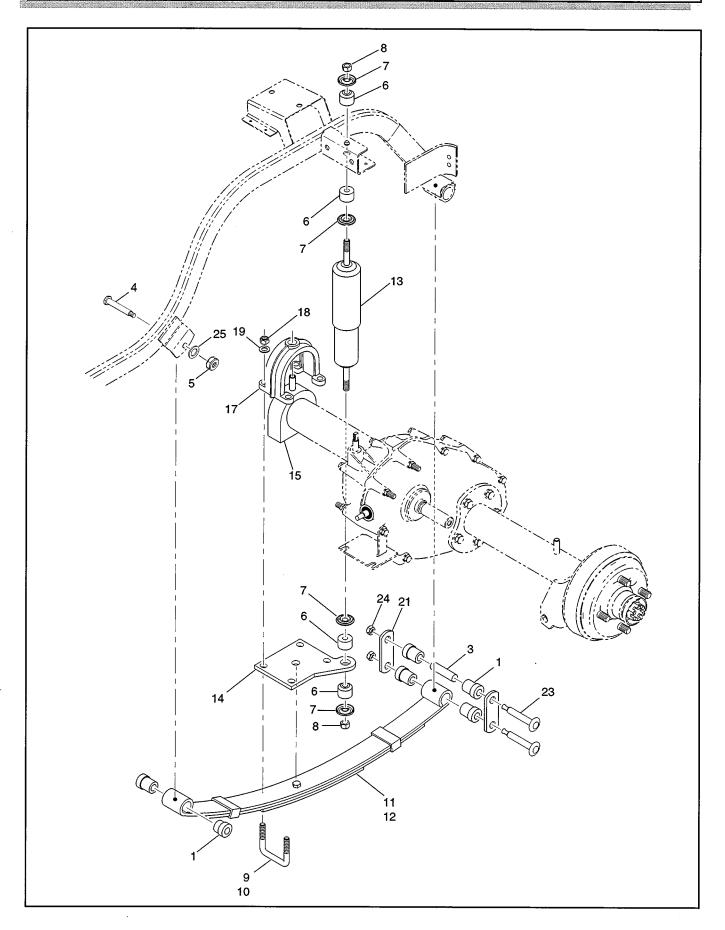



REAR SUSPENSION

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70291-G01	BUSHING, RUBBER (LEAF SPRING)	. 12
2			
3	70289-G02	SPACER	4
4	14158-G1	BOLT, SHOULDER, 3/16 x 3 1/4 LG	. 2
5	11098-G5	NUT, 3/8 - 16	. 2
6	10194-G1	BUSHING, RUBBER (SHOCK ABSORBER)	. 8
7	10435-G1	WASHER (SHOCK ABSORBER)	. 8
8	00532-G6	NUT, 3/8 - 24	4
9	72029-G01	U-BOLT, 3/8 - 16	. 4
10	74124-G01	U-BOLT, 3/8 - 16 (USE ON 4 CADDY ONLY)	4
11	74135-G01	SPRING, LEAF (USE ON 4 CADDY ONLY)	2
12	70247-G01	SPRING, LEAF	. 2
13	70324-G01	SHOCK ABSORBER	. 2
14	72028-G01	BASE PLATE, ISOMOUNT	. 2
15	72117-G01	BUSHING, ISOMOUNT	. 2
16			
17	72037-G01	CAP, ISOMOUNT	. 2
18	11098-G5	NUT, LOCK, 3/8 - 16	. 8
19	00560-G1	WASHER, 3/8	. 8
20			
21	70290-G01	SHACKLE PLATE	. 4
22			
23	00429-G2	SCREW, 3/8 - 16 X 3 1/4 LG	. 4
24	11098-G5	NUT, LOCK, 3/8 - 16	. 1
25	00643-G1	WASHER, 3/8	. 2

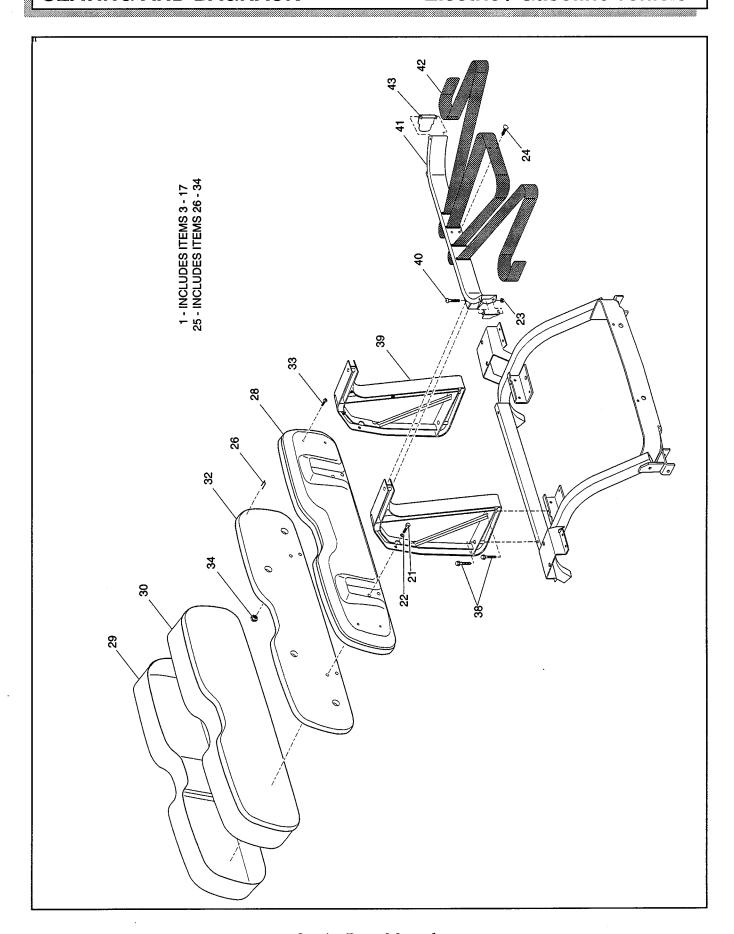

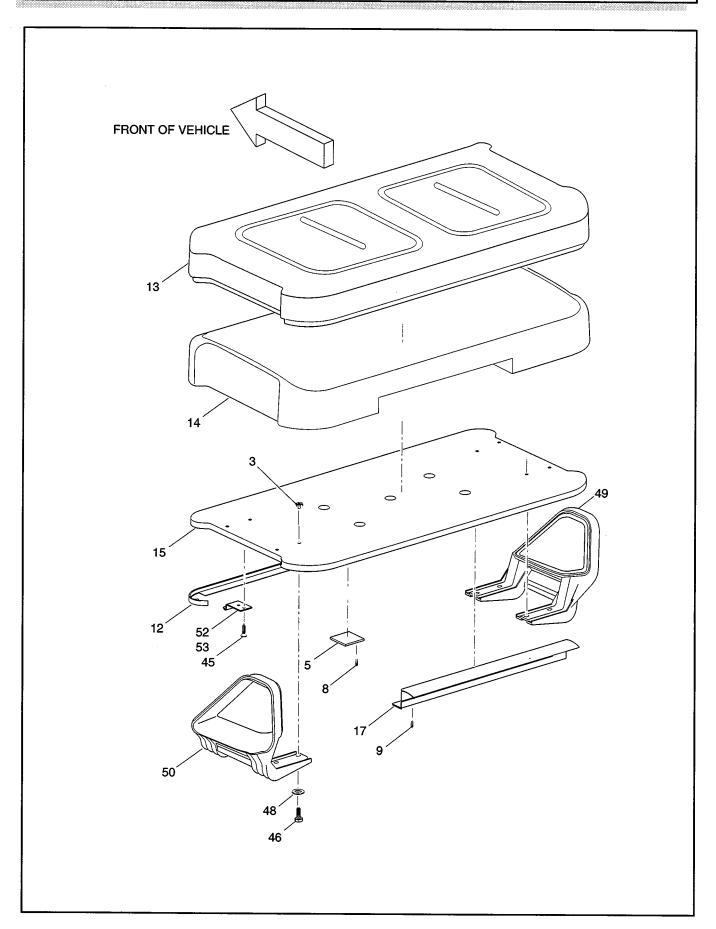

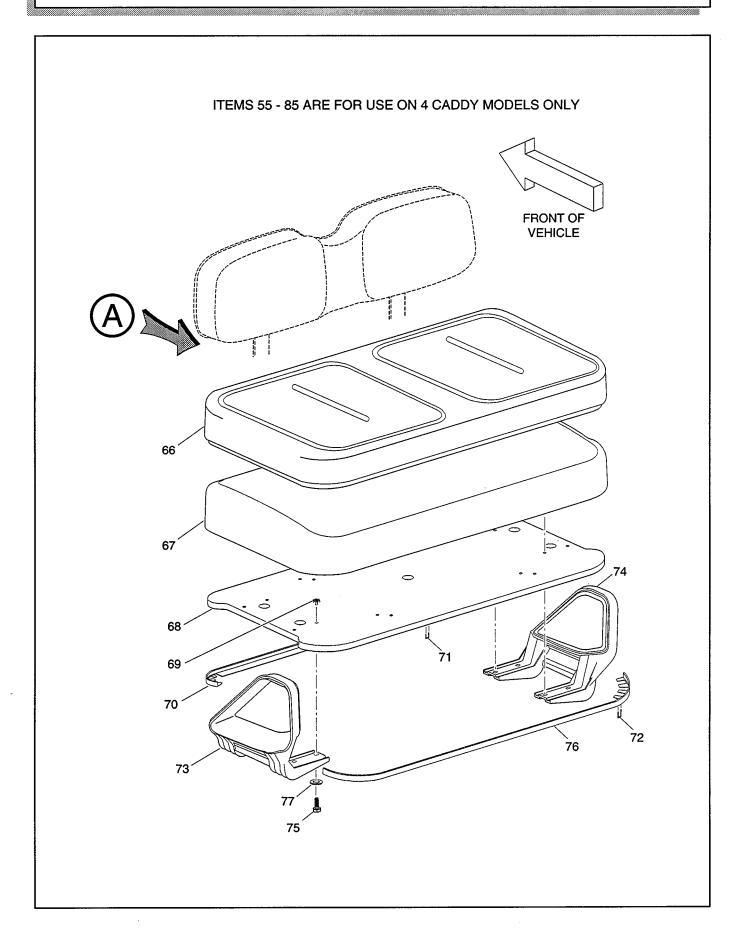

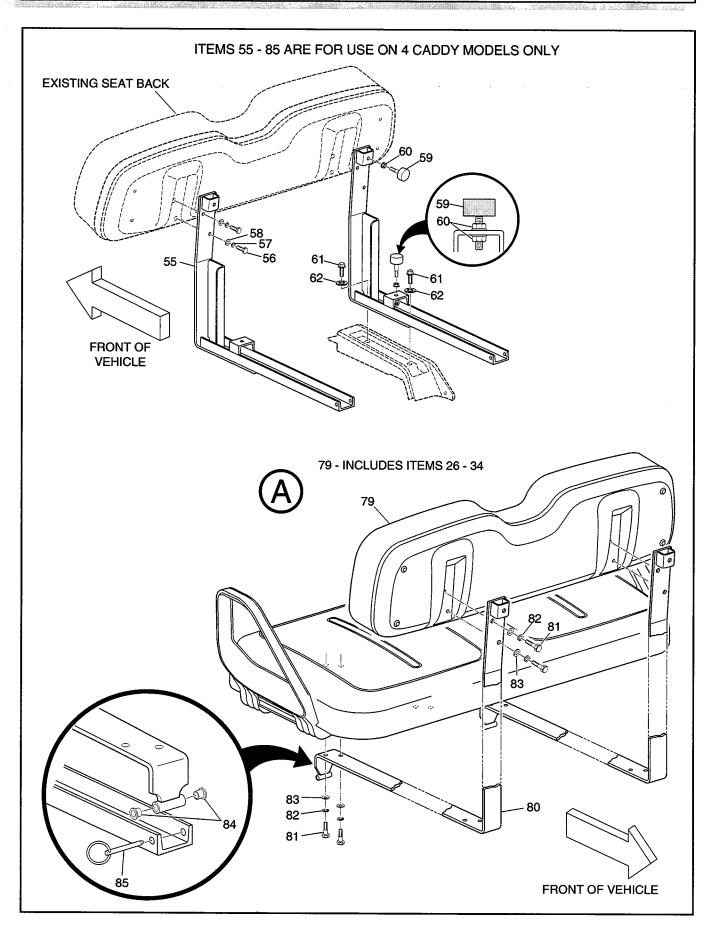

SEATING AND BAGRACK

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	71611-G**	SEAT BOTTOM ASSEMBLY (INCLUDES ITEMS 3 - 17)	1
2			
3	*	NUT, TEE	8
4			
5	17074-G1	BUMPER, SEAT	2
6			
7			
8	*	STAPLE, FLAT	110
9	*	STAPLE, FLAT	46
10			
11			
12	71012-G01	VINYL TRIM, SEAT BOTTOM	1
13	71602-G**	VINYL SEAT BOTTOM COVER	1
14	71603-G02	FOAM PADDING, SEAT BOTTOM	1
15	71604-G01	SEAT BOTTOM, WOOD	1
16			
17	71608-G01	REAR TRIM, SEAT	1
18			
19			
20			
21	00414-G8	BOLT, 1/4 - 20 X 1 LG	4
22	00565-G7	WASHER, LOCK, 1/4	4
23	11027-G2	NUT, LOCK, 1/4 - 20	2
24	16816-G1	FASTENER, PLASTIC RATCHET	2
25	71751-G**	SEAT BACK ASSEMBLY (INCLUDES ITEMS 26 - 34)	1
26	*	STAPLE, FLAT	95
27			
28	71752-G01	PLASTIC, REAR COVER SEAT BACK	1
29	71753-G**	VINYL SEAT BACK COVER	1
30	71754-G01	FOAM PADDING, SEAT BACK	1

Electric / Gasoline Vehicle

SEATING AND BAGRACK

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31			
32	71755-G01	SEAT BACK, WOOD	. 1
33	71002-G01	SCREW, #8 X 1 LG	. 4
34	*	NUT, TEE	. 4
35			
36			
37			
38	71802-G01	BOLT, 3/8 - 16 X 2 1/4 LG.	. 4
39	71803-G02	BRACKET, SEAT SUPPORT	. 2
40	71821-G01	BOLT, CARRIAGE, 1/4 - 20 X 1 1/2 LG	. 2
41	71851-G01	BRACKET, BAG HOLDER	. 1
42	71853-G01	STRAP, BAG RETAINER	. 1
43	71856-G01	BAG RETAINER CLAMP	. 2
44			
45	00720-G08	SCREW, #12 - 14 X 1 LG	. 4
46	00414-G8	BOLT, 1/4 - 20 X 1 LG.	. 8
47			
48	00559-G7	WASHER, 1/4	. 8
49	71701-G01	HIP RESTRAINT, PASSENGER SIDE	. 1
50	71702-G01	HIP RESTRAINT, DRIVER'S SIDE	. 1
51		·	
52	71615-G01	HINGE, SEAT (VEHICLES PRIOR TO SERIAL NO. 895713)	. 2
53	71610-G01	HINGE, SEAT (VEHICLES AFTER SERIAL NO. 895713)	. 2
54			
55	74111-G01	SUPPORT, SEAT BACK	. 2
56	00414-G8	BOLT, 1/4 - 20 X 1 LG.	. 4
57	00565-G7	WASHER, LOCK, 1/4	. 4
58	00559-G7	WASHER, 1/4	. 4
59	70113-G01	BUMPER, RUBBER	. 4
60	11027-G1	NUT, LOCK, 5/16 - 18	6

SEATING AND BAGRACK

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.


* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	01006-G01	BOLT, 3/8 - 16 X 1 1/4 LG.	4
62	00560-G1	WASHER, 3/8	4
63		·	
64	74131-G**	SEAT ASSEMBLY (INCLUDES ITEMS 65 - 79)	1
65	74139-G**	SEAT BOTTOM ASSEMBLY (INCLUDES ITEMS 66 - 77)	1
66	71602-G**	VINYL COVER, SEAT BOTTOM	1
67	71603-G02	FOAM, SEAT BOTTOM	1
68	74141-G01	WOOD, SEAT BOTTOM	1
69	*	NUT, TEE	16
70	74140-G01	TRIM, SEAT, FRONT	1
71	*	STAPLE, FLAT	110
72	*	STAPLE, FLAT	48
73	71702-G01	HIP RESTRAINT, DRIVER'S SIDE	1
74	71701-G01	HIP RESTRAINT, PASSENGER SIDE	1
75	00414-G8	BOLT, 1/4 - 20 X 1 LG	8
76	71608-G01	TRIM, SEAT, REAR	1
77	00559-G7	WASHER, 1/4	8
78			
79	71751-G**	SEAT BACK ASSEMBLY (INCLUDES ITEMS 26 - 34)	1
80	74117-G01	BRACKET, REAR SEAT SUPPORT	2
81	00414-G8	BOLT, 1/4 - 20 X 1 LG	12
82	00565-G2	WASHER, LOCK, #5	12
83	00559-G7	WASHER, 1/4	12
84	17838-G1	BUSHING, NYLON	4
85	74134-G01	PIN, HITCH	2

Electric / Gasoline Vehicle

SEATING AND BAGRACK

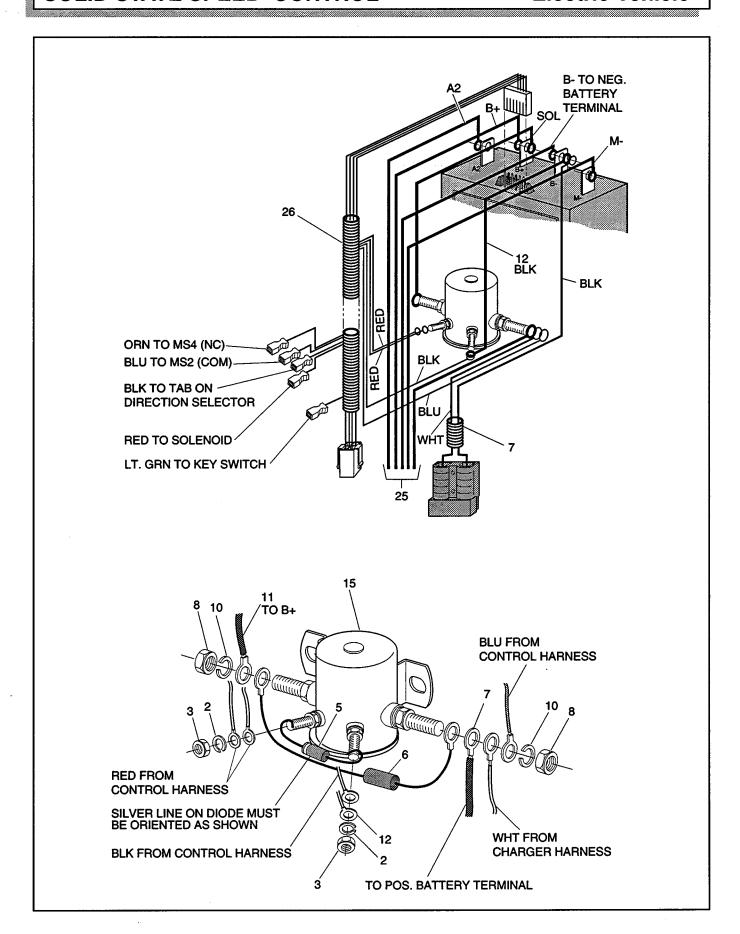

SOLID STATE SPEED CONTROL

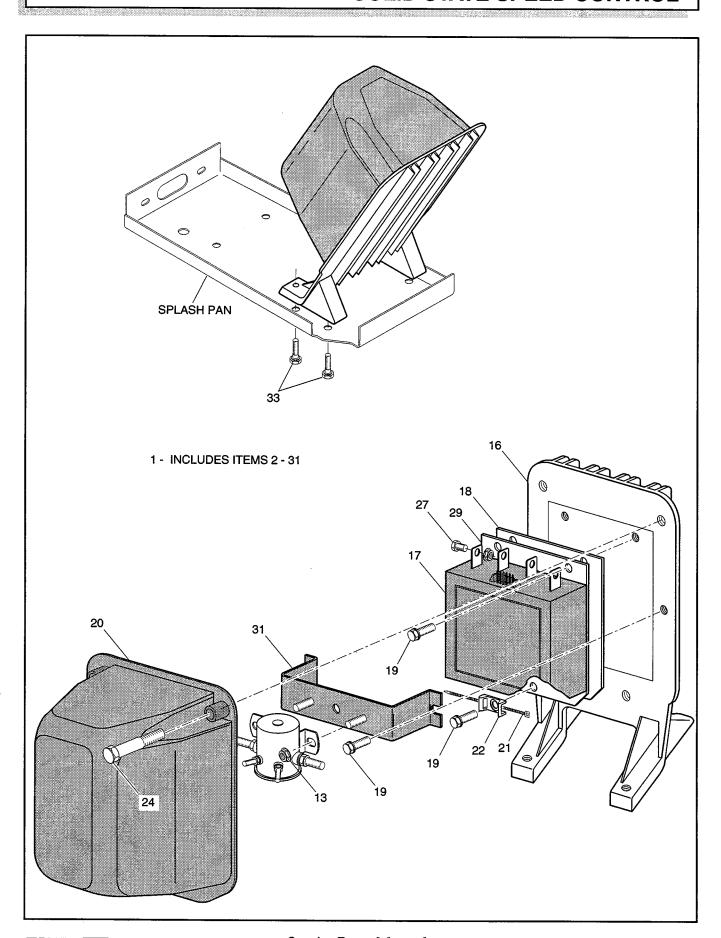

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	73056-G01	ELECTRONIC SPEED CONTROL ASSEMBLY (INCLUDES ITEMS 2 - 31)	1
2	*	WASHER, LOCK, #10	
3	*	NUT, 10 - 32	2
4			
5	30353-G1	DIODE	1
6	21764-G1	RESISTOR	1
7	73042-G01	WIRE HARNESS, CHARGER CONNECTOR	1
8	*	NUT, 5/16 - 24	2
9			
10	*	WASHER, LOCK, 5/16	2
11	25972-G02	WIRE, SOL - B+	
12	25978-G10	WIRE, SOL - B	1
13	11027-G2	NUT, 1/4 - 20	2
14			
15	27855-G01	SOLENOID	1
16	73026-G01	HEATSINK	1
17	25864-G02	ELECTRONIC SPEED CONTROLLER	1
18	73190-G01	PAD, THERMAL MOUNTING	1
19	71102-G01	BOLT, 1/4 - 20 X 3/4 LG	5
20	73028-G01	COVER	1
21	31539-G1	WIRE TIE	1
22	73053-G01	MOUNT	1
23			
24	71102-G03	BOLT, 1/4 - 20 X 1 1/4 LG	4
25	73039-G01	WIRE HARNESS, POWER	1
26	73040-G01	WIRE HARNESS, CONTROL	1
27	00270-G5	BOLT, 5/16 - 18 X 5/8 LG	4
28			
29	11027-G1	NUT, 5/16 - 18	4


Electric Vehicle


SOLID STATE SPEED CONTROL

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4	5	DESCRIPTION	QTY.
30	****		. 4/4		
31	25866-G01	BRACKE	T, SOLEN	OID	1
32					
33	71102-G01	BOLT, 1/4 - 2	.0 X 3/4 LG	ì	4

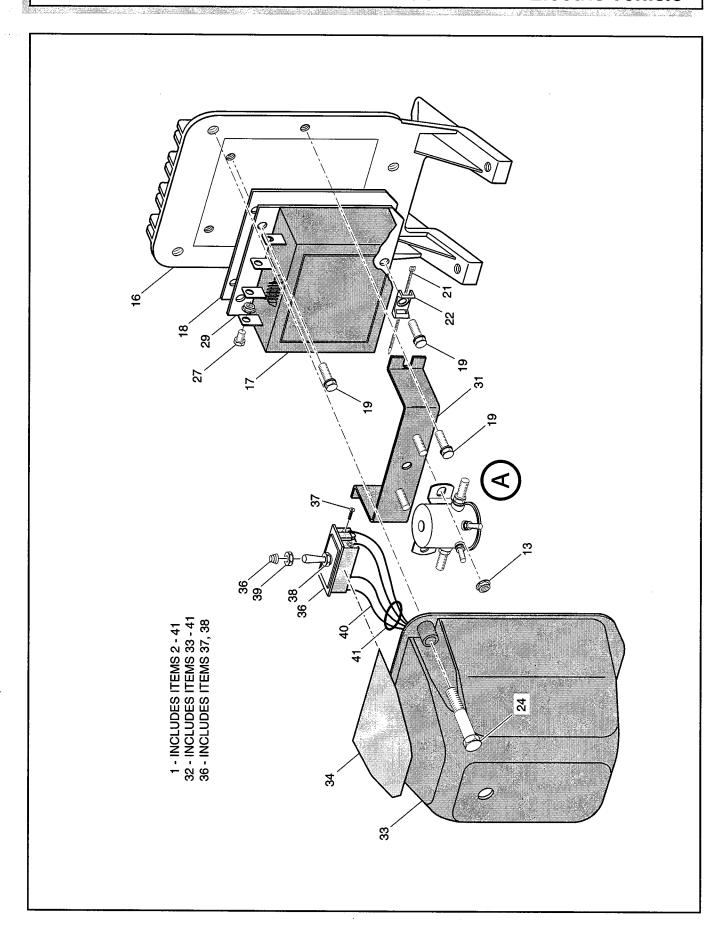

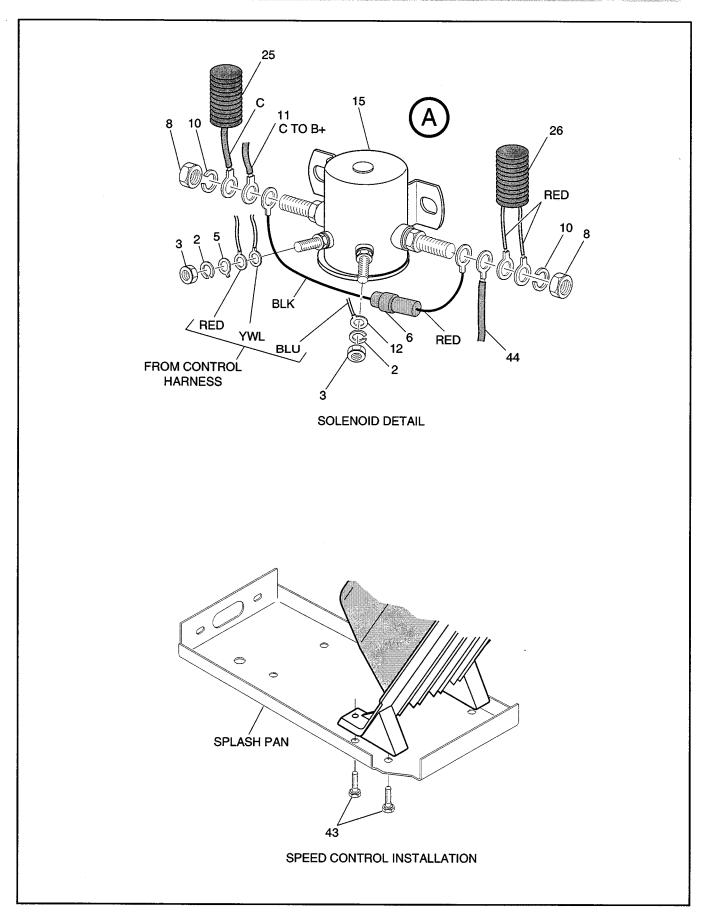

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	73121-G01	SPEED CONTROL ASSEMBLY (INCLUDES ITEMS 2 - 41)	1
2	*	WASHER, LOCK, #10	2
3	*	NUT, 10 - 32	2
4			
5	12914-G1	TAB, TERMINAL	1
6	73150-G01	RESISTOR	1
7			
8	*	NUT, 5/16 - 24	2
9			
10	*	WASHER, LOCK, 5/16	2
11	25972-G56	WIRE, C - B+	1
12			
13	11027-G2	NUT, 1/4 - 20	2
14			
15	27855-G01	SOLENOID	1
16	73026-G01	HEATSINK	1
17	73144-G01	SPEED CONTROLLER	1
18	73190-G01	PAD, THERMAL MOUNTING	1
19	71102-G01	BOLT, 1/4 - 20 X 3/4 LG	5
20			
21	31539-G1	WIRE TIE	1
22	73053-G01	MOUNT	1
23			
24	71102-G03	BOLT, 1/4 - 20 X 1 1/4 LG	4
25	73152-G01	WIRE HARNESS, POWER	1
26	73153-G01	WIRE HARNESS, CONTROL	1
27	00270-G5	BOLT, 5/16 - 18 X 5/8 LG	3
28			
29	11027-G1	NUT, 5/16 - 18	3
30			


Electric Vehicle

SOLID STATE SPEED CONTROL - DCS

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION QT	ΓY.
31	25866-G01	BRACKET, SOLENOID	1
32	73137-G01	COVER ASSEMBLY (INCLUDES ITEMS 33 - 41)	1
33	73028-G02	COVER (WITH GASKET)	1
34	73132-G01	LABEL, TOW SWITCH	1
35			
36	73125-G01	SWITCH, TOGGLE WITH SEAL (INCLUDES ITEMS 37, 38)	1
37	*	SCREW, #5 - 40	4
38	*	NUT, 15/32 - 32	4
39	73139-G01	NUT, SEAL	1
40	73138-G01	HARNESS, TOW SWITCH	1
41	17618-G1	CLAMP, NYLON	1
42			
43	71102-G01	BOLT, 1/4 - 20 X 3/4 LG.	4
44	25972-G22	WIRE, BL+ TO SOL	1
ļ			

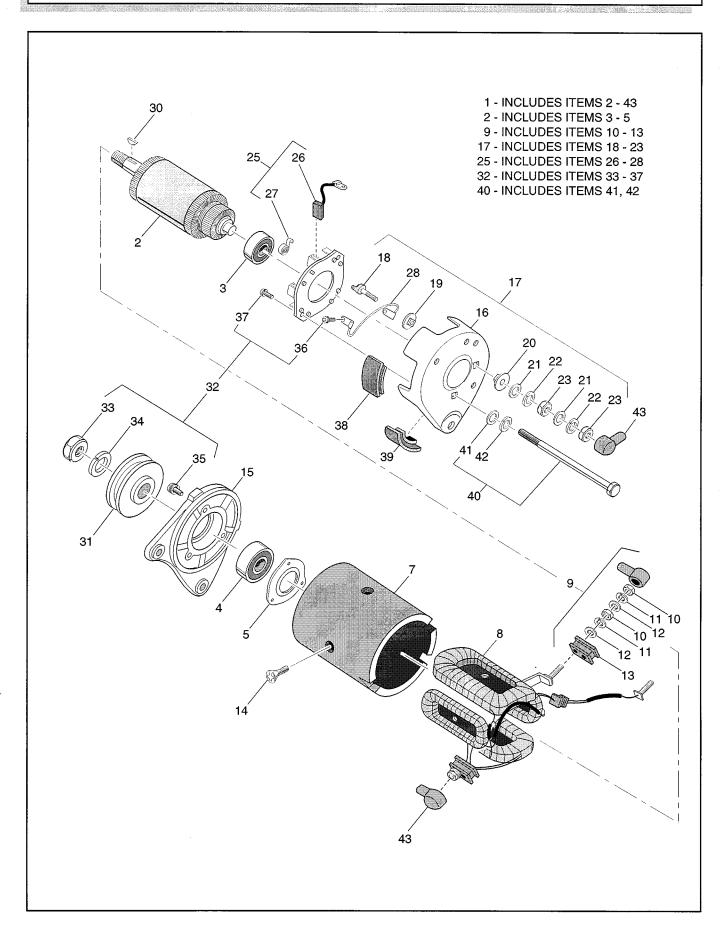


STARTER / GENERATOR

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	27065-G01	STARTER / GENERATOR, COMPLETE (INCLUDES ITEMS 2 - 43)	1
2	26870-G01	ARMATURE ASSEMBLY (INCLUDES ITEMS 3 - 5)	1
3	26871-G01	BALL BEARING, REAR	1
4	26872-G01	BALL BEARING, FRONT	1
5	26873-G01	HOLDER, BEARING	1
6			
7			
8	26875-G01	COIL, FIELD	1
9	26876-G01	"F" INSULATING BRUSH ASSEMBLY (INCLUDES ITEMS 10 - 13)	2
10	*	NUT	2
11	*	WASHER, LOCK	2
12	*	WASHER	2
13	*	INSULATOR	1
14	26877-G01	SCREW, POLE CORE SET	4
15	26878-G01	COVER, FRONT	1
16	26879-G01	COVER, REAR	1
17	26880-G01	"A" TERMINAL ASSEMBLY (INCLUDES ITEMS 18 - 23)	2
18	*	TERMINAL	2
19	*	INSULATOR	2
20	*	INSULATOR	2
21	*	WASHER	4
22	*	WASHER, LOCK	4
23	*	NUT	4
24			
25	26881-G01	BRUSH HOLDER ASSEMBLY (INCLUDES ITEMS 26 - 28)	1
26	26658-G01	BRUSH	4
27	26882-G01	BRUSH SPRING	4
28	26883-G01	BRUSH CONNECTOR	2
29			
30	26884-G01	KEY	1

ITEM PART N	D. 1 2 3 4 5 DESCRIPTION	QTY.
31 26885-G	1 PULLEY	1
32 26886-G	1 PULLEY ASSEMBLY (INCLUDES ITEMS 33 - 37)	1
33 *	NUT	1
34 *	WASHER, LOCK	1
35 *	SCREW	3
36 *	SCREW	4
37 *	SCREW	2
38 26887-G	1 BRUSH 1 COVER	2
39 26888-G	1 BRUSH 2 COVER	3
40 26889-G	1 BOLT AND WASHER ASSEMBLY (INCLUDES ITEMS 41, 42)	2
41 *	WASHER	2
42 *	WASHER, LOCK	2
43 16896-G	TERMINAL COVER	4

Gasoline Vehicle

STARTER / GENERATOR

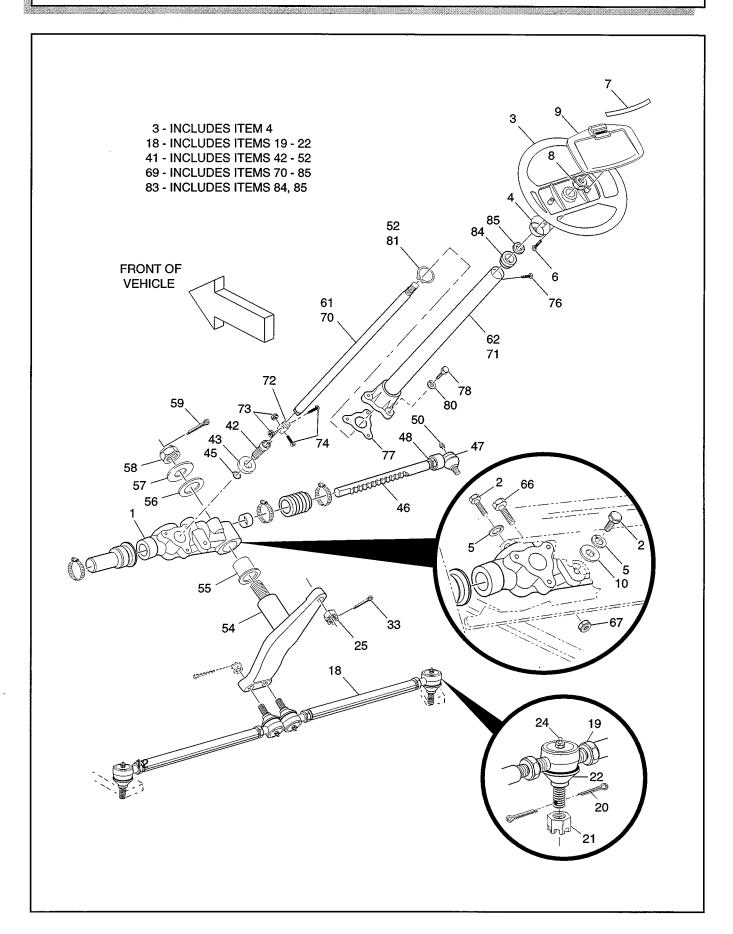

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	70314-G01	STEERING BOX ASSEMBLY, COMPLETE	. 1
2	00462-G7	SCREW, 7/16 - 14 X 7/8 LG	. 4
3	18325-G1	STEERING WHEEL (INCLUDES ITEM 4)	. 1
4	*	HUB COVER, EXTENSION	. 1
5	00566-G2	WASHER, LOCK, 7/16	. 4
6	00999-G01	BOLT, #8 - 18 X 7/8 LG	. 2
7	*	DECAL, SCORECARD	AR
8	14390-G2	NUT, LOCK, 5/8 - 18	. 1
9	27102-G01	SCORECARD HOLDER	. 1
10	00922-G3	WASHER, 7/16	. 1
11			
12			
13			
14			
15			
16			
17			
18	70074-G01	TIE ROD ASSEMBLY (INCLUDES ITEMS 19 - 22)	2
19	18434-G2	NUT, 9/16 - 18	. 2
20	10387-G2	PIN, COTTER, 3/32 X 1 LG	2
21	50209-G1	NUT, SLOTTED, 7/16 - 20	. 2
22	50641-G1	BOOT, RUBBER	2
23			
24	10389-G3	FITTING, GREASE	4
25	50209-G1	NUT, SLOTTED, 7/16 - 20	1
26			
27			
28		,	
29			
30			

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.


When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
31	-		
32			
33	10387-G2	PIN, COTTER, 3/32 X 1LG.	3
34			
35			
36			
37			
38			
39			
40			
41	70299-G01	STEERING GEAR KIT (INCLUDES ITEMS 42 - 52)	1
42	*	PINION, GEAR	1
43	*	BALL BEARING	1
44			
45	*	RING, RETAINING, EXTERNAL	1
46	*	RACK, STEERING	1
47	*	RACK BALL END (WITH NUT)	1
48	*	NUT, 7/16 - 20	1
49			
50	*	GREASE FITTING, 90°	2
51			
52	*	RING, RETAINING, INTERNAL	1
53			
54	70184-G01	IDLER	1
55	70185-G01	BEARING, FLANGED	1
56	70216-G01	WASHER, THRUST, 1 1/2 I.D	1
57	70195-G01	WASHER, THRUST, 7/8	1
58	00734-G6	NUT, LOCK, 7/8 - 9	1
59	00798-G8	PIN, COTTER, 5/32 X 1 3/4 LG	1
60			

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
61	14322-G5	STEERING SHAFT (PRIOR TO SERIAL NUMBER 901144)	1
62	70222-G01	STEERING COLUMN (PRIOR TO SERIAL NUMBER 901144)	1
63			
64			
65			
66	00470-G4	SCREW, 7/16 - 20 X 2 1/2 LG	1
67	00734-G3	NUT, LOCK, 7/16 - 20	1
68			
69	70360-G01	STEERING SHAFT/COLUMN KIT (INCLUDES ITEMS 70 - 85) (SERIAL NUMBER 901144 AND LATER)	1
70	14322-G3	STEERING SHAFT	1
71	70333-G01	STEERING COLUMN	1
72	70226-G01	COUPLING	1
73	00550-G1	NUT, LOCK, 1/4 - 20	2
74	70227-G01	SCREW, 1/4 - 20 X 7/8 LG.	2
75			
76	00118-G2	SCREW, #6 - 18 X 1/4 LG.	1
77	70223-G01	GASKET, STEERING HOUSING	1
78	00876-G2	BOLT, 3/8 - 16 X 1 1/4 LG	3
79			
80	00878-G1	WASHER, LOCK, 3/8	3
81	70189-G01	RING, RETAINING, INTERNAL	1
82			
83	17161-G1	BUSHING/SEAL KIT (INCLUDES ITEMS 84, 85)	1
84	*	BUSHING, STEERING COLUMN	1
85	*	SEAL, SHAFT	1

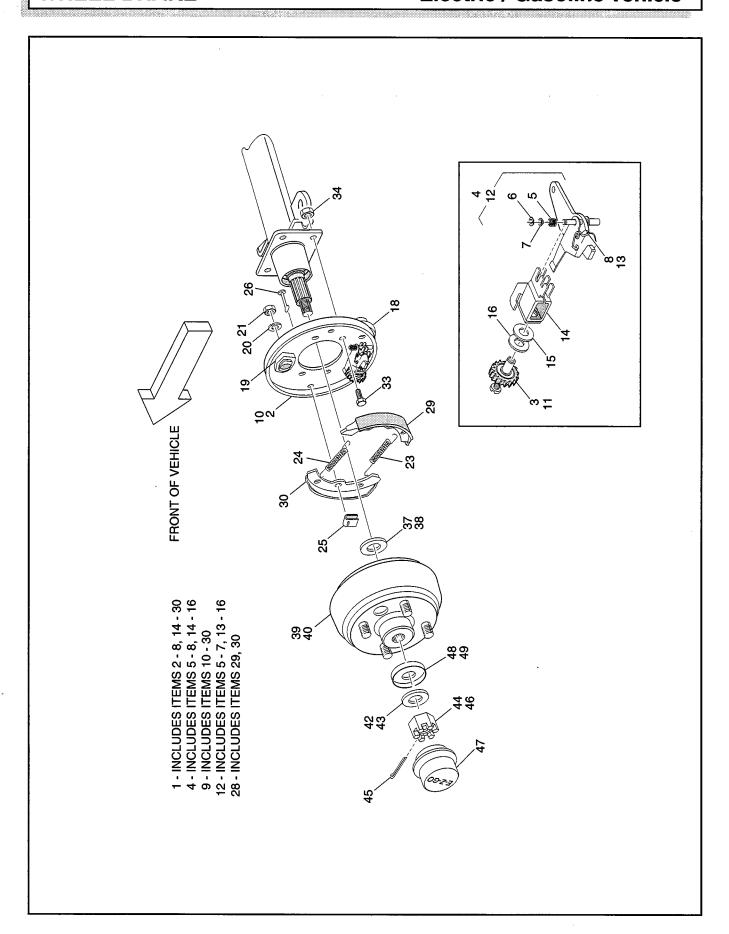

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.


ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
1	22997-G2	BRAKE ASSEMBLY, PASSENGER SIDE (INCLUDES ITEMS 2 - 8, 14 - 30)	1
2	22518-G1	BACKING PLATE	1
3	23360-G1	ADJUSTER	1
4	23357-G1	LEVER ASSEMBLY (INCLUDES ITEMS 5 - 8, 14 - 16)	1
5	*	SPRING	1
6	*	RETAINER	1
7	*	WASHER, SHOULDER	1
8	23536-G1	TORSION SPRING, PASSENGER SIDE (SILVER)	. 1
9	22997-G1	BRAKE ASSEMBLY, DRIVER'S SIDE (INCLUDES ITEMS 10 - 30)	1
10	22519-G1	BACKING PLATE	. 1
11	23361-G1	ADJUSTER	. 1
12	23358-G1	LEVER ASSEMBLY (INCLUDES ITEMS 5 - 7, 13 - 16)	. 1
13	23537-G1	TORSION SPRING, DRIVER'S SIDE (GOLD)	. 1
14	23363-G1	ADJUSTER BODY	. 1
15	23382-G1	WASHER, 1/4	1
16	23362-G1	THRUST WASHER, 1/4	1
17			
18	22519-G1	DUST COVER	1
19	23356-G1	ANCHOR BLOCK	1
20	00565-G1	WASHER, LOCK, 1/4	2
21	13632-G1	NUT, 6 MM	2
22			
23	23359-G1	SPRING, BRAKE ADJUSTER	1
24	17290-G1	SPRING, BRAKE ANCHOR	1
25	17291-G1	CLAMP, SHOE	2
26	17292-G1	PIN, SHOE CLAMP TENSION	2
27			
28	23364-G1	BRAKE SHOE SET (INCLUDES ITEMS 29, 30)	. 1
29	23354-G1	BRAKE SHOE, TRAILING	. 1

Electric / Gasoline Vehicle

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION	QTY.
30	23355-G1	BRAKE SHOE, LEADING	1
31			
32			
33	17083-G2	BOLT, 5/16 - 24 X 1 LG	8
34	15126-G1	NUT, LOCK, 5/16 - 24	8
35			
36			
37	15485-G1	WASHER, INNER WHEEL RIM (ELECTRIC VEHICLE)	2
38	21809-G1	WASHER, INNER WHEEL RIM (GASOLINE VEHICLE)	2
39	21807-G1	BRAKE DRUM (GASOLINE VEHICLE) WITH LUG BOLTS	2
40	19186-G1	BRAKE DRUM (ELECTRIC VEHICLE) WITH LUG BOLTS	2
41			
42	21830-G1	WASHER, OUTER WHEEL RIM (GASOLINE VEHICLE)	2
43	15487-G1	WASHER, OUTER WHEEL RIM (ELECTRIC VEHICLE)	2
44	00518-G8	NUT, SLOTTED, 3/4 - 16 (GASOLINE VEHICLE)	2
45	10387-G1	PIN, COTTER, 1/8 X 1 1/2 LG	2
46	15483-G1	NUT, SLOTTED, 5/8 - 18 (ELECTRIC VEHICLE)	2
47	12091-G1	CAP, SPINDLE	2
48	24939-G2	ADAPTOR, SPINDLE CAP (GASOLINE VEHICLE)	2
49	24939-G1	ADAPTOR, SPINDLE CAP (ELECTRIC VEHICLE)	2

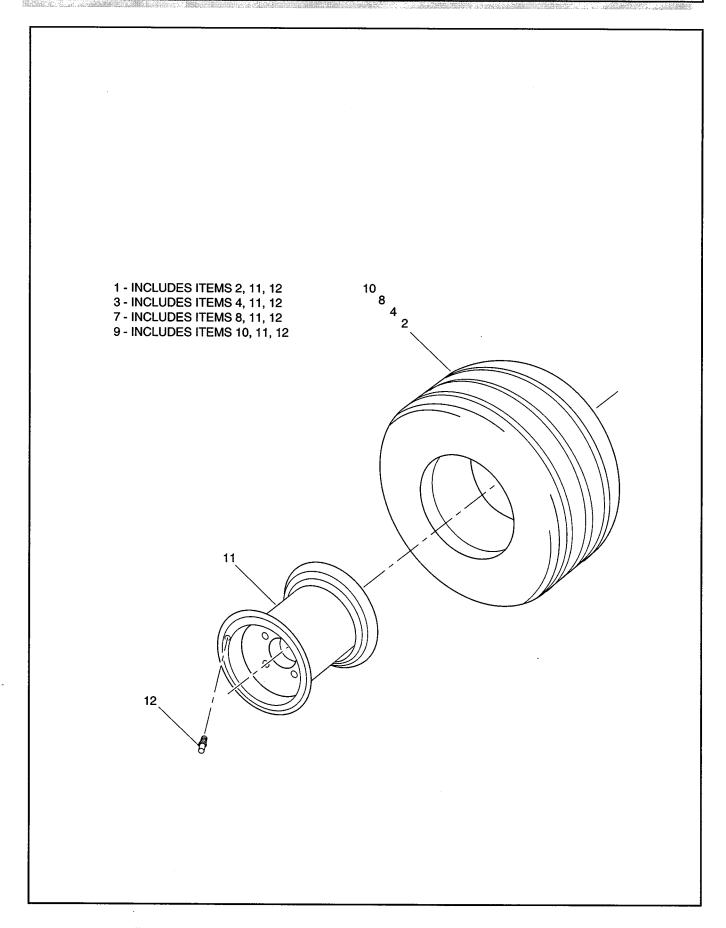

Electric / Gasoline Vehicle

WHEELS AND TIRES

THE USE OF NON UL PARTS WILL VOID ANY UL LISTING.

When ordering parts, please specify the model and serial number of the product.

* Indicates a component that is not available as an individual part.

G** Indicates consult Customer Service Department for additional information.

ITEM	PART NO.	1 2 3 4 5 DESCRIPTION Q	YTY.
1	27772-G01	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, LINKS (INCLUDES ITEMS 2, 11, 12)	AR
2	27772-G05	18 X 8.5 - 8 CARLISLE TIRE, LINKS	AR
3	27772-G02	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, TURF GLIDE (INCLUDES ITEMS 4, 11, 12)	AR
4	27772-G06	18 X 8.5 - 8 CARLISLE TIRE, TURF GLIDE	AR
5			
6			
7	27772-G03	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, TURF SAVER (INCLUDES ITEMS 8, 11, 12)	AR
8	27772-G07	18 X 8.5 - 8 CARLISLE TIRE, TURF SAVER	AR
9	27772-G04	18 X 8.5 - 8 CARLISLE TIRE AND WHEEL ASSEMBLY, FAIRWAY (INCLUDES ITEMS 10, 11, 12)	AR
10	27772-G08	18 X 8.5 - 8 CARLISLE TIRE, FAIRWAY	AR
11	15169-G1	WHEEL RIM, 4 LUG, STANDARD	AR
12	11657-G1	VALVE STEM	AR

SPECIAL TOOLS

SPECIAL TOOLS LISTING

SPECIAL TOOLS

Part No.

Part No.

ELECTRIC

GASOLINE

VEHICLE

VEHICLE

SPECIAL TOOLS

BATTERY MAINTANANCE KIT	25587-G01	
SEAL INSTALLATION TOOL (REAR AXLE SHAFT SEAL)	18739-G1	
BATTERY SET DISCHARGER, 36 VOLT, 75 AMP	28251-G01	
HIGH RESISTANCE SPARK PLUG WIRE SET	••••••	26733-G02
PULLER, DRIVE CLUTCH		19779-G2
PULLER, FLYWHEEL		
CAM PULLEY TOOL		27851-G01
CURRENT INDICATOR	16489-G1	16489-G2
MULTI-METER, DIGITAL	27481-G01	27481-G01
CRIMPING TOOL	27765-G01	27765-G01
SLIDE HAMMER		
(AXLE/HUB REMOVAL)	15947-G1	15947-G1
SLIDE HAMMER (AXLE REMOVAL ONLY)	18753-G1	18753-G1
TACHOMETER		
FEELER GAUGE		
COMPRESSION TESTER		72524-G01

OIL, 10W-30

5 GALLONS	25730-G03
12 QUART CASE	25730-G04
55 GALLON DRUM	25730 - G05

PAINT

CONTACT CUSTOMER REPRESENTATIVE FOR COLOR SPECIFICATIONS AND PART NUMBERS

ACCESSORIES

ACCESSORIES LISTING

ACCESSORIES

Part No.

ELECTRIC/GASOLINE VEHICLES

ACCESSORIES LISTING

SUN TOP KIT	75040-G01
SUN TOP KIT (4 CADDY VEHICLE ONLY)	75123-G01
WINDSHIELD KIT (SOLID, CLEAR AND REQUIRES SUN TOP KIT) 4 CADDY VEHICLE ONLY	75133-G01
WINDSHIELD KIT (SOLID, TINTED AND REQUIRES SUN TOP KIT) 4 CADDY VEHICLE ONLY	75133-G02
WINDSHIELD KIT (2 BEND, CLEAR AND REQUIRES SUN TOP KIT)	75041 - G03
WINDSHIELD KIT (2 BEND, TINTED AND REQUIRES SUN TOP KIT)	75041-G04
WINDSHIELD KIT (SPLIT, CLEAR AND REQUIRES SUN TOP KIT)	75077-G01
WINDSHIELD KIT (SPLIT, TINTED AND REQUIRES SUN TOP KIT)	75077-G02
DIVOT REPAIR KIT (REQUIRES SIDE BASKET KIT)	23300-G1
RAKE HOLDER	75006-G01
SAND RAKE	14735-G1
TOW BAR KIT (CASUAL USE)	75033-G01
TOW BAR KIT (PERMANENT USE)	75089 - G01
WEATHER ENCLOSURE (3 SIDED)	
WEATHER ENCLOSURE (4 SIDED)	75079-G01
REAR VIEW MIRROR (REQUIRES SUN TOP KIT)	19528-G2
MESSAGE HOLDER KIT (REQUIRES SUNTOP KIT)	75094-G01
HOURMETER (GASOLINE VEHICLE ONLY)	75114 - G02
HOURMETER (ELECTRIC VEHICLE ONLY)	
COOLER JUG / BRACKET KIT	
BAG COVER / RAIN CURTAIN KIT	75191 - G01
SEAT REFURBISHMENT SPRAY (WHITE)	28166 - G01
TOW LINK ASSEMBLY (REQUIRES TOW BAR ADAPTER KIT)	75165-G01
TOW BAR ADAPTER KIT (REQUIRES TOW LINK ASSEMBLY)	.75166-G01

ACCESSORIES


ACCESSORIES ILLUSTRATED

NOTE: SIDE BASKET CANNOT BE USED ON SAME SIDE OF VEHICLE WITH SAND BOTTLE KIT. 75009-G01 **NOTE:** TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO.


READ ALL INSTRUCTIONS BEFORE PROCEEDING.

SEAT BACK

- PORT TO FORM CLEAN, STRAIGHT THREADS. BACK THE TAPTITE SCREW DESIGNATED HOLE (SEE ILLUSTRATION) IN THE METAL SEAT BACK SUP-1. INSTALLATION TIP: INSTALL THE 1/4-20 TAPTITE BOLT ITEM 1INTO THE OUT OF THE SEATBACK SUPPORT.
- ALIGN THE HOLES IN THE REINFORCING PLATE AND THE SAND BOTTLE HOLDER, ITEM 2 WITH THE HOLE INDICATED IN THE THE METAL SEAT BACK SUPPORT. INSERT THE TAPTITE SCREW AND SECURE FIRMLY. તાં

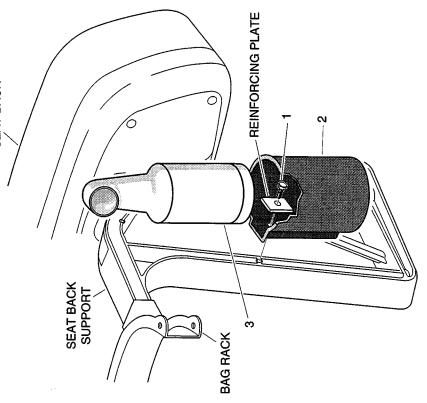

MEDALIST

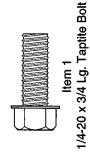

THE SYMBOL TITLE THE LETTER ENCLOSED WITHIN IT.

SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.

RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

-	DRAWING NO. 75029
X	-
SAND BOTTLE INSTALLATION INSTRUCTION	WHITE 2/14/95
TION IN	REV BY REV DATE
STALLA	L WEBB 11/29/93
TLE IN	DRN BY ORIG DATE
SAND BOT	G TEXTRON

 $\mathbf{\omega}$

REV

BOLT, TAPTITE, 1/4-20 X 3/4 LG.

DESCRIPTION

PART NO. 71102-G01

QŢ

ITEM

HOLDER, SAND BOTTLE

BOTTLE, SAND

27373-G01 27374-G01

0 0

PG. 1 OF 1

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855


NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75007-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

1. ALIGN HOLES ON THE SIDE BASKET, ITEM 1 WITH HOLES IN THE SEAT BACK SUPPORT BRACKET AS SHOWN IN ILLUSTRATION.

NOTE
BASKET MAY BE INSTALLED ON EITHER SIDE OF VEHICLE

INSTALL THE THREAD FORMING BOLTS, ITEM 2 INTO EACH HOLE. TIGHTEN TO 60 - 85 IN. LBS. TORQUE. તાં

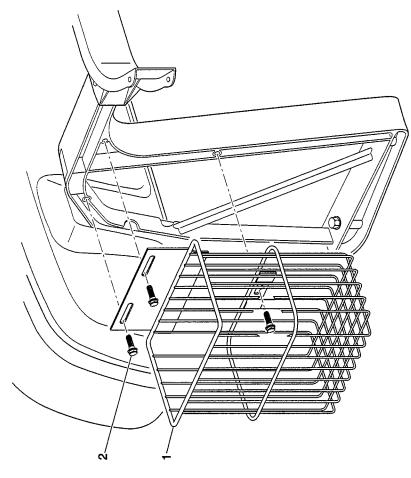

ITEM	QTY	PART NO.	DESCRIPTION
 -	-	75008-601	BASKET SIDE
 . 2	· ന	71102-G02	BOLT. 1/4-20 X 1/2 LG.

THE SYMBOL (REFERS TO A NOTE CORRESPONDING TO THE LETTER FINCLOSED WITHIN IT	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.	

1G TO	IG TO TITLE SIDE BASKET INSTALLATION	KET INST	TALLA	NOI			
rs. IG OF	EZEUTINI DRIN BY ORIG DATE	DRN BY ORIG DATE	L WEBB REV BY 01/03/94 REV DATE		4	DRAWING NO. 750	A DRAWING NO. 75026
	E-Z-GO DIVISION OF TEXT	TRON, INC., F	P.O. BOX 3	E-2-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA, 30913-2699, 1-800-241-5855	-908-	241-58	55

PG. 1 OF 1

REV

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75041-G0*

* CONTACT SERVICE PARTS FOR AVAILABILITY.

READ ALL INSTRUCTIONS BEFORE PROCEEDING.


- 1. INSERT THE RUBBER GROMMETS, ITEM 3 INTO THE TOP AND BOTTOM HOLES ON BOTH SIDES OF THE WINDSHIELD, ITEMS 1, 2, 9, OR 10.
- INSERT THE SPACERS, ITEM 4 INTO THE RUBBER GROMMETS.


તાં က်

- INSERT THE PLUG BUMPERS, ITEM 5 INTO THE CENTER HOLES OF THE WINDSHIELD, ITEMS 1, 2 OR THE TOP OF WINDSHIELD, ITEMS 9 OR 10.
- PLACE THE WINDSHIELD AGAINST THE FRONT STRUT WITH THE SMALL TAPERED END AT THE TOP.

4.

INSERT THE BOLTS, ITEM 6 THRU WINDSHIELD AND THE FRONT STRUT AND SECURE WITH WASHERS, ITEM 7 AND LOCK NUTS, ITEM 8. Ď.

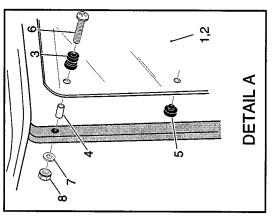

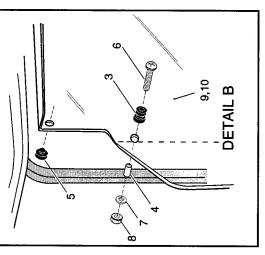

1, 2 - DETAIL A 9, 10 - DETAIL B	
A A	

ITEM	QTY	PART NO.	DESCRIPTION
-	-	75021-G01	WINDSHIELD, CLEAR, 2 BEND
α	-	75021-G02	WINDSHIELD, TINTED, 2 BEND
ო	4	72147-G01	GROMMET, RUBBER
4	4	23726-G7	SPACER
2	8	75124-G01	BUMPER, PLUG
9	4	16705-G6	SCREW, 1/4-20 X 1 3/4 LG.
7	4	00660-G7	WASHER, 1/4"
æ	4	00891-G2	NUT, LOCK, 1/4-20
6	-	75203-G01	WINDSHIELD, CLEAR, 4 BEND
10	-	75203-G02	WINDSHIELD, TINTED, 4 BEND

TITLE	E 21
THE SYMBOL TEFFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

7	
_	
\mathbf{C}	
\simeq	
F	
_	
⋖	
7	
_	
=	
Q.	1
_	1
(J)	
-	
_	
-	
\sim	
_	į
***	1
ш	
=	
I	
\overline{a}	
U,	
=	
Z	
==	
>	
5	ł
_	1
	ı

3 REVBY J.Brand	3 REV DATE 05/31/95	
, L WEBB	ATE 12/17/93	
DRN BY	ORIG DATE	


E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-241-5855

DRAWING	NO. 75043	
•	<	
J.Brand	05/31/95	
REV BY J.I	REV DATE 05	
L WEBB	12/17/93	
DRN BY	ORIG DATE	
	NONING!	


PG. 1 OF 2

REV C


NOTE: ALL HARDWARE SHOWN ACTUAL SIZE

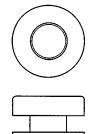

RUBBER GROMMET QTY. 4 ITEM 3

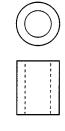


ITEM 4 SPACER QTY. 4

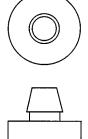

ITEM 5 PLUG BUMPER QTY.2



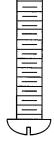

1/4-20 X 1 3/4" SCREW ITEM 6



1/4" WASHER QTY. 4 ITEM 7





E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855 THE SYMBOL CREFERS TO A NOTE CORRESPONDING TO TITLE SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.

RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF LACK.


2	TITLE WINDSHIELD INSTALLA	LD INST	ALLATION	ION		
		DRN BY	L. WEBB	REV BY	J. BRAND	1
Ä		ORIG DATE	12/17/93	REV DATE	05/31/95	
:						1


ပ

REV

PG. 2 OF 2

DRAWING NO. 75043

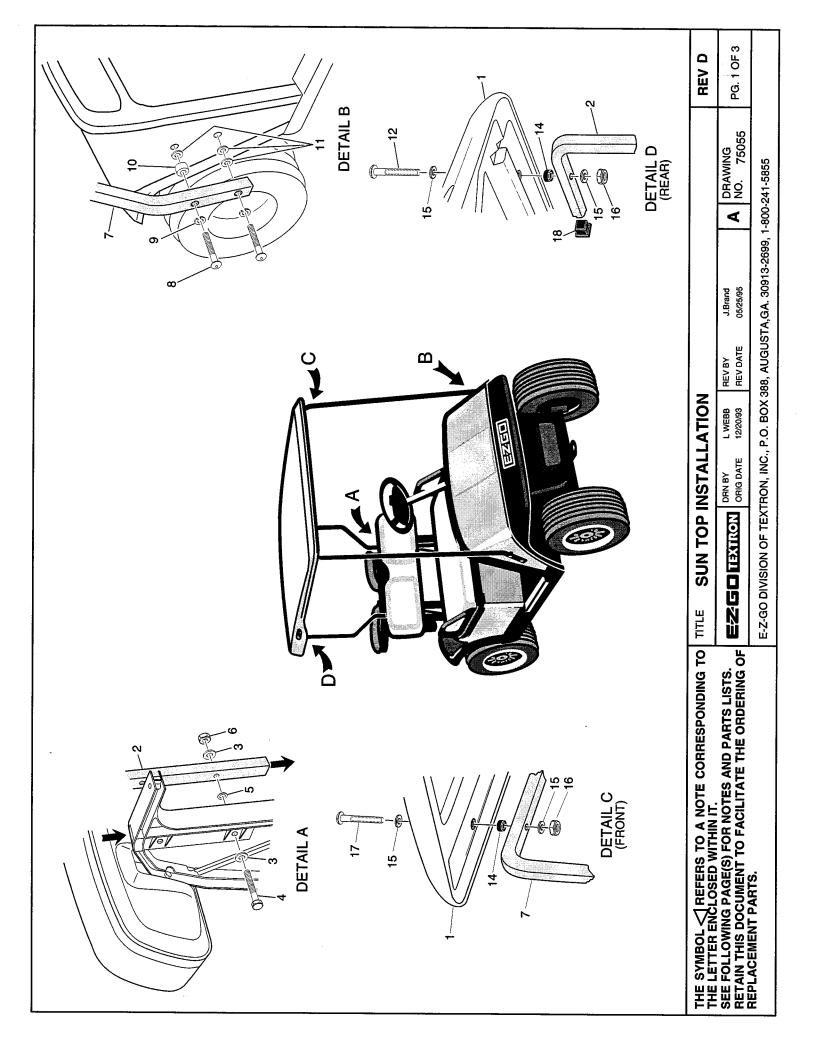

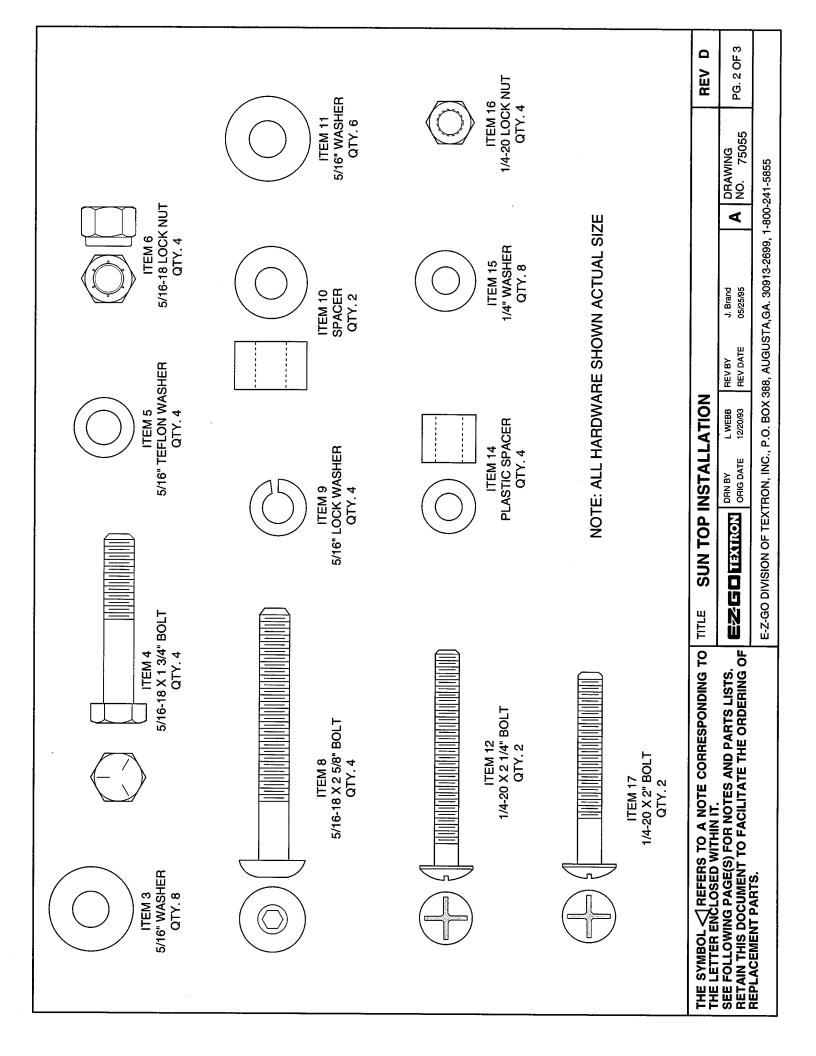

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST 75040-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. REAR STRUTS

- 1. REMOVE CENTER BASKET AND OTHER ACCESSORIES THAT MAY LIMIT ACCESS REQUIRED FOR INSTALLING REAR STRUTS.
- 2. PLACE REAR STRUT, ITEM 2 THRU THE SQUARE HOLE IN THE TOP OF THE SEAT BACK SUPPORT.
- 3. ALIGN THE HOLES IN THE REAR STRUT WITH THE HOLES IN THE SEAT BACK SUPPORT BRACKET. PUSH THE STRUT TOWARD THE CENTER OF THE CAR TO GIVE CLEARANCE BETWEEN THE STRUT AND THE SEAT BACK SUPPORT.
- 4. PLACE WASHER, ITEM 3 ONTO BOLT, ITEM 4 AND INSERT BOLT JUST THRU SEAT BACK SUPPORT (2 3 THREADS). PLACE THE SMALL WHITE TEFLON WASHER, ITEM 5 ONTO THE BOLT BETWEEN THE STRUT AND SEAT BACK SUPPORT TO PREVENT SQUEAKING.
- 5. INSERT THE BOLT WITH THE TWO WASHERS IN PLACE THRU THE REAR STRUT. SECURE HARDWARE WITH WASHER, ITEM 3 AND LOCK NUT, ITEM 6. **DO NOT TIGHTEN HARDWARE.**
- 6. REPEAT STEPS 4 AND 5 FOR THE OTHER HOLE.
- 7. REPEAT PROCEDURE AT THE OTHER SIDE OF VEHICLE.
- 8. INSERT TUBE CAPS, ITEM 18 INTO THE TOP OF THE REAR STRUTS.

B. FRONT STRUT

- 1. REMOVE AND DISCARD THE FOUR ALLEN HEAD BOLTS FROM THE FRONT COWL USING A 7/32" ALLEN WRENCH.
- 2. AT THE TOP HOLE, INSTALL THE FRONT STRUT, ITEM 7 WITH BOLT, ITEM 8 AND BLACK LOCK WASHER, ITEM 9, ON THE OUTSIDE OF STRUT, AND A SPACER, ITEM 10 AND A WASHER, ITEM 11 BETWEEN THE FRONT COWL AND STRUT. **DO NOT TIGHTEN HARDWARE.**
- 3. AT THE BOTTOM HOLE, SECURE THE FRONT STRUT, ITEM 7 WITH BOLT, ITEM 8 AND BLACK LOCK WASHER, ITEM 9, ON THE OUTSIDE OF STRUT, AND TWO BLACK WASHERS, ITEM 11 BETWEEN THE FRONT COWL AND STRUT. **DO NOT TIGHTEN HARDWARE.**

C. SUNTOP

- 1. PLACE SUN TOP, ITEM 1 ONTO STRUTS
- 2. SECURE SUN TOP LOOSELY WITH BOLTS, ITEM 17 AT FRONT AND ITEM 12 AT REAR, PLASTIC SPACER, ITEM 14, WASHER, ITEM 15, AND LOCK NUT, ITEM 16. SEE ILLUSTRATIONS FOR INSTALLATION SEQUENCE.
- 3. TIGHTEN ALL SUN TOP HARDWARE TO 3 5 FT. LBS. TORQUE.
- 4. TIGHTEN ALL REAR STRUT HARDWARE TO 13 15 FT. LBS. TORQUE.
- 5. TIGHTEN ALL FRONT STRUT HARDWARE TO 17 19 FT. LBS. TORQUE.

ITEM	ΔΤ	PART NO.	DESCRIPTION
-	-	27069-G01	TOP, SUN
7	2	75046-G01	STRUT, REAR
က	80	00571-G2	WASHER, 5/16"
4	4	00439-G6	BOLT, 5/16-18 X 1 3/4"
5	4	17255-G1	WASHER, TEFLON, 5/16"
9	4	11098-G6	NUT, LOCK, 5/16-18
7	-	75045-G01	STRUT, FRONT
æ	4	71056-G02	BOLT, 5/16-18 X 2 5/8"
6	4	00905-G8	WASHER, LOCK, 5/16"
10	7	75048-G01	SPACER
F	9	00570-G2	WASHER, 5/16"
12	7	00753-G6	BOLT, STAINLESS STEEL, 1/4-20 X2 1/4"
13			
14	4	75051-G01	SPACER, PLASTIC
15	ω	00559-G7	WASHER, 1/4"
16	4	00891-G2	NUT, LOCK, 1/4-20
17	7	00753-G5	BOLT, STAINLESS STEEL,1/4-20 X 2"
8	7	19853-G1	CAP, TUBE, 1"
		_	

TITLE	EZGI	E-Z-GO DIN
THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO TITLE	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.

TITLE SUN TOP INSTALLATION	INSTALL	ATION		
	DRN BY	L WEBB	REV BY	J. Brand
	ORIG DATE	12/20 /93	REV DATE	05/25/95

PG. 3 OF 3

DRAWING NO. 75055

⋖


REV D

IC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-241-5855
. 30913-2699
AUGUSTA,GA
BOX 388,
<u>о</u> .
IN OF TEXTRON, INC.,
õ
EX
F TE
S
1810
⋛

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75003-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

1. PLACE THE CENTER BASKET, ITEM 1 JUST BEHIND THE BAG RACK AS SHOWN IN ILLUSTRATION BELOW.

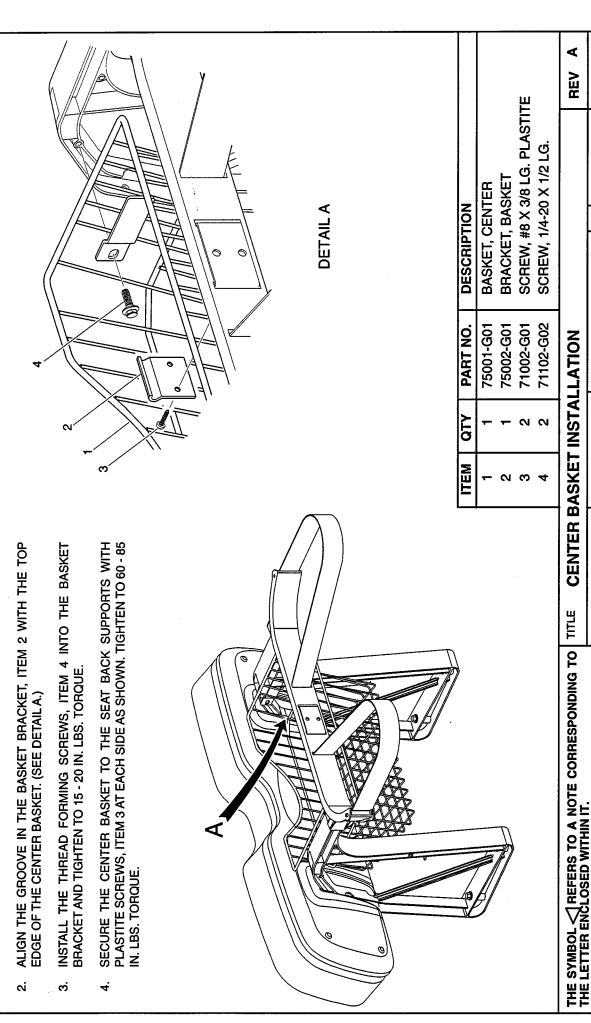

PG. 1 OF 1

DRAWING NO. 75025

4

L WEBB 01/24/94

REV BY REV DATE

L WEBB 01/03/94

DRN BY ORIG DATE

EZZGO TEXTRON


SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.
RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75013-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

- REMOVE THE RIVETS ON THE SIDE OF THE BAGWELL.
- ALIGN THE MUD FLAP, ITEMS 1 AND 2 WITH THE HOLE IN THE RIB OF THE FENDER CAP AS SHOWN AND INSERT RATCHET TYPE FASTENER, ITEM 4. તાં
- SECURE THE MUD FLAP TO THE BAGWELL WITH NEW RIVETS, ITEM 3. က

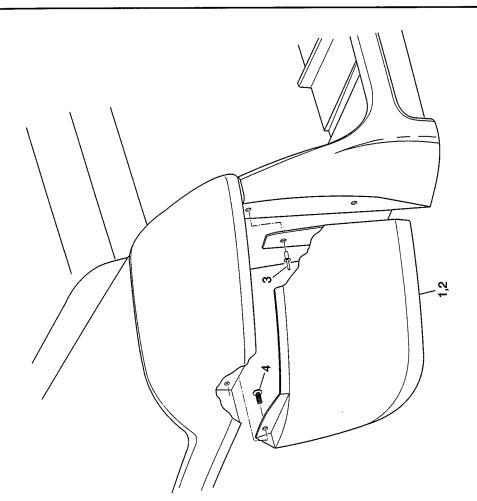

DESCRIPTION	MUD FLAP, L.H.	MUD FLAP, R.H.	RIVET, 3/16	FASTENER, RATCHET TYPE	
PART NO.	75010-G01	75010-G02	71055-G01	16816-G2	
ITEM QTY	1	_	4	8	·
ITEM	-	7	က	4	

TITLE	פצנ	6-Z-GO
THE SYMBOL THE REFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.

0	O TITLE MUD FLAP INSTALLATION	INSTAI	LATIO	7		
IL.	EZECTINATION ORIG DATE	DRN BY ORIG DATE	L WEBB 01/24/94	REV BY REV DATE	A	A DRAWING
	E-Z-GO DIVISION OF TEXT	TRON, INC.,	P.O. BOX 3	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855	800-2	41-5855

PG. 1 OF 1


DRAWING NO. 75014

REV

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75109-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

- INSERT THE ASH TRAY, ITEM 1 INTO THE GASKET, ITEM 2 UNTIL THE GASKET HOOKS OVER THE FLANGES ON THE TOP AND BOTTOM OF THE ASH TRAY.
- USING BRACKET, ITEM 3 AS A TEMPLATE, INSERT THE (4) SELF DRILLING SCREWS, ITEM 4. LOCATE BRACKET APPROXIMATELY AS SHOWN IN ILLUSTRATION. તાં
- SNAP THE ASH TRAY INTO THE BRACKET. က်

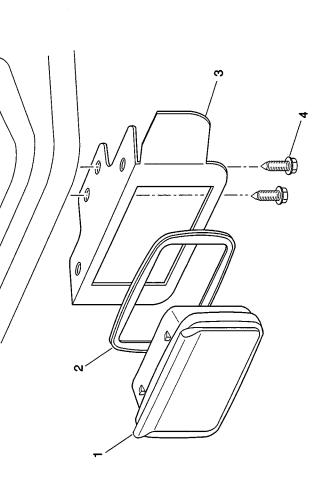


	ITEM	QTY	ITEM QTY PART NO.	DESCRIPTION	
	-	-	27731-G01	ASH TRAY	
	2	-	27736-G01	GASKET, ASH TRAY	•
	က	-	75108-G01	BRACKET, ASH TRAY	
	4	4	00100-G4	SCREW, 10-16 X 1/2" LG.	
ASH TRAY INSTALLATION	INSTA	LLATIC	Z	- REV -	

TITLE	EZI	
THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF BEDIACEMENT DADAS.	


ID PARTS LISTS. THE ORDERING OF	F EZGUIÐAIRON ORIG DATE 01/21	DRN BY ORIG DATE	L WEBB REV BY 01/21/94 REV DATE	REV BY REV DATE	A	DRAWING NO. 75
	E-Z-GO DIVISION OF TEXT	TRON, INC., I	P.O. BOX 3	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855	1-800-2	41-5855

PG. 1 OF 1


DRAWING NO. 75110

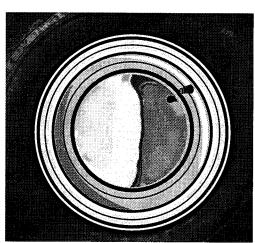

6" CHROME HUBCAP

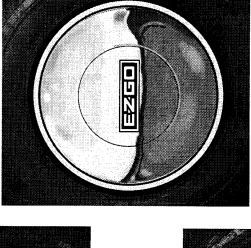

8" CHROME HUBCAP

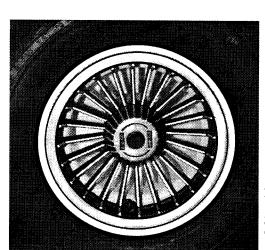

GOLD / SILVER SPOKE HUBCAP

ITEM	QTY	PART NO.	DESCRIPTION
7	1	14913-G1	8" CHROME HUBCAP
0	4	14913-G2	8" CHROME HUBCAP SET
ო	τ	16042-G1	6" CHROME HUBCAP
4	4	16042-G2	6" CHROME HUBCAP SET
2	-	19241-G2	GOLD SPOKE HUBCAP
9	4	19241-G4	GOLD SPOKE HUBCAP SET
2	-	19241-G1	SILVER SPOKE HUBCAP
80	4	19241-G3	SILVER SPOKE HUBCAP SET


TITLE	
THE SYMBOL TITLE THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

DRAWING	A NO. 28244
REV BY	REV DATE
CGT	02/07/95
DRN BY	ORIG DATE
STS.	IING OF

WHEEL COVER INSTALLATION

REV -

PG. 1 OF 1

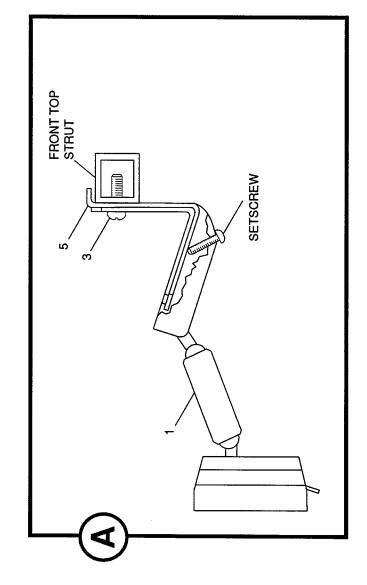

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-241-5855 THE LETTER ENCLOSED WITHIN IT.
SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.
RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

E CORRESPONDING TO TITLE MEDALIST REAR VIEW MIRROR INSTALLATION INSTRUCTIONS	DBN BY COT BEV BY
THE SYMBOL REFERS TO A NOTE CO	THE LETTER ENCLOSED WITHIN II.

	, C	7 - OF 2	
Chiman	פאואארום	NO. 75162	-0.0.
	<	1	
70770	ום אטר	05/16/94 REV DATE	
ŀ	3	05/16/94	
70 100	בם אוכם	ORIG DATE	
_			Ų.

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 19528-G2

READ ALL INSTRUCTIONS BEFORE PROCEEDING.


- 1. DISCARD PLASTIC MOUNTING BRACKETS AND ADHESIVE SUPPLIED WITH KIT. THESE ITEMS ARE USED IN OTHER APPLICATIONS.
- 2. REMOVE THE FRONT TOP HARDWARE FROM THE FRONT TOP STRUT. IT IS NOT NECESSARY TO REMOVE TOP.
- 3. LOCATE AND DRILL A .147 DIA. HOLE (#26 DRILL) THROUGH CENTER OF FRONT TOP STRUT (INSIDE SURFACE ONLY). SEE DETAIL A.
- USING SCREW, ITEM 3 FASTEN SUPPORT BRACKET, ITEM 5 TO FRONT TOP STRUT AS SHOWN IN DETAIL A.
- 5. LOOSEN SETSCREW SUPPLIED WITH MIRROR.
- SLIDE MIRROR, ITEM 1 ONTO BRACKET AND TIGHTEN SETSCREW. DO NOTOVERTIGHTEN. DAMAGE TO MIRROR WILL OCCUR.
- 7. REINSTALL THE TOP ONTO THE FRONT TOP STRUT. TIGHTEN HARDWARE TO 3 5 FT. LBS. TORQUE.


ITEM	ΩTY	PART NO.	DESCRIPTION
-	-	19496-G1	MIRROR, REAR VIEW
7			
က	-	19527-G1	SCREW, STAINLESS STEEL, SELF TAP- PING #8 - 32 × 5/8 G
4			
5	-	19502-G2	BRACKET, SUPPORT

THE SHIPSE THE END TO A NOTE CONDESPONDING TO
THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.

TO THE MEDALIST REAR VIEW MIRHOR INSTALLATION INSTRUCTIONS REV - GRAND ORIGINATE OF THE PROPERTY OF THE PROPER
--

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-241-5855

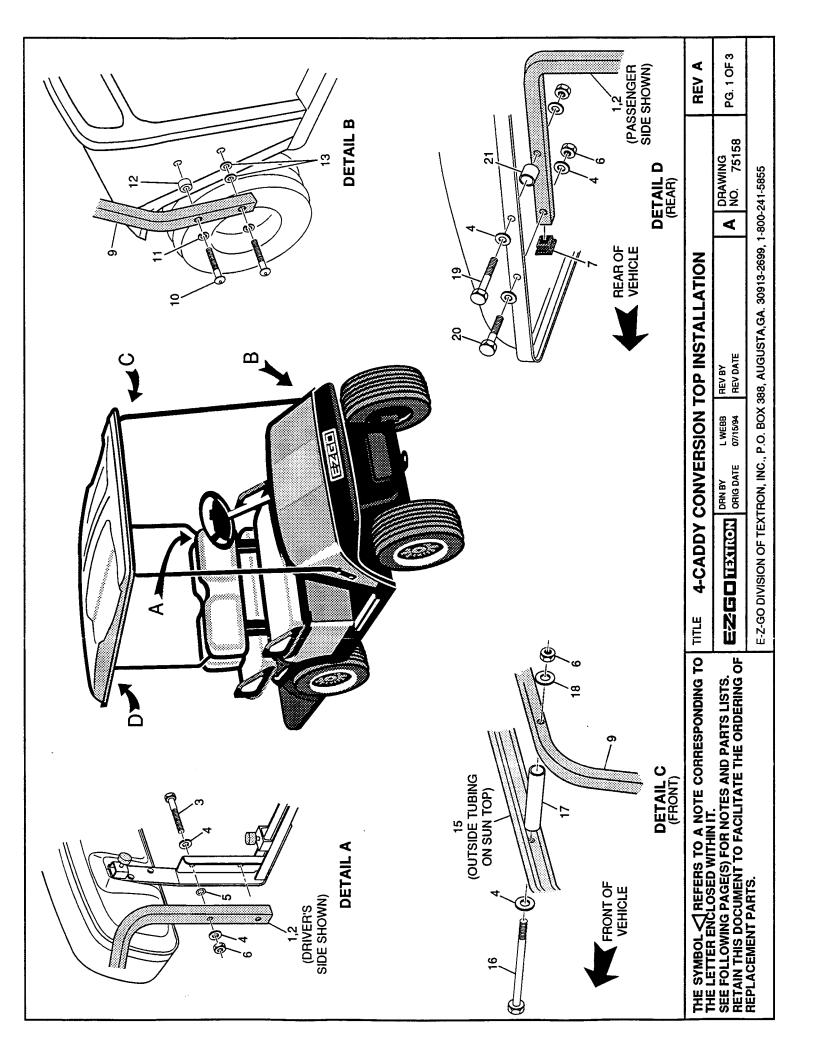

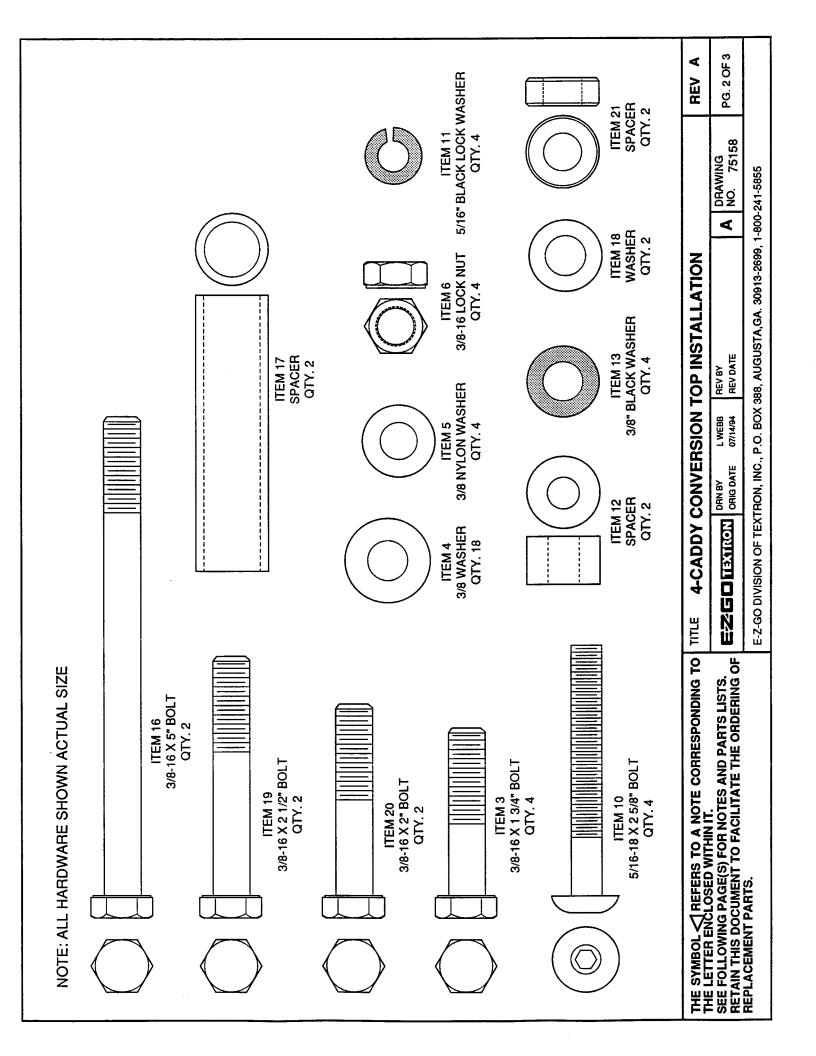

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75040-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. REAR STRUTS

- At driver's side, align the holes in the rear strut (item 1) with the holes in the seat back support bracket, being sure that the open end of the strut faces the rear of the vehicle as shown in Details A and D.
- 2. Insert the bolt (item 3) and washer (item 4) through the seat back support bracket. Place nylon washer (item 5) between the seat back support bracket and rear strut. Secure with washer (item 4) and lock nut (item 6) at outer side of rear strut as shown in Detail A. DO NOT TIGHTEN HARDWARE.
- 3. Repeat procedure with rear strut (item 2) at passenger side of vehicle.
- 4. Insert end caps (item 7) into the top of the rear struts as shown in Detail D.

B. FRONT STRUTS

- Remove and discard the four allen head bolts from the front cowl using a 7/32* allen wrench.
- 2. At the upper hole (both sides of vehicle), install the front strut (item 9) with bolt (item10) and black lock washer (item 11) on the outside of strut, and a spacer (item 12) between the front cowl and strut. DO NOT TIGHTEN HARDWARE. See Detail B.
- 3. At the lower hole, secure the strut with bolt (item 10) and black lock washer (item 11) on the outside of strut, and two black washers (item 13) between the front cowl and strut. **DO NOT TIGHTEN HARDWARE.** See Detail B.

C. SUN TOP

- 1. Place sun top (item 1) onto struts.
- 2. AT FRONT END OF VEHICLE: Secure sun top loosely with bolts (item 16), washers (item 4), spacers (item 17), washers (item 18) and lock nuts (item 6). See Detail C for hardware sequence. **DO NOT TIGHTEN HARDWARE**.
- AT REAR END OF VEHICLE: At the hole closest to rear of vehicle, insert bolt (item 20) and washer (item 4) and secure with washer (item 4) and lock nut (item 6). See Detail D.
- 4. Insert bolt (item 19) and washer (item 4) through the other hole. Place spacer (item 21) between sun top and strut. Secure with washer (item 4 and lock nut (item 6). See Detail D.
- 5. Tighten all hardware to 13 15 ft. lbs. torque.

						-	-														
DESCRIPTION	STRUT, REAR, DRIVER'S SIDE	STRUT, REAR, PASSENGER SIDE	BOLT, 3/8-16 X 1 3/4" LG.	WASHER, 3/8	WASHER, NYLON, 3/8	NUT, LOCK, 3/8-16	CAP, END		STRUT, FRONT	BOLT, 5/16-18 X 2 5/8" LG.	WASHER, LOCK, BLACK, 5/16	SPACER, 1/2" THICK	WASHER, BLACK, 3/8		TOP, SUN	BOLT, 3/8-16 X 5" LG.	SPACER	WASHER, 3/8	BOLT, 3/8-16 X 2 1/2" LG.	BOLT, 3/8-16 X 2" LG.	SPACER, 1/4" THICK
PART NO.	75074-G01	75074-G02	00665-G5	00679-G1	00771-G5	00891-G5	19853-G1		75125-G01	71056-G02	00905-G8	75048-G01	00879-G1		27604-G01	00674-G8	18716-G1	00653-G1	00665-G3	00665-G6	24647-G1
QTY	1	-	4	18	4	9	8		-	4	4	2	4		-	2	2	0	8	8	7
ITEM	-	7	က	4	2	9	7	80	6	10	F	12	13	14	15	16	17	18	19	20	21

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-241-5855

PG. 3 OF 3

DRAWING NO. 75158

REV

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75041-G03 (CLEAR) 75041-G04 (TINTED)

READ ALL INSTRUCTIONS BEFORE PROCEEDING.


Insert the rubber grommets (item 3) into the top and bottom holes on both sides of the windshield (item 1 or item 2).

- From the rear of the windshield, insert the plug bumpers (item 5) into the center holes of the windshield. See Detail A. က

Insert the spacers (item 4) into the rubber grommets.

 α i

- Place the windshield (item 1 or item 2) against the front strut with the small tapered end at the top. 4
- Insert the bolts (item 6) through the windshield and front strut and secure with washers (item 7) and lock nuts (item 8). ĸ,
- Tighten enough to ensure that spacer (item 4) does not rattle. e,

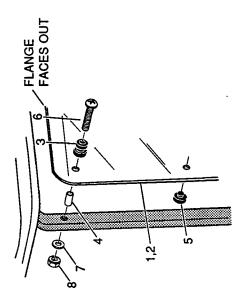

DETAIL A

ITEM	αту	PART NO.	DESCRIPTION
-	-	75160-G01	WINDSHIELD, CLEAR
2	-	75160-G02	WINDSHIELD, TINTED
က	4	72147-G01	GROMMET, RUBBER
4	4	23726-G7	SPACER
5	2	75124-G01	BUMPER, PLUG
9	4	16705-G6	SCREW, 1/4-20 X 1 3/4 LG.
7	4	00660-G7	WASHER, 1/4"
8	4	00891-G2	NUT, LOCK, 1/4-20

THE SYMBOL (REFERS TO A NOTE CORRESPONDING TO THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF REPLACEMENT PARTS.


_	Į
ā	
Ě	l
5	l
Ţ	İ
	ı
S	l
=	Į
	İ
#	I
ਨ ਨ	l
	I
Ş	١
>	l
ō	١
<u></u>	١
	ı
>	١
ō	ı
U	١
≿	l
ַ	l
ပ်	
4	
<u>"</u>	I
Ξ	I
O HILLE 4-CADDY CONVERSION WINDSHIELD INSTALLATION	1

_0	L	J
DRAWING	NO. 75161	
_	1	
REV BY	REV DATE	
L WEBB	07/14/94	
DRN BY	ORIG DATE	

PG. 1 OF 1

REV

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30913-2699, 1-800-241-5855

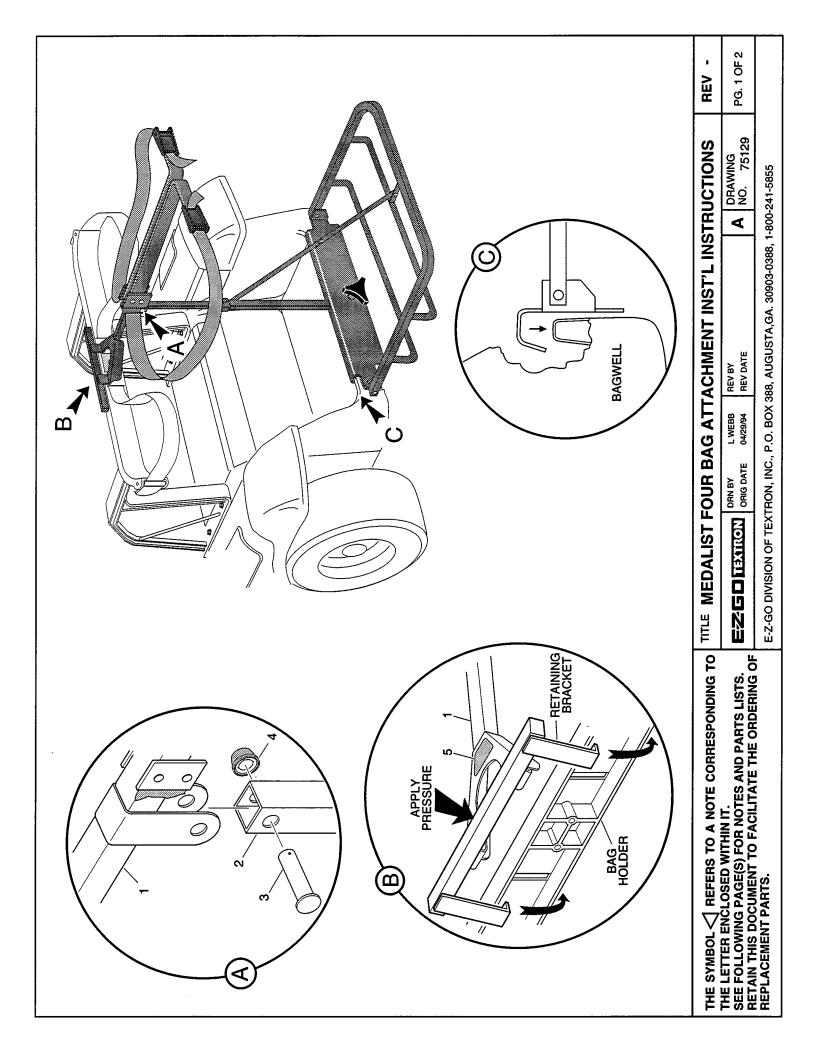

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75093-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. FOUR BAG ATTACHMENT ASSEMBLY

 Install the top assembly, item 1 to the bottom assembly, item 2 with clevis pin, item 3 and cap nut, item 4. See Detail A.

B. INSTALLING FOUR BAG ATTACHMENT TO VEHICLE

4. Let the bottom part of the four bag attachment angle downward to disengage

the retaining brackets at the top.

Lift upward and forward simultaneously to remove accessory from vehicle.

LIFTING UP ON THE BOTTOM OF THE FOUR BAG ATTACHMENT TOO FAR WILL BEND THE RETAINING BRACKETS AT THE TOP, MAKING THE ACCESSORY UNUSABLE.

CAUTION

NOTE

It is necessary that the bottom part of the four bag attachment be disengeged from the bumper and at a level below the bumper (approx. 6-8 inches above the ground) before attemping Step 1. Note the approximate angle of the top assembly and retaining brackets shown in Detail B.

- 1. Place the top retaining brackets over the vehicle bag rack. See Detail B.
- Press down on the top retaining bracket while slightly raising the bottom part of the four bag attachment engaging the brackets with the underside of the vehicle bag rack. See Detail B.
- Raise the bottom of the four bag attachment just enough to clear the bumper on the bagwell and place on top of bumper as shown in Detail C.

Caution

LIFTING UP ON THE BOTTOM OF THE FOUR BAG ATTACHMENT TOO FAR WILL BEND THE RETAINING BRACKETS AT THE TOP, MAKING THE ACCESSORY UNUSABLE.

- 4. Tighten the bumper clamp by turning clockwise until the bottom is secure.
- Locate the retainer near the center of the four bag attachment. Slide upward to release the bagwell.

C. REMOVING FOUR BAG ATTACHMENT FROM VEHICLE


- 1. Fold the bagwell up toward the vertical support and secure with retainer.
- 2. Loosen the bumper clamp by turning counterclockwise.
- Lift up on the bottom part of the four bag attachment just enough to clear the bumper and pull down and away from vehicle.

 ITEM	αту	PART NO.	DESCRIPTION
 1	-	75121-G01	TOP ASSEMBLY
 7	-	75122-G01	BOTTOM ASSEMBLY
က	-	17651-G2	PIN, CLEVIS, 5/16 x 1 1/4
4	-	28129-G01	NUT, CAP, 5/16
2	-	75130-G01	LABEL, WARNING (REPLACEMENT)

<u> </u>	EZ	2 7 2
THE SYMBOL TREFERS TO A NOTE CORRESPONDING TO THE	THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.	RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF

REV -	PG. 2 OF 2
UCTIONS	A DRAWING NO. 75129
TR	4
TITLE MEDALIST FOUR BAG ATTACHMENT INST'L INSTRUCTIONS	REV BY
IG ATT	L WEBB 04/29/94
OUR BA	DRN BY ORIG DATE
TITLE MEDALIST F	=22 C TEXTRON

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855

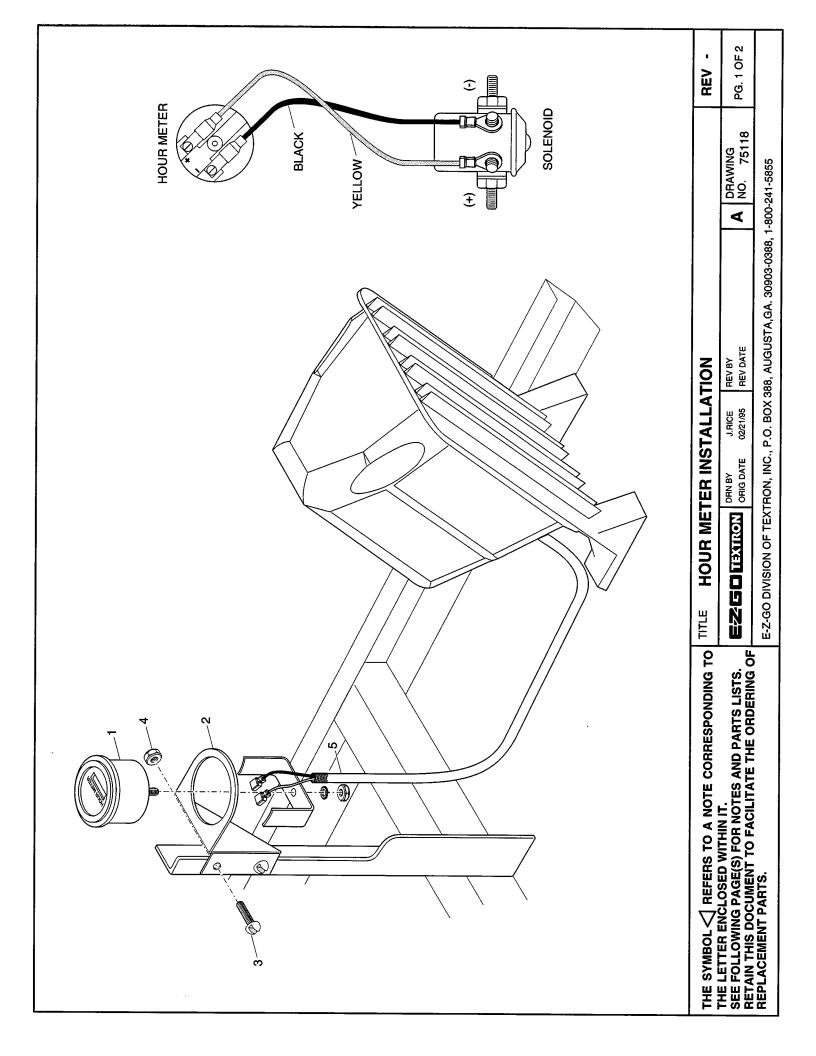

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75113-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. ASSEMBLE HOUR METER

- 1. Insert Hour Meter (item 1) through Bracket (item 2), positioned as shown.
- 2. Using hardware supplied with the Hour Meter, secure Hour Meter to Bracket.
- 3. Attach Harness (item 5) to Hour Meter as shown, Yellow wire to Positive (+) terminal and Black wire to Negative (-) terminal of Hour Meter.

B. ATTACH HOUR METER ASSEMBLY

- 1. Locate the four (4) predrilled holes in the passenger side seat support.
- 2. Secure the Hour Meter Assembly to the TOP two (2) holes using Bolts (item 3) and Nuts (item 4) as shown.

C. CONNECT TO ELECTRONIC SPEED CONTROL

- 1. Locate the cables from the Electronic Speed Control to the batteries. Disconnect both of these cables from the batteries.
- 2. Remove the four (4) bolts securing the cover on the Electronic Speed Control, and remove the cover from the Electronic Speed Control.
- Remove the nut and lock washer from the left solenoid terminal and install Yellow wire from Harness to terminal and reinstall lock washer and nut.
- 4. Repeat procedure on right terminal for Black wire.
- 5. Replace cover and reinstall bolts.
- 6. Reconnect Electronic Speed Control cables to batteries as connected earlier.


ITEM	QTY	PART NO.	DESCRIPTION
_	_	21573-G1	METER, HOUR
7	-	74019-G01	BRACKET, HOUR METER
က	2	00150-G4	BOLT, #10-24 - 1/2 LG.
4	2	11098-G7	NUT, #10-24
ß	-	75117-G02	HARNESS, HOUR METER

THE SYMBOL TREFERS TO A NOTE CORRESPONDING TO TITLE HOUR METER INSTALLATION	TITLE HOUR MET	ER INSTALL	ATION		
THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	ZGO TEXTRON		J.RICE REV BY 02/21/95 REV DATE	4	A DRAWING NO. 75
REPLACEMENT PARTS.	E-Z-GO DIVISION OF TEXT	RON, INC., P.O. BC	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855	89.	241-5855

2	TITLE HOUR METER INSTALLATION	TER INS	TALLA	NOI		
		ORN BY	J.RICE	REV BY	•	DRAWING
J.		ORIG DATE	02/21/95	REV DATE	4	NO. 75118

PG. 2 OF 2

REV

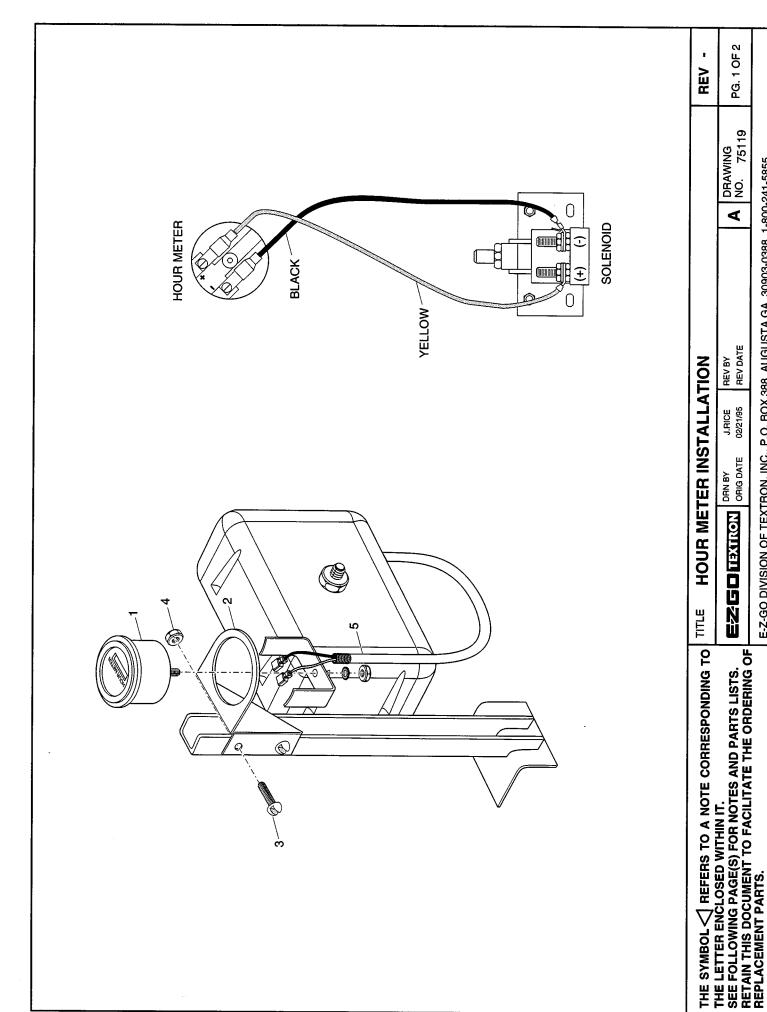

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75114-G02

READ ALL INSTRUCTIONS BEFORE PROCEEDING

A. ASSEMBLE HOUR METER

- 1. Insert Hour Meter (item 1) through Bracket (item 2), positioned as shown.
- 2. Using hardware supplied with the Hour Meter, secure Hour Meter to Bracket.
- 3. Attach Harness (item 5) to Hour Meter as shown, Yellow wire to Positive (+) terminal and Black wire to Negative (-) terminal of Hour Meter.

B. ATTACH HOUR METER ASSEMBLY

1. Locate predrilled holes in the driver's side seat support and secure the Hour Meter Assembly using Bolts (item 3) and Nuts (item 4) as shown.

C. CONNECT TO ELECTRONIC SPEED CONTROL

- 1. Locate the cables from the Electrical Control Panel to the batteries. Disconnect both of these cables from the batteries.
- 2. Remove the nut securing the cover on the Electrical Control Panel, and remove the cover from the Electrical Control Panel.
- 3. Remove the nut and lock washer from the left solenoid terminal and install Yellow wire from Harness to terminal and reinstall lock washer and nut.
- 4. Repeat procedure on right terminal for Black wire.
- 5. Replace cover and reinstall nut.
- 6. Reconnect Electrical Control Panel cabels to batteries as connected earlier.

ITEM	QTY	PART NO.	DESCRIPTION
+	ŀ	21573-G1	METER, HOUR
Ø	-	74019-G01	BRACKET, HOUR METER
က	7	00150-G4	BOLT, #10-24 - 1/2 LG.
4	7	11098-G7	NUT, #10-24
2	-	75117-G01	HARNESS, HOUR METER

THE SYMBOL TREFERS TO A NOTE CORRESPONDING TO TITLE HOUR METER INSTALLATION	TITLE HOUR MET	FER INSTALLA	TION		
THE LETTER ENCLOSED WITHIN IT. SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCIMENT TO FACILITATE THE ORDERING OF	BRN BY ORIG DATE 0	DRN BY J.RICE ORIG DATE 02/21/95	J.RICE REV BY 02/21/95 REV DATE	٨	A DRAWING NO. 75
REPLACEMENT PARTS.	E-Z-GO DIVISION OF TEXT	RON, INC., P.O. BOX 3	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855	8	241-5855

\overline{A}	TITLE HOUR METER INSTALLATION	TER INS	TALLA	NOI			
-		DRN BY	J.RICE	REV BY	[•	DRAWING	S
ш	ORIG DATE 0	ORIG DATE	02/21/95	REV DATE	<	A NO. 7511	7511
_							

PG. 2 OF 2


75119

REV

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 75183-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

- A. Place the bag attachment assembly (item 1) on the foot rest.
- B. With the bag attachment assembly *centered* on the foot rest, push forward until the keeper brackets lock over the edge of the foot rest tubing.
- C. Place the support bracket (item 4) against the vertical railing as shown at right. Note that the bag attachment assembly must be centered to allow the hole to align with the hole in the support bracket.
- D. Secure the support bracket to the bag attachment assembly with the knob (item 2) and plastic washer (item 3) as shown in illustration at right. Hand tighten firmly by turning knob clockwise.

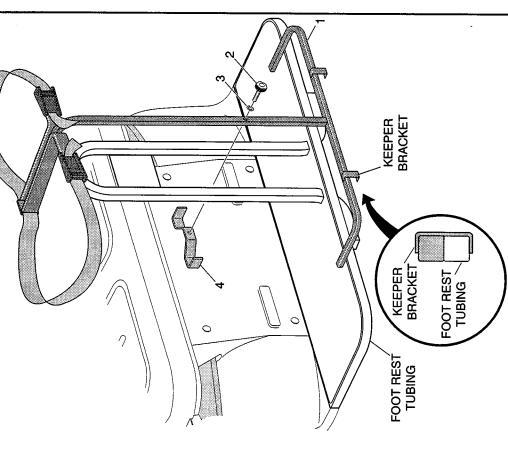

	TEM	QTY	PART NO.	DESCRIPTION
	-	1	75188-G01	BAG ATTACHMENT ASSEMBLY
	8	-	22238-G2	KNOB (3/8-16 X 1 1/2 LG.)
	က	-	17255-G1	WASHER, PLASTIC
	4	-	75187-G01	BRACKET, SUPPORT
4				

-	_			
THE SYMBOL			ä	
/R		<i>.</i> ;	/B	
۳		r	¥	
₹		<u>S</u>	~	
Ź			竝	
Ò		2	무	
ב		άç	Ö	
į		×	ш	
-		7	Ŧ	
5		Ž	_	
ر		⋖	۳	
IJ		Ś	⋖	
5		Ë	=	
Ž	느	9	ᇙ	
•	Z	_	ĕ	
5	王	5	Ŀ	
-	₹	Щ	2	
2	5	ô	Ξ	
5	유	H	z	٠.;
:	S	ਯੁ	빝	r
2	o	⋖	5	些
Ξ,	ರ	75	$\bar{\mathbf{Q}}$	2
/	ž	ž	9	₣
Ĺ	ш	₹	Ä	z
Š	监	ð	¥	뿔
5	F	ŗ	늗	Щ
_	ᇤ	ᅙ	z	ပ္
D	J	正	₹	ĭ
Ц	Щ	Щ	H	유
	THE LETTER ENCLOSED WITHIN IT.	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS.	RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.
_				_

0	D TITLE TWO BAG	ATTAC	HMENT	TWO BAG ATTACHMENT INSTALLATION INSTRUCTIONS	RUC	SHOILS	REV -
Ļ	EZECTITEXTRON ORIG DATE 1	DRN BY ORIG DATE	. WEBB 2/27/94	Ш	4	A DRAWING NO. 75184	PG. 1 OF 1
	E-Z-GO DIVISION OF TEXT	TRON, INC.,	P.O. BOX 3	E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-241-5855	8	241-5855	

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO.75192-G* G* IS DETERMINED BY COLOR OF SEAT

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Jack, floor	1	Hammer, plastic faced	1
Safety stands	4	Drill, 1/2"	
Chocks	4	Drill bit, 3/16"	
Ratchet, 3/8" drive	1	Drill bit, 1/2"	
Extension, 3/8", 3"	1	Wrench, 7/16"	
Socket, 7/16"	1	Wrench, 1/2"	
Socket, 1/2"	1	Wrench, 9/16"	
Socket, 9/16"	1	Screwdriver, Phillips	
Hammer, ball peen		Torque wrench, ft. lbs., 3/8" drive	
•	1		

A. INSTALLING HEAVY DUTY SPRINGS



BE SURE THE VEHICLE IS ON A FIRM AND LEVEL SURFACE. NEVER GET UNDER A VEHICLE WHILE IT IS SUPPORTED BY A JACK. USE SAFETY STANDS AND TEST THE STABLITY OF THE VEHICLES ON THE STANDS. ALWAYS PLACE CHOCKS IN FRONT AND BEHIND THE WHEELS THAT ARE NOT TO BE RAISED. USE CAUTION SINCE THE VEHICLE IS EXTREMELY UNSTABLE DURING THE LIFTING PROCESS.

1. Place chocks in front and behind each front wheel. Center the jack under the rear bumper. (See Fig. 1)

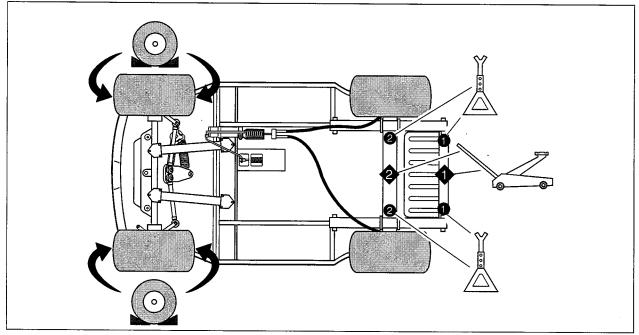


Fig. 1

TITLE CONVERTIBLE	E CARRIER INSTAL	LATION INSTRU	JCTIONS		REV -
EZG TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 1 OF 12
E-Z-GO DIVIS	SION OF TEXTRON, INC., P.C	D. BOX 388. AUGUSTA.G	A. 30903-0388. 1-800-44	8-7476	

- 2. Raise the vehicle and place a safety stand under the outer ends of the rear bumper. (See Fig. 1)
- 3. Lower the jack and test the stability of the vehicle on the two safety stands.
- 4. At the passenger side, remove the bottom shock absorber nut. (See Fig. 2)

CAUTION

NEVER LIFT OR SUPPORT THE VEHICLE ON THE REAR AXLE DIFFERENTIAL CASTING. BE CAREFUL NOT TO POSTITION THE JACK IN AN AREA THAT COULD DAMAGE THE BRAKE CABLES OR HANGERS.

- 5. Place the jack near the center section of the rear axle and raise just enough to place a second set of safety stands at each end of the axle tubes as close to the wheel as possible. (See Fig. 1)
- 6. Remove the 'U' bolts and securing hardware. The nuts and 'U' bolts may be discarded but the washers should be retained for later use. (See Fig. 2)

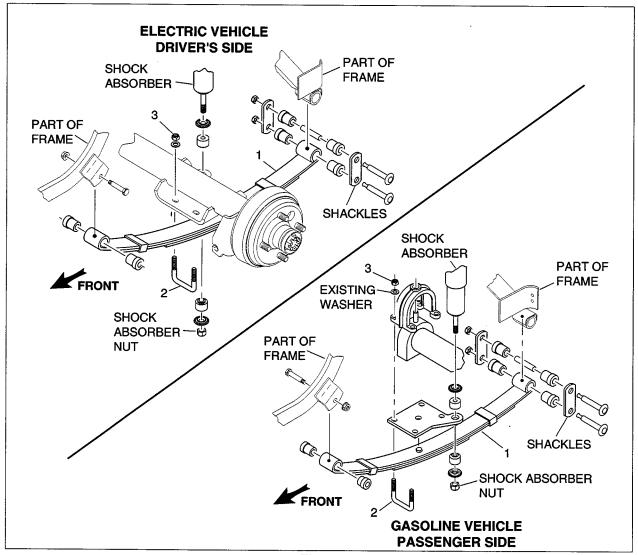


Fig. 2

- 7. Remove the shackles and hardware securing the spring to the frame. Remove the spring.
- 8. Installation of heavy duty spring is the reverse order of disassembly.

TITLE CONVERTIBLE	CARRIER INSTAL	LATION INSTRU	CTIONS	REV -
E₹₹□ TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING 75269	PG. 2 OF 12
F-Z-GO DIVIS	SION OF TEXTRON INC. P.C.	D BOY 388 ALIGUSTA G	A: 20002 0289 1 800 448 7476	

9. Install the heavy duty spring (item 1) with 'U' bolts (item 2), washers (removed from old spring), and nuts (item 3). Tighten hardware to 18-22 ft. lbs. torque.

MOTE

When installing rear spring shackles, be sure that the cupped side of the shackle plate faces the spring.

- 10. Replace the hardware to secure the front end of the spring to the frame. Tighten to 21 25 ft. lbs. torque.
- 11. Replace the hardware and shackles to secure the rear end of the spring to frame. Tighten to 18 22 ft. lbs. torque.
- 12. Replace the shock absorber nut. It must be tightened until the shock absorber bushing expands to the diameter of the shock absorber washer.
- 13. Repeat procedure at driver's side of vehicle.

B. INSTALLING SEAT BACK SUPPORT (Refer to Fig. 3)

- 1. Remove the existing seat back from the seat back support and retain hardware. Remove the seat back support and bag rack assembly from the frame of the vehicle.
- 2. Install the new seat back supports (item 4) to the frame using washers (item 5) and screws (item 6). Finger tighten hardware to allow for adjustment.

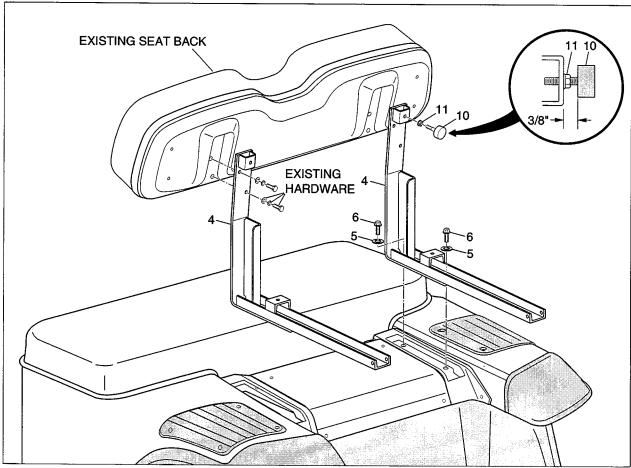


Fig. 3

- 3. Using existing hardware, secure the existing seat back to the new seat back support. Tighten to 5 7 ft. lbs. torque.
- 4. Install rubber bumpers (item 10) on vertical part of seat support bracket using one lock nut (item 11) (per bumper) as shown in Fig. 3. Tighten to dimension specified.

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS							
EZE TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING 7526	9 PG. 3 OF 12			
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476							

C. INSTALLING VERTICAL FRAME SUPPORT

NOTE

Some later model vehicles may have pre-drilled holes in the frame under the bagwell. If so, proceed to step 1. If the vehicle has no pre-drilled holes, go to step 2.

- Using the pre-drilled holes in the frame under the bagwell as a guide, drill one 1/2" hole at each side of the bag-1. well.
- 2. Drill two 1/2" holes through the bottom of the bagwell and through the frame below the bagwell. See Fig. 4 for location of holes.

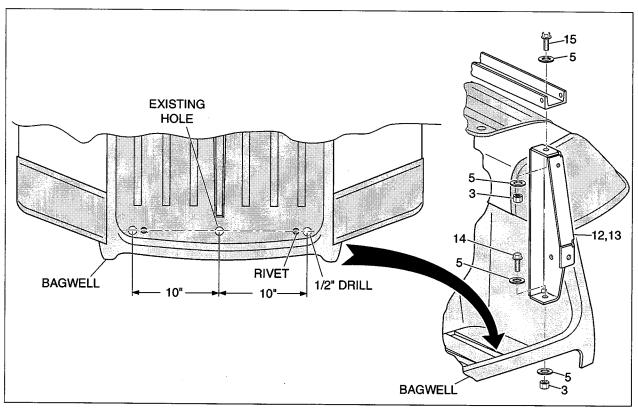


Fig. 4

- 3. Place vertical frame support (items 12 and 13) between the seat back support and bagwell as shown. Insert screw (item 14) and washer (item 5) on top side bagwell and place washer (item 5) and nut (item 3) underneath frame (See Fig. 4). Finger tighten the hardware since the bottom washer and nut will be removed later for further installation.
- 4. Secure the top of the vertical frame support to the seat back support using bolt (item 15), washers (item 5) and nut (item 3) (See Fig. 4). Do not tighten hardware.

MOTE

At this point, before tightening any hardware, it is critical the exact dimension is achieved to accommodate the fitting of the seat assembly into the channels of the seat back support.

- 5. As a 'test fit', place the support frame (item 26) into the channels of the seat back support and tighten the hardware securing the seat back support to the vehicle frame and vertical frame support to 21-25 ft. lbs. torque. (See Fig. 7)
- 6. Remove the support frame.

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS							
EZG TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 4 OF 12		
F-7-GO DIVISION OF TEXTRON INC. P.O. BOX 388, ALIGUSTA GA, 20003 0389, 1, 200, 449, 7476							

D. INSTALLING THE VALANCE PANEL AND FLOORBOARD ASSEMBLY

- 1. Place the valance panel (item 16) as shown in Fig. 5 with the side flaps under the fender end caps.
- 2. Secure the side flaps to the fender end caps using two plastic rivets (item 17) as shown.

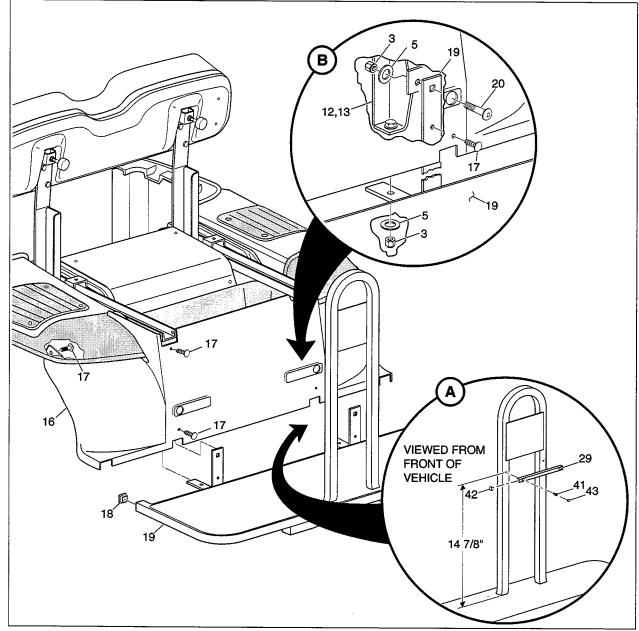


Fig. 5

- 3. Before attaching foot rest (item 19), mark hole centers as dimensioned and attach support tube (item 29) to foot rest assembly with self drilling and tapping screws (item 41). Insert hole plugs (item 43) and end plugs (item 42) in support tube. (See Fig. 5 Detail A)
- 4. Install the end plugs (item 18) into the tubing ends of the foot rest (item 19).
- 5. Remove the nut (item 3) and washer (item 5) (previously installed) from the underside of the frame. (See Fig. 5 Detail B)

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS						REV -	
E260	EXTRON	DRN BY ORIG DATE	J.RICE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 5 OF 12
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476							

NOTE

Hint: To perform step 6, it may require the assistance of another person or it may be necessary to use a jack to raise and hold the foot rest while installing hardware.

- 6. Place the foot rest assembly (item 19) up against the bottom of the valance panel aligning the bolts that were previously installed in the bagwell with the holes in the horizontal part of the welded bracket. Be sure the vertical part of the welded bracket is inserted between the valance panel and the vertical frame supports. See Detail in Fig. 5
- 7. Reinstall the washer and nut under the bagwell. Finger tighten to allow adjustment.
- 8. Align holes in welded bracket with holes in valance panel and vertical frame support.
- 9. Place carriage bolt (item 20) through the large holes in valance panel and secure with washer (item 5) and nut (item 3). (See Fig. 5 Detail B)
- 10. Finish securing the valance panel to the vehicle using two rivets (item 17) at each side.
- 11. Firmly tighten the nut (item 3) on the underside of the frame. (See Fig. 5 Detail B)
- 12. Attach reflectors (item 24) using adhesive backing, covering bolt access holes completely. Drill four 3/16" diameter holes in valance using the holes in reflectors as guides. (See Fig. 6)
- 13. Secure the reflectors with plastic rivets (item 25). (See Fig. 6)

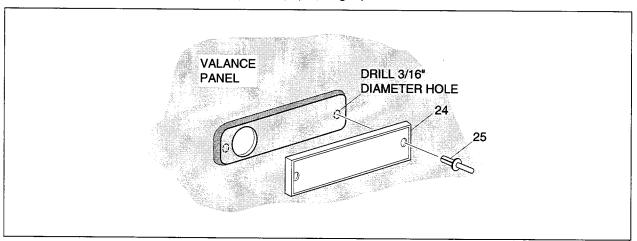


Fig. 6

E. INSTALLING SUPPORT FRAME (Refer to Fig. 7)

- 1. Insert the nylon bushings (item 21) into the pivot brackets in the support frame (item 26) (4 places).
- 2. Place the support frame into the channels of the seat back support aligning pivot brackets with existing holes.
- 3. Insert the bolt (item 23) through the pivot from the center of vehicle (2 places) and secure with washer (item 36) and nut (item 34).
- 4. Secure front of support frame to seat back support using bolt (item 38), washer (item 36) and nut (item 11).

F. INSTALLING FIXED BED (Refer to Fig. 7)

1. Attach front bed (item 30) to support frame (item 26) using bolt (item 45) and washer (item 36). (Two places on each end of front bed. Tighten to 5 - 7 ft. lbs. torque.

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS								
EZZ □ TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING 75	5269 PG. 6 OF 12				
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476								

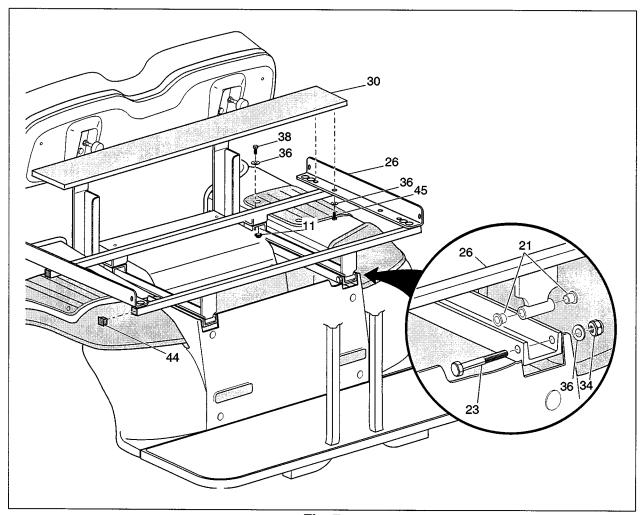


Fig. 7

G. INSTALLING HANDRAIL (Refer to Fig. 8)

- 1. Attach handrail (item 27) at forward end of support frame (item 26) using bolt (item 23), lock washer (item 37) and acorn nut (item 35). Do not tighten hardware at this time.
- 2. Repeat procedure on other side of support frame.

H. INSTALLING LOAD BED AND SEAT BOTTOM (Refer to Fig. 8)

- 1. Position load bed (item 28) in support frame as shown.
- 2. Position seat bottom (item 47) in support frame as shown.
- 3. Insert teflon washer (item 32) between support frame and load bed and again between load bed and seat bottom as shown.
- 4. Secure all components by inserting bolt (item 23) through handrail, support frame, washer, bed assembly, washer and seat bottom and secure with lock nut (item 34). (See Detail in Fig. 8) Tighten all handrail hardware to 12 14 ft. lbs. torque.

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS					REV -		
E₹ZE ■ TEXTRON			V BY V DATE	DRAWING NO.	75269	PG. 7 OF 12	
E-Z-GO DIVISION OF TEXTRON INC. B.O. BOY 399, ALIGUSTA CA. 20002 0209, 1, 200, 449, 7476							


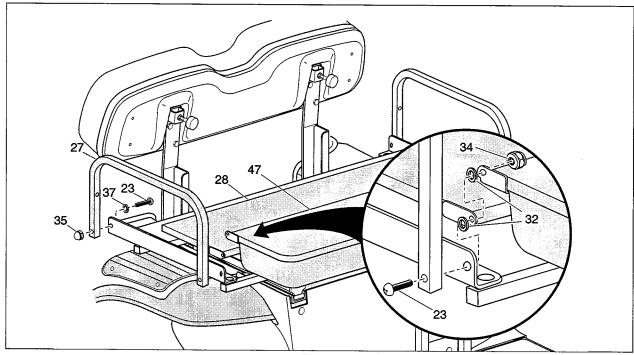


Fig. 8

I. INSTALLING SEAT BACK (Refer to Fig. 9)

- 1. Attach seat back (item 46) to seat back support (item 22) using bolt (item 7), lock washer (item 8) and washer (item 9). Tighten to 5 7 ft. lbs. torque.
- 2. Secure seat back to handrail using bolt (item 39) and acorn nut (item 40). Tighten to 5 7 ft. lbs torque.

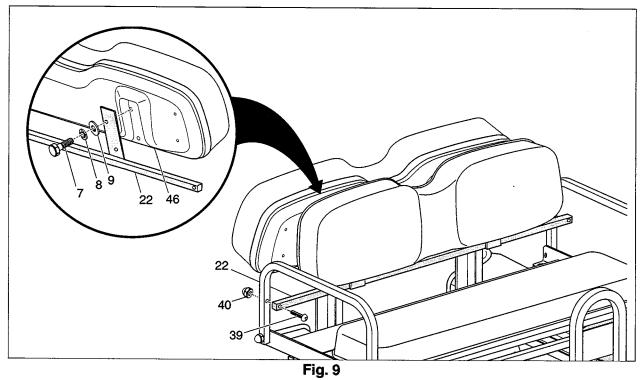

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS						REV -	
=≠≥ □ TEXTRON	DRN BY ORIG DATE	J.RICE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 8 OF 12	
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476							

NOTE: HARDWARE SHOWN ACTUAL SIZE






Item 5 3/8 Washer Qty. 14





Item 6 3/8-16 x 1 1/4" Bolt Qty. 4

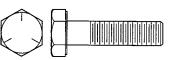


Item 7 1/4-20 x 1" Bolt Qty. 4



Item 8 1/4 Lock Washer Qty. 4



Item 9 1/4 Washer Qty. 4

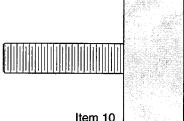

Item 10 Adjustable Rubber Bumper Qty. 4



Item 11 5/16-18 Lock Nut Qty. 6




Item 14 3/8-16 x 1 1/2" Bolt Qty. 2




Item 15 3/8-16 x 1" Bolt Qty. 2



Plastic Rivet Qty. 6

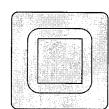

Item 18, 44 End Plug, 1" Qty. 2

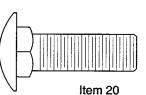

3/8-16 x 1 1/4" Carriage Bolt Qty. 14



Item 21 Bushing, Nylon

Qty. 4



Item 23 5/16-18 x 1 1/2" Bolt Qty. 4



Item 25 Plastic Rivet Qty. 4

TITLE

CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS

REV -

EZE TEXTRON

DRN BY ORIG DATE

J.RICE 05/04/95 **REV BY REV DATE**


DRAWING NO.

75269

PG. 9 OF 12

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

NOTE: HARDWARE SHOWN ACTUAL SIZE

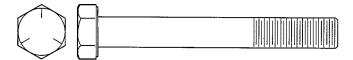

Item 31 5/16-18 x 2 1/2" Bolt Qty. 2



Item 32 5/8" Washer, Teflon Qty. 4



Item 33, 42 End Plug, 3/4" Qty. 2, 6



Item 34 5/16-18 Lock Nut Qty. 4



Item 35 5/16-18 Acorn Nut Qty. 2




Item 36 5/16" Washer Qty. 4



Item 37 5/16" Lock Washer Qty. 2





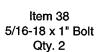





Item 39 1/4-20 x 1 3/4" Bolt Qty. 2












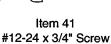

Qty. 2



Item 43 Hole Plug, 1/2" Qty. 2



Item 45 1/4-20 x 3/4" Bolt Qty. 4



Item 48 5/16-18 x 1 1/4" Bolt Qty. 2

NOTE:

Items 18 and 44 are the same in appearance. However, item 18 is for 14 gauge tubing and 44 is for 11 gauge tubing.

Items 33 and 42 are the same in appearance. However, item 33 is for 11 gauge tubing and 42 is for 14 gauge tubing.

Check fit each end plug for tightest fit for correct application.

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS REV
DRN BY ORIG DATE 05/04/95 REV DATE DRAWING NO. 75269 PG. 10 OF 12

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

KIT CONTENTS							
ITEM	QTY	PART NO.	DESCRIPTION				
1	2	74135-G01	SPRING, HEAVY DUTY				
2	4	74124-G01	'U' BOLT, 3/8-16 x 2 1/2" LG.				
3	14	11098-G5	NUT, LOCK, 3/8-16				
4	2	74111-G01	SUPPORT, SEAT BACK				
5	14	00560-G1	WASHER, 3/8				
6	4	01006-G02					
7	4	00414-G8					
8	8	00664-G7	WASHER, LOCK, 1/4				
9	4	00559 - G7	WASHER, 1/4				
10	2	70113-G01	BUMPER, ADJUSTABLE RUBBER				
11	4	11027-G1	NUT, LOCK, 5/16-18				
12	1	74126-G02	SUPPORT, VERTICAL FRAME, DRIVER'S SIDE				
13	1	74126-G01	SUPPORT, VERTICAL FRAME, PASSENGER SIDE				
14	2	00427-G4					
15	2	00426-G8					
16	1	74127-G01	PANEL, VALANCE				
17	6	16816-G2					
18	2	19853-G1	END PLUG, 1"				
19	1	74105-G01	FOOT REST (INCLUDES WARNING LABEL (74132-G01)				
20	2	00769-G2					
21	4	17838-G1	BUSHING, NYLON				
22	1	75258-G01	SUPPORT, SEAT BACK				
23	4	00762-G4	BOLT, 5/16-18 X 1 1/2"				
24	2	74128-G01	REFLECTOR				
25	4	33623-G02	RIVET, PLASTIC				
26	1	74193-G01	FRAME, SUPPORT				
27	2	75196-G01	HANDRAIL				
28	1	75229-G01	BED				

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS						REV -
EZG TEXTRON	· •	J.RICE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 11 OF 12

29 TUBE, SUPPORT

KIT CONTENTS

ITEM	QTY	PART NO.	DESCRIPTION	
30	1	75273-G01	BED, FRONT	
31	2	00440-G4	BOLT, 5/16-18 X 2 1/2" LG.	
32	4	17255-G1	WASHER, TEFLON	
33	2	75261-G01	PLUG, END, 3/4"	
34	4	00654-G3	NUT, LOCK, 5/16-18	
35	2	00520-G3	NUT, ACORN, 5/16-18	
36	4	00559-G8	WASHER, 5/16	
37	2	00664-G8	WASHER, LOCK, 5/16	
38	2	00438-G8	BOLT, 5/16-18 X 1" LG.	
39	2	16705-G6	BOLT, 1/4-20 X 1 3/4" LG.	
40	2	00520-G1	NUT, ACORN, 1/4-20	
41	2	00106-G6	SCREW, #12-24 X 3/4" LG.	
42	6	19859-G1	END PLUG, 3/4"	
43	2	20271-G2	HOLE PLUG, 1/2"	
44	4	75261-G02	END PLUG, 1"	
45	4	00661-G6	BOLT, 1/4-20 X 3/4" LG.	
46	1	71751-G*	SEAT BACK	
47	1	75263-G*	SEAT BOTTOM	

 $(G^*$ is determined by the color of seat back or seat bottom)

TITLE CONVERTIBLE CARRIER INSTALLATION INSTRUCTIONS							
EZE■ TEXTRON	DRN BY J.RICE ORIG DATE 05/04/95	REV BY REV DATE	DRAWING NO.	75269	PG. 12 OF 12		
E 7 CO DIVISION OF TEXTBON INC. D.O. DOY COS. AUGUSTA CA. COCCO COSC. 4 COS. 440 7470							

NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST PART NO. 74100-G01

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

TOOL LIST	QTY. REQUIRED	TOOL LIST	QTY. REQUIRED
Jack	1	Hammer, plastic faced	1
Safety stands	4	Hammer, ball pein	1
Chocks	4	Rivet gun	1
Ratchet, 3/8"	1	Extension, 3/8, 3"	1
Socket, 9/16"	1	Socket, 7/16"	1
Wrench, 9/16"	1	Wrench, 7/16"	1
Wrench, 1/2"	1	Torque wrench, 9/16"	1
Drill, 1/2"	1	Drill bit, 1/2"	1
Drill bit, 1/8"	1	Drill bit, 3/8"	1
Center punch	1	Tape measure	1

A. INSTALLING HEAVY DUTY SPRINGS



BE SURE THE VEHICLE IS ON A FIRM AND LEVEL SURFACE. NEVER GET UNDER A VEHICLE WHILE IT IS SUPPORTED BY A JACK. USE SAFETY STANDS AND TEST THE STABLITY OF THE VEHICLES ON THE STANDS. ALWAYS PLACE CHOCKS IN FRONT AND BEHIND THE WHEELS THAT ARE NOT TO BE RAISED. USE CAUTION SINCE THE VEHICLE IS EXTREMELY UNSTABLE DURING THE LIFTING PROCESS.

1. Place chocks in front and behind each front wheel. Center the jack under the rear bumper. (See Fig. 1)

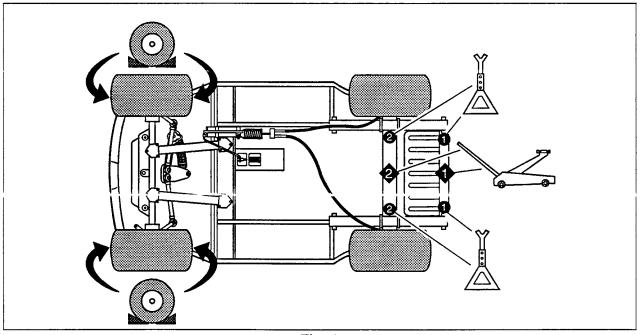


Fig. 1

TITLE 4-CADDY CONVERSION INSTALLATION INSTRUCTIONS						REV A
EZG TEXTRON	DRN BY ORIG DATE	L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 1 OF 8

- 2. Raise the vehicle and place a safety stand under the outer ends of the rear bumper. (See Fig. 1)
- 3. Lower the jack and test the stability of the vehicle on the two safety stands.
- 4. At the passenger side, remove the bottom shock absorber nut. (See Fig. 2)

CAUTION

NEVER LIFT OR SUPPORT THE VEHICLE ON THE REAR AXLE DIFFERENTIAL CASTING. BE CAREFUL NOT TO POSTITION THE JACK IN AN AREA THAT COULD DAMAGE THE BRAKE CABLES OR HANGERS.

- 5. Place the jack near the center section of the rear axle and raise just enough to place a second set of safety stands at each end of the axle tubes as close to the wheel as possible. (See Fig. 1)
- 6. Remove the 'U' bolts and securing hardware. The nuts and 'U' bolts may be discarded but the washers should be retained for later use. (See Fig. 2)

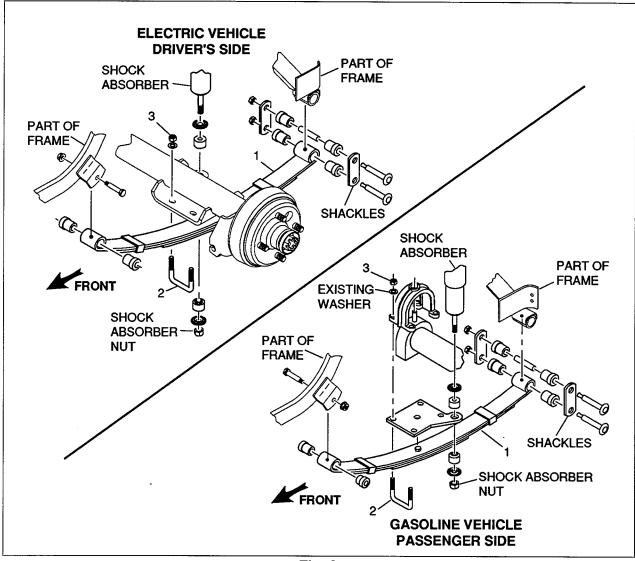


Fig. 2

- 7. Remove the shackles and hardware securing the spring to the frame. Remove the spring.
- 8. Installation of heavy duty spring is the reverse order of disassembly.

TITLE 4-CADDY CON	VERSION	INSTALL	ATION INSTRUC	TIONS		REV A
EZ5□ TEXTRON	DRN BY ORIG DATE	L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 2 OF 8
E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30903-0388, 1-800-448-7476						

9. Install the heavy duty spring (item 1) with 'U' bolts (item 2), washers (removed from old spring), and nuts (item 3). Tighten hardware to 18-22 ft. lbs. torque.


MOTE

When installing rear spring shackles, be sure that the cupped side of the shackle plate faces the spring.

- 10. Replace the hardware to secure the front end of the spring to the frame. Tighten to 21 25 ft. lbs. torque.
- 11. Replace the hardware and shackles to secure the rear end of the spring to frame. Tighten to 18 22 ft. lbs. torque.
- 12. Replace the shock absorber nut. It must be tightened until the shock absorber bushing expands to the diameter of the shock absorber washer.
- 13. Repeat procedure at driver's side of vehicle.

B. INSTALLING SEAT BACK SUPPORT

- 1. Remove the existing seat back from the seat back support. Remove the seat back support and bag rack assembly from the frame of the vehicle.
- 2. Install the new seat back supports (item 4) to the frame using washers (item 5) and screws (item 6). Finger tighten hardware to allow for adjustment. (See Fig. 3)

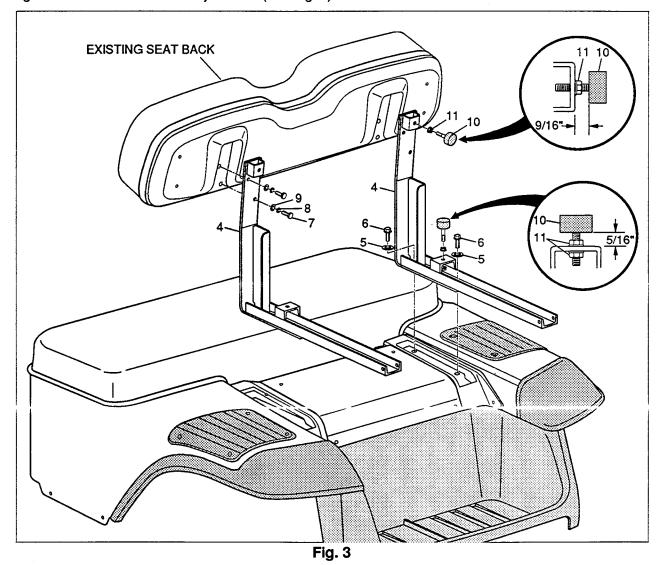

TITLE 4-CADDY CON	VERSION	INSTALL	ATION INSTRUC	CTIONS		REV A
EZGO TEXTRON	DRN BY ORIG DATE	L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 3 OF 8
				'		

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

- 3. Using screws (item 7), lock washers (item 8) and flat washers (item 9), secure the existing seat back to the new seat back support. (See Fig. 3)
- 4. Install rubber bumpers (item 10) on vertical part of seat support bracket using one lock nut (item 11) (per bumper) as shown in Fig. 3. Tighten to dimension specified.
- 5. Install rubber bumpers (item 10) on horizontal part of seat support bracket using two lock nuts (item 11) (per bumper) as shown in Fig. 3. Tighten to dimension specified.

C. INSTALLING VERTICAL FRAME SUPPORT

MOTE

Some later model vehicles may have pre-drilled holes in the frame under the bagwell. If so, proceed to step 1. If the vehicle has no pre-drilled holes, go to step 2.

- 1. Using the pre-drilled holes in the frame under the bagwell as a guide, drill one 1/2" hole at each side of the bagwell.
- 2. Drill two 1/2" holes through the bottom of the bagwell and through the frame below the bagwell. See Fig. 4 for location of holes.

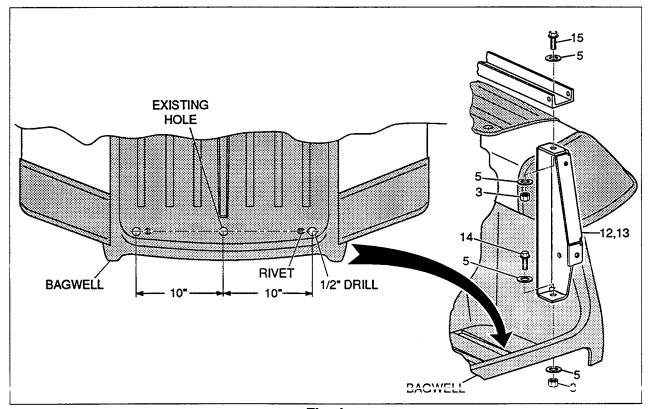


Fig. 4

- 3. Place vertical frame support (items 12 and 13) between the seat back support and bagwell as shown. Insert screw (item 14) and washer (item 5) on top side bagwell and place washer (item 5) and nut (item 3) underneath frame (See Fig. 4). Finger tighten the hardware since the bottom washer and nut will be removed later for further installation.
- 4. Secure the top of the vertical frame support to the seat back support using bolt (item 15), washers (item 5) and nut (item 3) (See Fig. 4). Do not tighten hardware.

TITLE 4-CADDY CON	VERSION INSTALL	ATION INSTRUC	TIONS	REV A
	DRN BY L WEBB ORIG DATE 07/12/94	REV BY REV DATE	DRAWING 74133	PG. 4 OF 8
F 7 CO DIVISION OF TEXTBON INC. D.O. POY 200, AUGUSTA CA 20002, 0000, 1 200, 449, 7476				

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476


NOTE

At this point, before tightening any hardware, it is critical the exact dimension is achieved to accommodate the fitting of the seat assembly into the channels of the seat back support.

- 5. As a 'test fit', place the seat assembly (item 22) into the channels of the seat back support and tighten the hardware securing the seat back support to the vehicle frame to 21-25 ft. lbs. torque.
- 6. Tighten the hardware securing the seat back support to the vertical frame support to 21-25 ft. lbs. torque. Remove the seat assembly.

D. INSTALLING THE VALANCE PANEL AND FLOORBOARD ASSEMBLY

- 1. Place the valance panel (item 16) as shown in Fig. 5 with the side flaps under the fender end caps.
- 2. Secure the side flaps to the fender end caps using two plastic rivets (item 17) as shown.
- 3. Install the end plugs (item 18) into the tubing ends of the foot rest assembly (item 19).

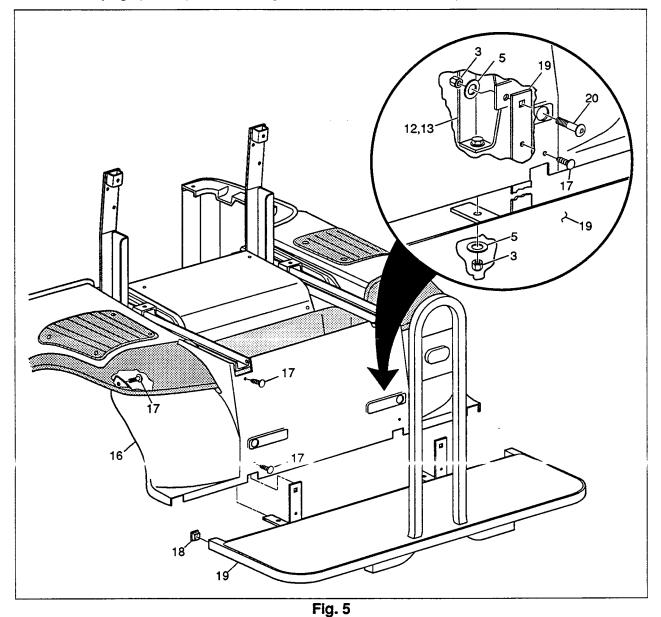

TITLE 4-CADDY CON	/ERSION	INSTALL	ATION INSTRUC	TIONS		REV A
=≠≥ □ TEXTRON	DRN BY ORIG DATE	L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 5 OF 8

- 4. Remove the nut (item 3) and washer (item 5) (previously installed) from the underside of the frame. See Detail in Fig. 5.
- 5. Place the foot rest assembly (item 19) up against the bottom of the valance panel aligning the bolts that were previously installed in the bagwell with the holes in the horizontal part of the welded bracket. Be sure the vertical part of the welded bracket is inserted between the valance panel and the vertical frame supports. See Detail in Fig. 5.

MOTE

Hint: To perform step 6, it may require the assistance of another person or it be necessary to use a jack to raise and hold the floorboard assembly while installing hardware.

- Reinstall the washer and nut under the bagwell. Finger tighten to allow adjustment.
- Align holes in welded bracket with holes in valance panel and vertical frame support.
- 8. Place carriage bolt (item 20) through the large holes in valance panel and secure with washer (item 5) and nut (item 3).
- 9. Finish securing the valance panel to the vehicle using two rivets (item 17) at each side.
- 10. Firmly tighten the nut (item 3) on the underside of the frame.

E. INSTALLING SEAT ASSEMBLY

1. Insert the nylon bushings (item 21) into the pivot brackets on the seat assembly (item 22) (4 places). (See Fig. 6)

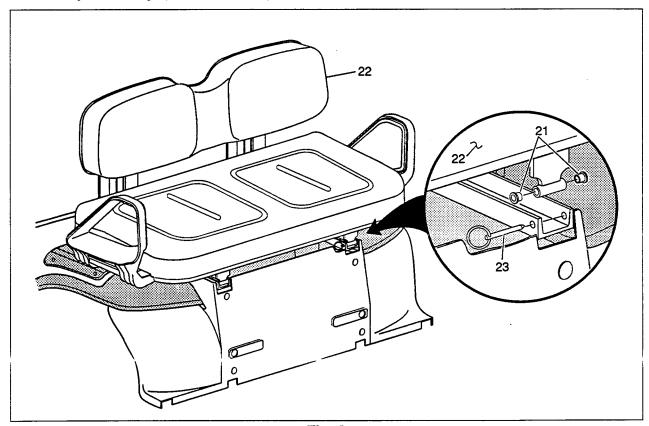


Fig. 6

- 2. Place the seat assembly into the channels of the seat back support aligning pivot brackets with existing holes.
- 3. Insert the hitch pin (item 23) through the pivot from the center of vehicle (2 places). (See Fig. 6)
- 4. Clean the reflector mounting surface with alcohol and wipe dry.

	ATION INSTRUC	TIONS		REV A
L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 6 OF 8
				74133

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA, GA. 30903-0388, 1-800-448-7476

5. Peel backing from reflector (item 24). Firmly stick onto reflector mounting surface located on valance panel. (See Fig. 7)


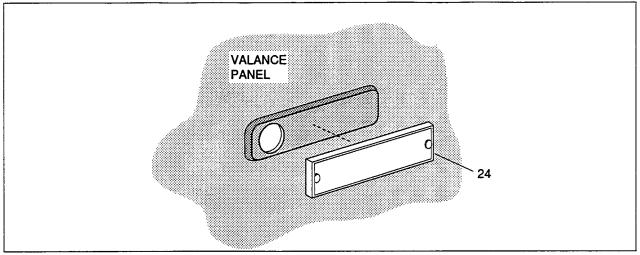


Fig. 7

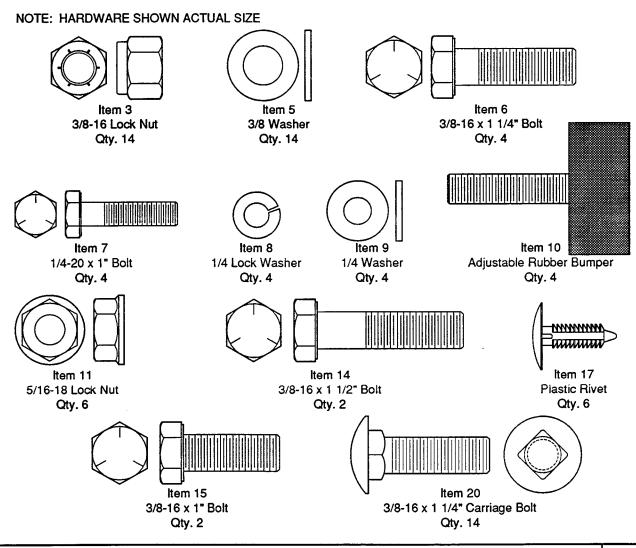


ERSION	INSTALL	ATION INSTRUC	TIONS		REV A
DRN BY ORIG DATE	L WEBB 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 7 OF 8
	DRN BY	DRN BY L WEBB	DRN BY L WEBB REV BY	110	DRN BY L WEBB REV BY DRAWING 74133


KIT CONTENTS

ITEM	QTY	PART NO.	DESCRIPTION
1	2	74135-G01	SPRING, HEAVY DUTY
2	4	74124-G01	'U' BOLT, 3/8-16
3	14	11098-G5	NUT, LOCK, 3/8-16
4	2	74111-G01	SUPPORT, SEAT BACK
5	14	00560-G1	WASHER, 3/8
6	4	00427-G2	BOLT, 3/8-16 X 1 1/4" LG.
7	4	00414-G8	BOLT, 1/4-20 X 1" LG.
8	4	00565-G7	WASHER, LOCK, 1/4
9	4	00559-G7	WASHER, 1/4
10	4	70113-G01	BUMPER, ADJUSTABLE RUBBER
11	6	11027-G1	NUT, LOCK, 5/16-18
12	1	74126-G02	SUPPORT, VERTICAL FRAME, RH
13	1	74126-G01	SUPPORT, VERTICAL FRAME, LH
14	2	00427-G4	BOLT, 3/8-16 X 1 1/2" LG.
15	2	00426-G8	BOLT, 3/8-16 X 1" LG.
16	1	74127-G01	PANEL, VALANCE
17	6	16816-G2	RIVET, PLASTIC
18	2	19853-G1	PLUG, END
19	1	74105-G01	FOOT REST ASSEMBLY (INCLUDES WARNING LABEL (74132-G01) AND REFLECTOR (74129-G01)
20	2	00769-G2	BOLT, CARRIAGE, 3/8-16 X 1 1/4" LG.
21	4	17838-G1	BUSHING, NYLON
22	1	74131-G*	SEAT ASSEMBLY
23	2	74134-G01	PIN, HITCH
24	2	74128-G01	REFLECTOR

^{*} Contact Service Parts Department for appropriate color.

TITLE 4-CADDY CON	/ERSION	INSTALL	ATION INSTRUC	CTIONS		REV A
EZET TEXTRON	DRN BY ORIG DATE	L WEB8 07/12/94	REV BY REV DATE	DRAWING NO.	74133	PG. 8 OF 8

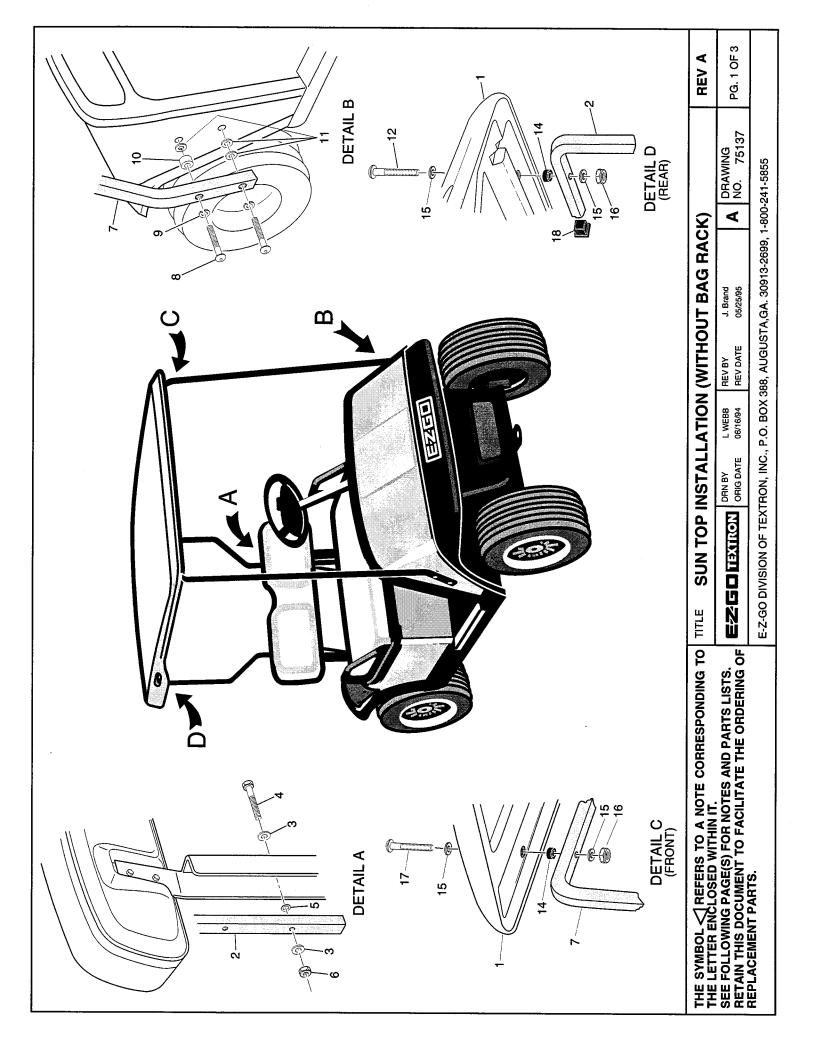

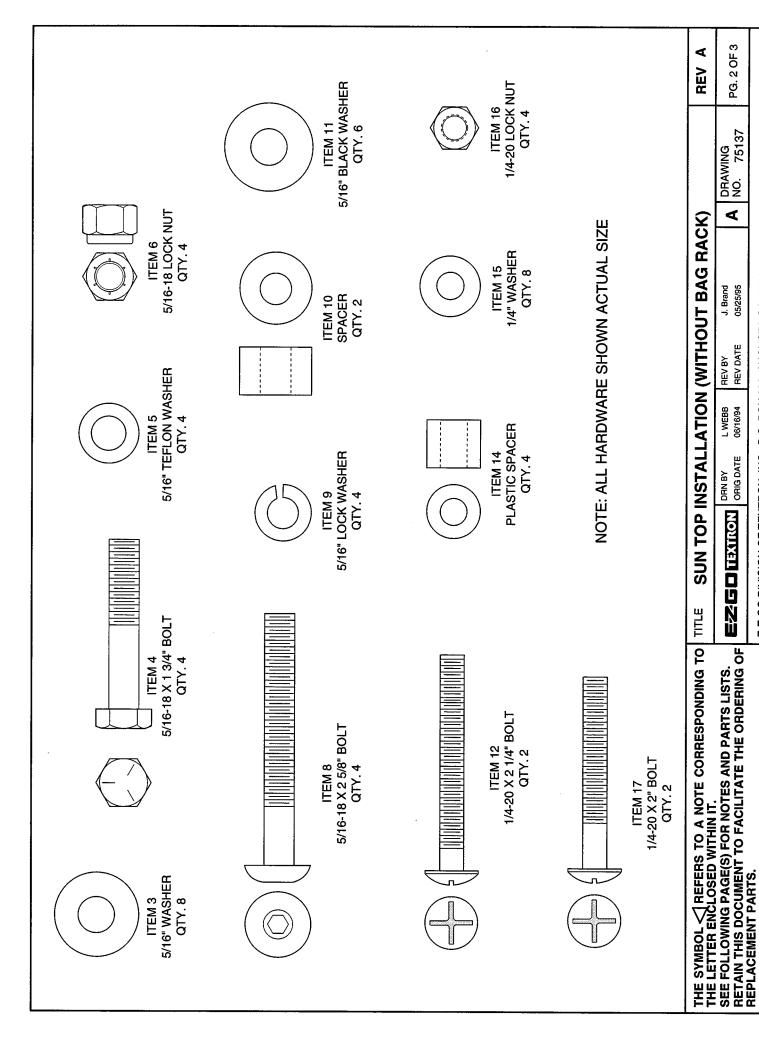

E-Z-GO DIVISION OF TEXTRON, INC., P.O. BOX 388, AUGUSTA,GA. 30913-2699, 1-800-241-5855

75135-G01 NOTE: TO ORDER THIS ENTIRE FIELD KIT, REQUEST

READ ALL INSTRUCTIONS BEFORE PROCEEDING.

A. REAR STRUTS

- BACK SUPPORT BRACKET. PUSH THE STRUT AWAY FROM THE CENTER 1. ALIGN THE HOLES IN THE REAR STRUT WITH THE HOLES IN THE SEAT OF THE CAR TO GIVE CLEARANCE BETWEEN THE STRUT AND THE SEAT BACK SUPPORT
- THRU SEAT BACK SUPPORT (2 3 THREADS). PLACE THE SMALL WHITE TEFLON WASHER, ITEM 5 ONTO THE BOLT BETWEEN THE STRUT AND PLACE WASHER, ITEM 3 ONTO BOLT, ITEM 4 AND INSERT BOLT JUST SEAT BACK SUPPORT TO PREVENT SQUEAKING.
- 3. INSERT THE BOLT WITH THE TWO WASHERS IN PLACE THRU THE REAR STRUT. SECURE HARDWARE WITH WASHER, ITEM 3 AND LOCK NUT, ITEM 6. DO NOT TIGHTEN HARDWARE.
- 4. REPEAT STEPS 2 AND 3 FOR THE OTHER HOLE.
- 5. REPEAT PROCEDURE AT THE OTHER SIDE OF VEHICLE.
- 6. INSERT TUBE CAPS, ITEM 18 INTO THE TOP OF THE REAR STRUTS.

B. FRONT STRUT

- 1. REMOVE AND DISCARD THE FOUR ALLEN HEAD BOLTS FROM THE FRONT COWL USING A 7/32" ALLEN WRENCH.
- 8 AND BLACK LOCK WASHER, ITEM 9, ON THE OUTSIDE OF STRUT, AND A SPACER, ITEM 10 BETWEEN THE FRONT COWL AND STRUT. **DO NOT** 2. AT THE TOP HOLE, INSTALL THE FRONT STRUT, ITEM 7 WITH BOLT, ITEM TIGHTEN HARDWARE.
- AT THE BOTTOM HOLE, SECURE THE FRONT STRUT, ITEM 7 WITH BOLT, ITEM 8 AND BLACK LOCK WASHER, ITEM 9, ON THE OUTSIDE OF STRUT, AND TWO BLACK WASHERS, ITEM 11 BETWEEN THE FRONT COWL AND STRUT. DO NOT TIGHTEN HARDWARE.

C. SUNTOP

- 1. PLACE SUN TOP, ITEM 1 ONTO STRUTS
- 2. SECURE SUN TOP LOOSELY WITH BOLTS, ITEM 17 AT FRONT AND ITEM 12 AT REAR, PLASTIC SPACER, ITEM 14, WASHER, ITEM 15, AND LOCK NUT, ITEM 16. SEE ILLUSTRATIONS FOR INSTALLATION SEQUENCE.
- 3. TIGHTEN ALL SUN TOP HARDWARE TO 3 5 FT. LBS. TORQUE.
- 4. TIGHTEN ALL REAR STRUT HARDWARE TO 13 15 FT. LBS. TORQUE.
- 5. TIGHTEN ALL FRONT STRUT HARDWARE TO 13 15 FT. LBS. TORQUE.

ITEM	ΔT	PART NO.	DESCRIPTION
-	-	27069-G01	TOP, SUN
2	8	75136-G01	STRUT, REAR
က	۵	00571-G2	WASHER, 5/16"
4	4	00439-G6	BOLT, 5/16-18 X 1 3/4"
ß	4	17255-G1	WASHER, TEFLON, 5/16"
9	4	11098-G6	NUT, LOCK, 5/16-18
7	-	75045-G01	STRUT, FRONT
æ	4	71056-G02	BOLT, 5/16-18 X 2 5/8"
တ	4	00905-G8	WASHER, LOCK, BLACK, 5/16"
10	7	75048-G01	SPACER
Ξ	9	00570-G2	WASHER, BLACK, 5/16"
12	8	00753-G6	BOLT, STAINLESS STEEL, 1/4-20 X2 1/4"
13			
14	4	75051-G01	SPACER, PLASTIC
15	æ	00559-G7	WASHER, PLATED, 1/4"
16	4	00891-G2	NUT, LOCK, 1/4-20
17	8	00753-G5	BOLT, STAINLESS STEEL, 1/4-20 X 2"
18	7	19853-G1	CAP, TUBE, 1"

TITLE	123	6-Z-GO
THE SYMBOL A REFERS TO A NOTE CORRESPONDING TO TITLE THE LETTER ENCLOSED WITHIN IT	SEE FOLLOWING PAGE(S) FOR NOTES AND PARTS LISTS. RETAIN THIS DOCUMENT TO FACILITATE THE ORDERING OF	REPLACEMENT PARTS.

	A DRAWING NO. 7513
♀	A
BAG RACI	J. Brand 05/25/95
SUN TOP INSTALLATION (WITHOUT BAG RACK)	HEV BY J. E REV DATE 05%
LATION	L WEBB 06/16/94
INSTALI	DRN BY ORIG DATE
TITLE SUN TOP I	EZED IEXTRON

PG. 3 OF 3

75137

855

REV A

	·
	c
- 3	Ξ.
	24
•	Ņ
	Ċ
- 2	≍
- 2	쏮
•	Ÿ
	÷
	5
- 2	3-2699
7	ñ
7	≺
•	'n
- (
0,000	3081
	ככ
ì	õ
ì	ň
١	. ,
_	_
	≥
(J
	زَ
•	٦
1	_
	'n
3	⋍
	۷
- (5
- 3	≺
	ر
•	⋖
	ø
ì	Ď
- 2	~
•	٠.
- :	×
7	ヽ
- 3	
C	П
	٠.
- (7
•	۲.
- (ı.
	_
	ĕ
- (د
-	ź
:	⋍
() a () () () ()	Ź
,	=
(ر
•	٣
ì	=
٠,	_
- ?	۲,
Ļ	ш
ŀ	_
:	
L	L
(7
١,	_
:	2
- 2	≒
(J
7	≂
	,,
١.	
à	5
	≥
	₹

DIAGRAMS AND SCHEMATICS

WIRING DIAGRAMS AND SCHEMATICS

REFER TO TECHNICIANS REPAIR AND SERVICE MANUAL FOR NOTES, CAUTIONS AND WARNINGS.


ELECTRIC MEDALIST TECHNICIANS REPAIR AND SERVICE MANUAL

MANUAL P/N: 28124-G01

GASOLINE MEDALIST TECHNICIANS REPAIR AND SERVICE MANUAL

MANUAL P/N: 28125-G01


ELECTRIC VEHICLE ACCESSORY WIRING

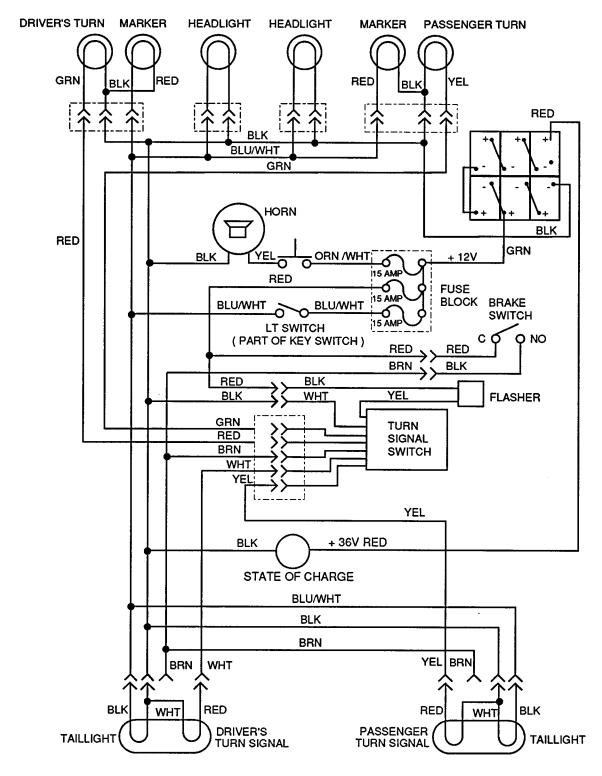

FOR VEHICLES WITHOUT TURN SIGNALS REMOVE WHT WIRE FROM LEFT TURN SIGNAL REMOVE YEL WIRE FROM RIGHT TURN SIGNAL CONNECT BRN WIRE TO RED

• INDICATES BUTT CONNECTION WITHIN WIRING HARNESS

GASOLINE VEHICLE ACCESSORY WIRING

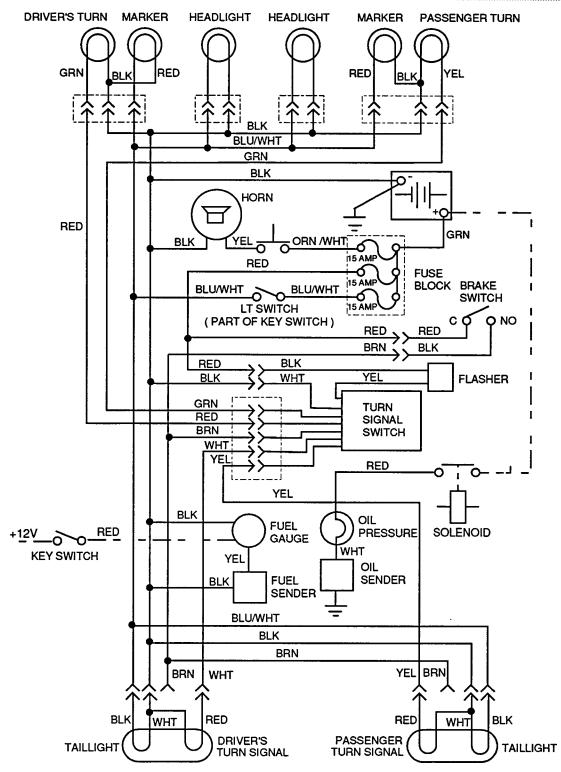


FOR VEHICLES WITHOUT TURN SIGNALS REMOVE WHT WIRE FROM LEFT TURN SIGNAL REMOVE YEL WIRE FROM RIGHT TURN SIGNAL CONNECT BRN WIRE TO RED

— - - - - INDICATES WIRE NOT INCLUDED IN HARNESS


• INDICATES BUTT CONNECTION WITHIN WIRING HARNESS

ELECTRIC VEHICLE WIRING DIAGRAM / SCHEMATIC

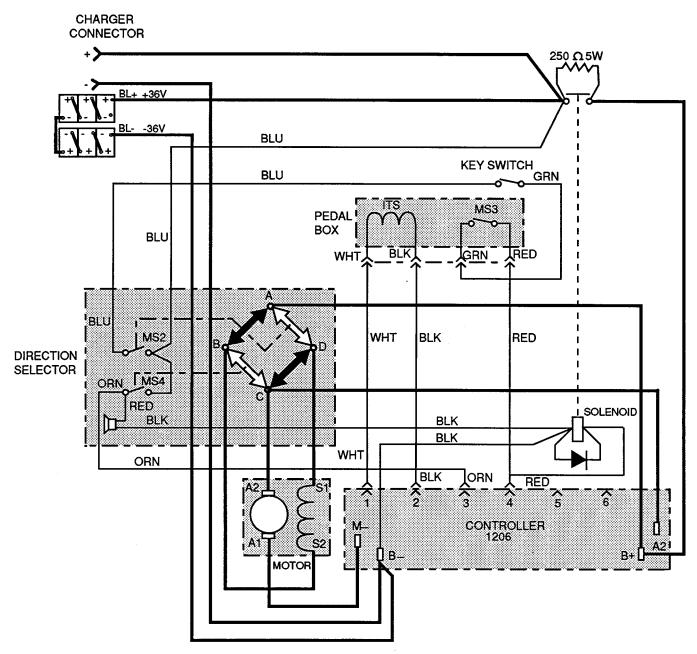

WIRES INDICATED — ARE CONTAINED IN POWER HARNESS ALL OTHER WIRES ARE CONTROL WIRING MS2 IS CLOSED WHEN DIRECTION SELECTOR SWITCH IS IN FWD OR REVERSE MS3 IS ACTIVATED BY ACCELERATOR PEDAL MS4 IS CLOSED BY DIRECTION SELECTOR SWITCH IN REVERSE ONLY

GASOLINE VEHICLE WIRING DIAGRAM / SCHEMATIC

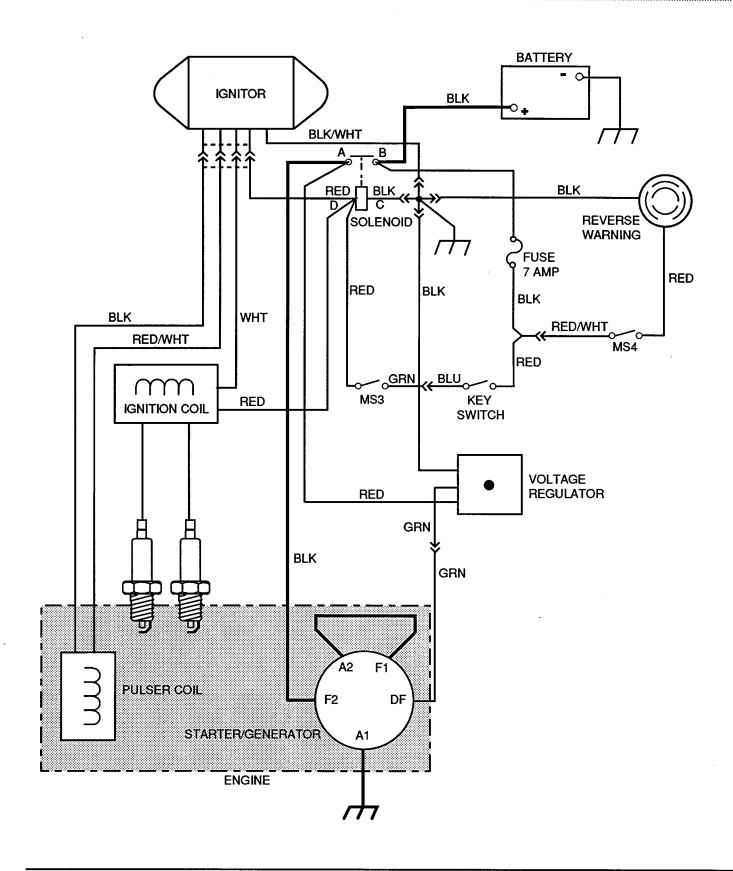

NOTES					

CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT

YOUR WARRANTY RIGHTS AND OBLIGATIONS

The California Air Resources Board and Fuji Heavy Industries Ltd. (herein "FUJI") are pleased to explain the emission control system warranty on your 1995 and later specialty vehicle engine (herein "engine"). In California, the engine must be designed, built and equipped to meet the State's stringent anti-smog standards. FUJI must warrant the emission control system on your engine for the period of time described below, provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the carburetor and the ignition system. Also included may be hoses, connectors and other emission-related assemblies.

Where a warrantable condition exists, FUJI will repair your engine at no cost to you including diagnosis, parts and labor.

MANUFACTURER'S WARRANTY COVERAGE:

The 1995 and later engines are warranted for two (2) years. If any emission related part on your engine is defective, the part will be repaired or replaced by FUJI.

OWNER'S WARRANTY RESPONSIBILITIES:

As the engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual. FUJI recommends that you retain all receipts covering maintenance on your engine, but FUJI cannot deny warranty solely for the lack of receipts or for your failure to ensure the performance of all scheduled maintenance.

As the engine owner, you should, however, be aware that FUJI may deny you warranty coverage if your engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications. You are responsible for presenting your engine to a dealer, distributor or warranty station authorized by E-Z-GO DIVISION OF TEXTRON, INC. Augusta, Georgia, (herein "E-Z-GO") to which FUJI supplies the engine as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding your warranty rights and responsibilities, you should contact the E-Z-GO Warranty Department at 1-800-241-5855.

LIMITED WARRANTY

on Emission Control Systems - California Only -

FUJI, Tokyo, Japan, warrants to the owner of the 1995 and later engine that the engine (1) has been designed, built and equipped so as to conform at the time of manufacture with the applicable regulations of the California Air Resources Board, and (2) is free from defects in materials and workmanship which could cause it to fail to conform with those regulations as may be applicable in the terms and conditions stated below.

A. WARRANTY COMMENCEMENT DATE

The warranty period begins on the date the engine is delivered to a first retail purchaser.

B. LENGTH OF COVERAGE

FUJI warrants to a first retail purchaser and each subsequent purchaser that the engine is free from defects in materials and workmanship which could cause the failure of a warranted emission-related part for a period of two (2) years after the date of delivery to the first retail purchaser.

C. WHAT IS COVERED:

1. REPAIR OR REPLACEMENT PARTS

Repairs and replacement of any warranted part will be performed at no charge to you by an authorized dealer, distributor or a warranty station. You may contact the E-Z-GO Warranty Department at 1-800-241-5855 to get the nearest appropriate location where your warranty repairs are performed.

2. WARRANTY PERIOD

This warranty continues for a period of two (2) years and shall apply only to the repair, replacement or adjustment of the component parts which are not scheduled for replacement as required maintenance. Further, component parts which are scheduled only for regular inspection to the effect of "repair or replace as necessary" shall be warranted for the warranty period. Any warranted part which is scheduled for replacement as required maintenance shall be warranted for the period of time up to the first scheduled replacement point for that part.

3. DIAGNOSIS

You shall not be charged for diagnostic labor which leads to the determination that a warranted part is defective, if the diagnostic work is performed at an authorized dealer, distributor or warranty station.

4. CONSEQUENTIAL DAMAGES

If a warranted part failed causing damages to other engine components, consult a warranty sta-

D. WHAT IS NOT COVERED

- 1. This limited warranty does not cover any part which malfunctions, fails or is damaged due to failure to follow the maintenance and operating instructions set forth in the 1995 and later Owner's Manual in-
 - (1) improper or inadequate scheduled engine inspection and maintenance
 - (2) improper or inadequate maintenance of any warranted parts
 - (3) improper installation, adjustment or repair of the engine or of any warranted part unless performed by an authorized dealer
 - (4) failure to follow recommendations on fuel use contained in the 1995 and later Owner's Manual
 - (5) repairs performed outside of the authorized warranty service facilities
 - (6) use of parts which are not authorized by FUJI.
- 2. Add-on or modified parts

This warranty does not cover any part which malfunctions, fails or is damaged due to alterations by changing, adding to or removing parts from the engine.

3. Expenses incurred by processing warranty claims

FUJI, any authorized dealer, distributors and warranty station shall not be liable for any loss of use of the engine, for any alternative usage, for any damage to goods, loss of time or inconvenience.

E. HOW TO FILE A CLAIM

All repairs qualifying under this Limited Warranty must be performed by a dealer who sold you the engine or distributors or warranty stations authorized by E-Z-GO. In the event that any emission-related part is found to be defective during the warranty period, you should notify E-Z-GO Warranty Department at 1-800-241-5855 and you will be given the appropriate warranty service facilities where the warranty repair is performed.

F. WHERE TO GET WARRANTY SERVICE

It is recommended that warranty service be performed by the authorized dealer who sold you the engine, although warranty service will be performed by any authorized dealers, distributors and warranty stations anywhere in the United States. When warranty repair is needed, the engine must be brought to an authorized dealer, distributorship or warranty station's place of business during normal business hours. In all cases, a reasonable time, not to exceed 30 days, must be allowed for the warranty repair to be completed after the engine is received by the authorized dealer, distributor or service station.

G. MAINTENANCE, REPLACEMENT AND REPAIR OF EMISSION-RELATED PARTS

Only warranted engine replacement parts approved by FUJI should be used in the performance of any warranty maintenance or repairs on emission-related parts. If other than authorized parts are used for maintenance, replacement or repair of components affecting emission control, you should assure yourself that such parts are warranted by their manufacturer to be equivalent to authorized parts in performance and durability. FUJI, however, assumes no liability under this warranty with respect to parts other than authorized parts. The use of non-authorized replacement parts does not invalidate the warranty on other components unless the non-authorized parts cause damage to warranted parts.

H. PARTS COVERED UNDER THE CALIFORNIA EMISSIONS WARRANTY

- (1) Fuel Metering System
 - i) Carburetor and internal parts
 - (ii) Choke System
 - (iii) Fuel filter (annual maintenance item)
- (2) Air Índuction System
 - (i) Air filter element (annual maintenance item)
- (3) Ignition System
 - (i) Spark plug (annual maintenance item)
 - (ii) Ignition Coil
 - (iii) Ignitor Complete (iv) Pulser Coil
- (4) Exhaust Manifold
- (5) Miscellaneous Items Used in Above Systems
 - (i) Fuel hoses, clamps and sealing gaskets

I. MAINTENANCE STATEMENTS

It is your responsibility to have all scheduled inspection and maintenance services performed at the times recommended in the 1995 and later Owner's Manual and to retain proof that inspection and maintenance services are performed at the times when recommended. FUJI will not deny a warranty claim solely be-

cause you have no record of maintenance; however, FUJI may deny a warranty claim if your failure to perform required maintenance resulted in the failure of warranted part. The proof which you maintain should be given to each subsequent owner of the engine. You are responsible for performing the scheduled maintenance described below based on the procedures specified in the 1995 and later Owner's Manual. The scheduled maintenance below is based on the normal engine operating schedule.

PROCEDURE	INTERVAL
a) Check for sealing of fuel cap and proper operation of fuel gauge (at each fueling). Check that fuel cap vent is free of dirt	WEEKLY
b) Check engine for unusual noise, vibration acceleration.	MONTH (20 HOURS)
c) Check engine electrical system for coil/spark plug wire for cracks/loose connections.	3 MONTH (50 HOURS)
d) Check fuel system for leaks at tank cap, lines, filters, pump, carburetor. Check lines for cracks/deterioration.	3 MONTH (50 HOURS)
e) Check air cleaner filter element.	SEMIANNUAL (125 HOURS)
f) Replace engine oil, DO NOT OVERFILL. SAE 10W-30/10W-40 SF,SG,CC Oil	SEMIANNUAL (125-150 HOURS)
g) Clean oil filter in solvent (at oil change). Replace O-Rings if required.	SEMIANNUAL (125-150 HOURS)
h) Replace air cleaner filter element if required.	ANNUAL (250-300 HOURS)
i) Check fuel filter for dirt build up. (Replace as required)	ANNUAL (250-300 HOURS)
j) Check the spark plugs for gap 0.030. (Replace if required)	ANNUAL (250-300 HOURS)
k) Check timing belt tension, signs of wear/damage. Replace only if wom or damaged.	ANNUAL (250-300 HOURS)

Notes:			
and former to the second secon			
			 ···
	· ·		
	W-17-		
			· · · · · · · · · · · · · · · · · · ·
	- A - A - A - A - A - A - A - A - A - A	·	
			 <u>.</u>



a TEXTRON Company

E-Z-GO Division of Textron Inc.

P.O. Box 388 Augusta, Georgia 30903-0388 USA

Inside USA Phone: 1-800-241-5855, FAX: 1-800-448-8124

Outside USA Phone: 010-1-706-798-4311, FAX: 010-1-706-771-4609

Copyrighted Material
This manual may not be reproduced in whole or
in part without the express permission of
E-Z-GO Division of Textron Inc.
Technical Communications Department